



Green Lion

2-in-1 Nail Clipper & Polisher


SKU: GN2N1NCLPWH

Model No: GL-NC2

Table of Contents

Quick View	2
Specifications	2
Usage Method	3
Operation Method	4
Battery Treatment	5
Attention	5
Disposal	7
Warranty	7
Contact Us	7

Quick View

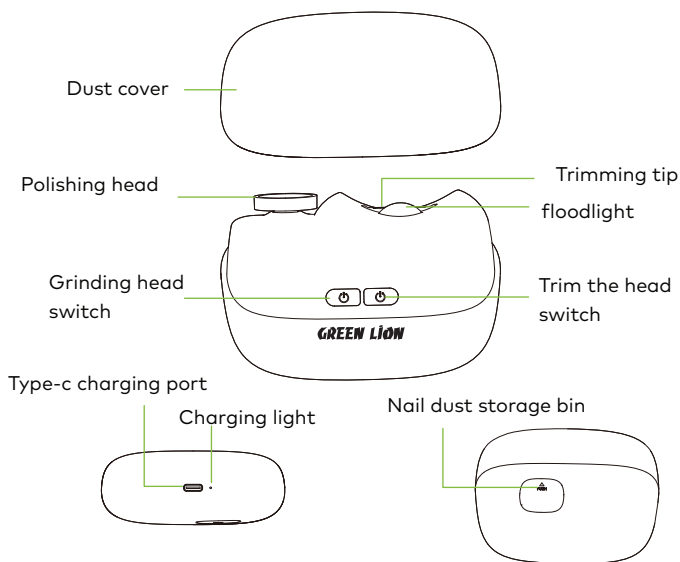

Specifications

Material	ABS + Stainless Steel (ABS + SS)
Battery Capacity	450 mAh
Charging Input	5V – 300 mA
Working Power	2W
Speed Modes	2 (Trim & Polish)
Charging Interface	USB-C
Working Voltage	3.7V
Noise Level	≤48 dB
Product Dimension	88*66*34 mm
Product Weight	200 g

Usage Method


a. Use

1. Open the dust cover, long press the 2S trimming head switch, the trimming head starts to work, and the lamp is turned on.
2. The machine switch defaults to gear 1. To switch to gear 2, click the switch to switch to gear 2, click the switch cutter head again to stop working, and long press 2S to trim the cutter head switch to shut down the cutter head.
3. Long press the switch of 2s grinding head to start the grinding head to work, the default gear 1s, click the switch to switch to 2, click the switch again to stop working, long press the switch of the 2s grinding head to stop working, and the lamp will go out.
4. About the light: either of the two tool heads will be turned on, click the switch to stop the tool head/grinding head to stop working, the light will not be extinguished, need to press the corresponding switch for 2 seconds before the light will be turned off.

b. Steps

1. Hold the front and back ends of the dust cover to open the dust cover, and make sure that the tool head of the device is facing up (the side with the charging port is facing down), and long press the trimming tool head switch for 2 seconds to turn on the device;
2. With the light facing up, place the nail to be trimmed into the opening of the knife tip and push the nail slightly in the direction of the knife tip while moving the nail or device slowly (not too fast) to ensure that the entire nail is rounded.
3. After trimming the nails, press 2S to close the cutting head, and press 2S to turn on the grinding head switch to turn on the polishing head;
4. Place the nail on the polishing head for polishing. After polishing, press 2S polishing switch to turn off the machine.

Operation Method

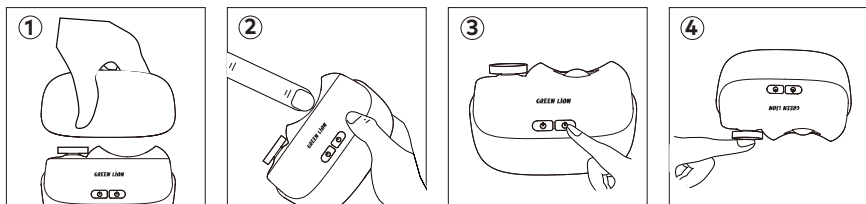

1. Fasten the lid on the front and back ends and remove the lid. Press and hold for 2S to turn on the cutter head.
2. Light up Start trimming nails.
3. Press and hold for 2S to close the cutter head. Press and hold for 2S to open the sanding head.
4. Open and polish your nails. After polishing, press 2S switch to turn off the machine.

Tip

- a. Do not stay in the same part for a long time to avoid excessive pruning of the part.
- b. This product is a grinding operation, and it is normal to produce slight dust nail chips when used.

Cleaning

1. Turn off the device and press down one side of the nail bin cover slightly.
2. Open the cover, dump the nail dust in the nail dust bin, and clean the nail dust bin with a small brush or dry paper towel. (Do not clean the nail dust bin when the machine is turned on) as shown below.

Charging

1. When using the equipment for the first time, please fully charge the equipment before use.
2. During the charging process, the indicator light will be red.
3. The indicator turns green after the full charge.

Battery Treatment

1. When the electric nail clippers reach the end of their service life, the internal battery may need to be removed according to the laws and regulations of the country or region where they are located. If the battery cannot be removed, please return the product to the recycling center designated by the government.
2. Do not disassemble the product unless it is to be discarded, as premature disassembly may damage the product. Follow the basic safety precautions. Disconnect the power supply before removing the battery.
3. Before removing the battery, ensure that the battery is exhausted; if you need to run out of power, you can turn on the work until the automatic shutdown.
4. To properly recycle or dispose of batteries, please ask your local government-designated recycling center if other parts of the electric nail clippers are recycled.
5. Be careful not to short-circuit the positive and negative terminals of the battery, and do not re-energize the product after taking out the battery fatty.

Reminder

1. Be sure to place it properly to avoid children from touching and playing, so as to avoid danger.
2. Do not touch any body parts other than nails with the grinding head or knife head to avoid danger.
3. When the equipment is in continuous operation, do not put anything other than fingernails, such as clothes and accessories, near the grinding head/tool head. Otherwise, the grinding head/tool head may be damaged or the foreign matter may be involved in the grinding head/tool head and cause danger.

Attention

1. Please fully charge the device for the first time to ensure that the internal

battery is charged, and charge it every three months if it is not used for a long time.

2. This product is not suitable for polishing other parts of the body except nails.

3. Do not trim with this product when there are problems such as wounds around the nails.

4. Do not bathe or soak this product with water. Keep away from water sources and fire sources.

5. Keep out of reach of children.

6. If you need to clean the appearance, wipe the surface of the product with a clean cleaning cloth and leave it in a cool place to dry naturally.

7. Avoid water droplets splashing or shower contact with the product, so as not to damage internal components.

8. Do not use this product in excessively high temperature and humid places.

9. If the product is not used for a short period of time (about 3 months), wipe it clean and place it in a dry place with full charge.

10. Do not use diluted, gasoline or alcohol to clean this product, otherwise it may cause component failure, damage or fading. Please use neutral cleaning agent.

11. Do not knock or drop the product. If the product is damaged due to collision or falling, please stop using it.

12. Do not modify, disassemble or repair this product by yourself.



Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.greenlion.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
<https://www.greenlion.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: <https://www.greenlion.net/>

Sales: sales@greenlion.net

Service Support: Support@greenlion.net

Telegram: [@greenlion_global](https://t.me/greenlion_global)

Instagram: [@greenlion_global](https://www.instagram.com/greenlion_global)