


PORODO
LIFESTYLE

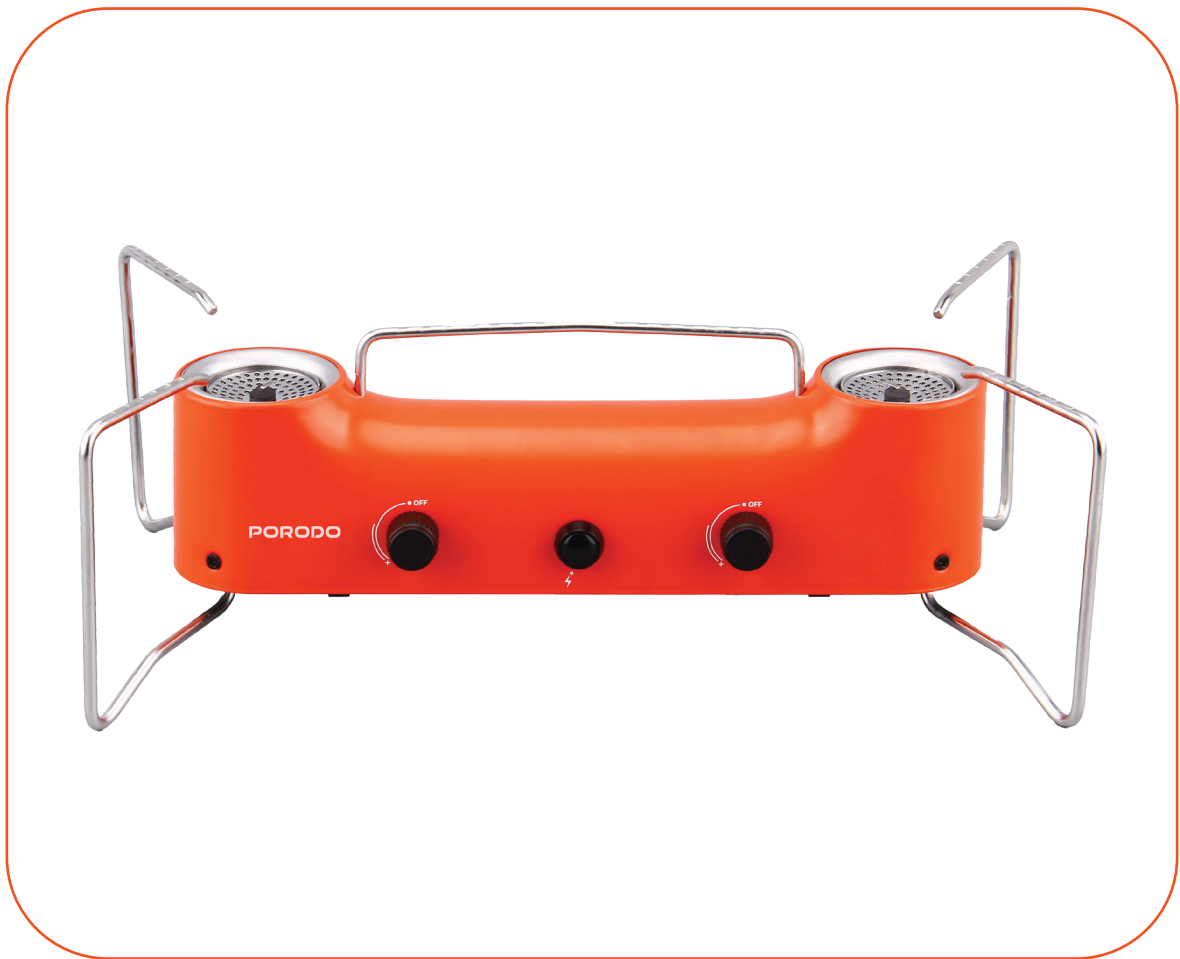

Porodo Lifestyle
DUAL BURNER
CAMPING GAS STOVE

SKU: PDLFSTJY020R

Table of Contents

Product Overview	2
Specifications	2
Safety Instructions	3
Product Design	4
Fitting the Gas Cartridge and Lighting the Stove	4
After Use	6
Maintenance	7
Safety Cautions	7
Cautions for Cartridges	9
Cleaning Instructions	9
Troubleshooting Guide	10
Disposal	11
Warranty	12
Contact Us	12

Product Overview

The Porodo Dual Burner Camping Gas Stove is designed for outdoor enthusiasts, offering a powerful and efficient cooking solution. With independent flame control, it allows precise temperature adjustment for each burner. The stove's instant pulse ignition ensures quick and easy startup, while its low fuel consumption makes it an economical choice for long trips. Additionally, the stable pot support ensures safety and stability while cooking, making this stove a reliable companion for camping, hiking, and other outdoor adventures.


Specifications

Fuel Type	Butane Gas
Rated Output	3.65kW per Burner
Gas Consumption	266g/h per Burner
Ignition System	Pulse Electronic Ignition
Folded Size	84 x 113 x 283mm
Unfolded Size	113 x 185 x 331mm
Product Weight	1.06kg
Model Number	PDLFSTJY02

Safety Instructions

- 1.** Only use in well-ventilated areas. Using this appliance in an enclosed space may cause death.
- 2.** Do not use in caravans, tents, marine craft, cars, mobile homes, or similar locations.
- 3.** Do not store gasoline or other liquids with flammable vapors near this or any other appliance.
- 4.** This stove is equipped for use with butane gas only.
- 5.** Do not attempt to operate this stove at temperatures below freezing (0°C).
- 6.** Ensure the cartridge is empty before changing it (shake to hear the noise made by the liquid).
- 7.** Make sure burners are extinguished before disconnecting the gas cartridge.
- 8.** Check the seals before connecting a new gas cartridge to the appliance.
- 9.** Always change the gas cartridge outside and away from people.
- 10.** Check the general aspect of the appliance and clean it if necessary.
- 11.** Remove any contamination (sand, insects, grass).
- 12.** Ensure the gas cartridge connection/disconnection system is functioning properly.
- 13.** IF YOU SMELL GAS:
 - a.** Do not attempt to light the appliance.
 - b.** Extinguish any open flame.
 - c.** Disconnect from fuel supply.
 - d.** Evacuate the area and call for professional help.



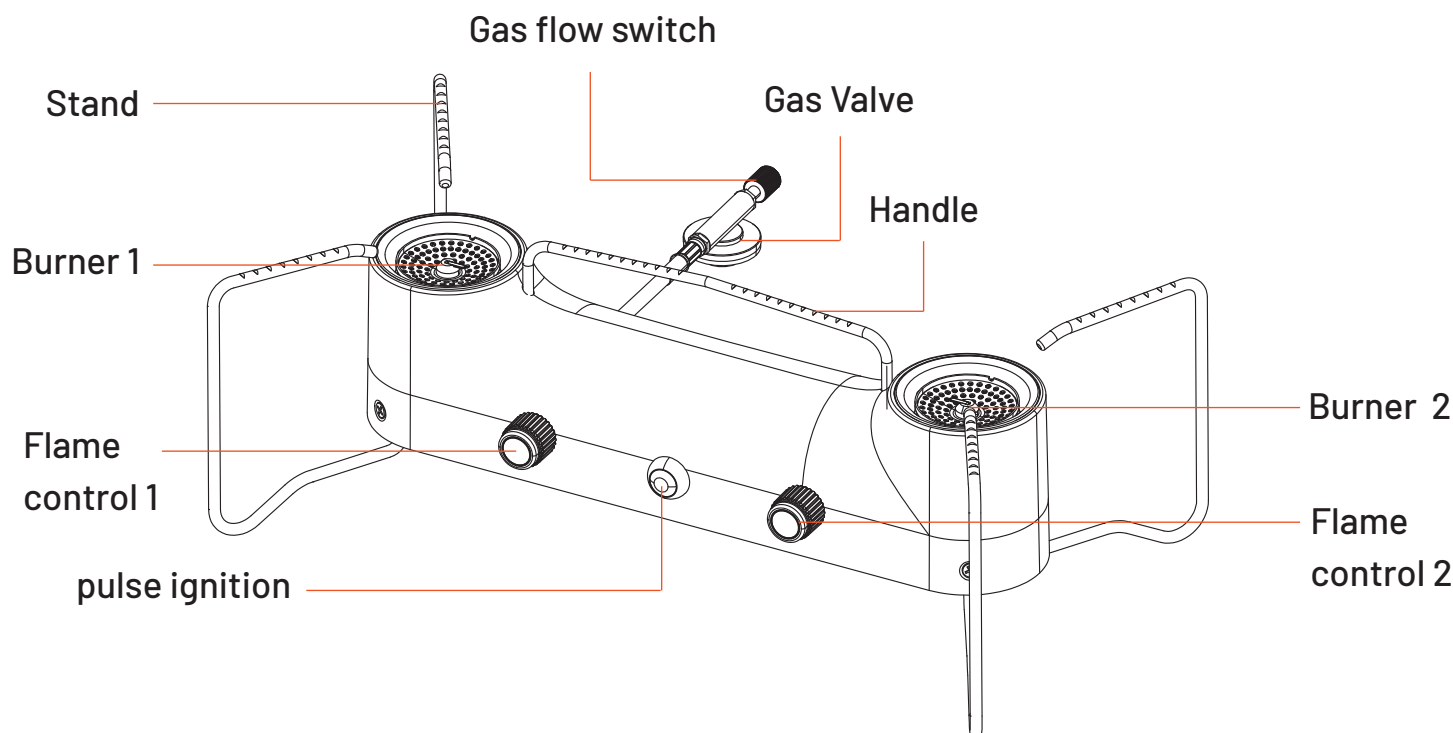

NOTE: This appliance is compatible only with the Maixian HG-230B/230R/450R butane cartridge.

It can also be used with any type 200 cartridge marked "Butane" and complying with EN 417 standards.

Attempting to use other types of gas containers may be hazardous.


Fitting the Gas Cartridge and Lighting the Stove

1. Check the flame control to ensure it is in the "OFF" position.
2. When connecting a gas cartridge to the gas valve, keep it upright and tighten carefully. Make sure it is not too tight, as this could damage the regulator.
 - a. Caution: If you hear a "hiss" noise, the cartridge has not been correctly fitted. If necessary, adjust the cartridge's position.
 - b. The appliance should always be placed on a horizontal surface unless it is specifically designed for other orientations.

3. Remove any transit protection material from the stove, unfold the stand, and place the stove on a stable horizontal surface.
4. Install a #7 battery at the bottom of the stove.
5. Prepare the gas cartridge: Place the gas cartridge and gas valve in the correct position.
6. Turn the cartridge clockwise to securely attach the gas valve to the cartridge.
7. Open the flame control slightly by turning it counterclockwise 1-2 turns until a small amount of gas begins to flow.
8. Ignite the stove: Press the pulse ignition button for several seconds until the stove ignites.
9. Adjust the flame control to achieve the desired flame. The flame should be blue and orange and can be adjusted from low to high.
10. After use, turn the flame control to the "OFF" position and allow the stove to cool before disassembling.



1

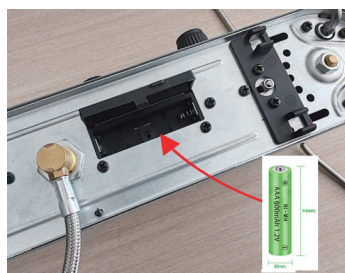

2



3



4



5



6



7



8


After Use

1. Ensure the flame control is closed and the stove has cooled down before folding it.
2. Twist the stove counterclockwise to detach it from the gas cartridge. A small amount of gas may escape when unscrewing the cartridge.
3. Fold the stove's legs, wrap the gas hose around it, and store it in the storage box.

Be cautious, as the gas cartridge could be hot.

Note:

1. The stove body may develop discoloration after use due to its stainless steel material. This is normal and does not affect its function.
2. A hissing sound and slight gas leakage may occur when attaching the gas cartridge. This is normal—just tighten it fully.
3. Replace the cap on the gas cartridge after removing it from the stove. Store it upright in a cool, dry place.
4. Ensure the burner is cool to the touch before packing the stove away.

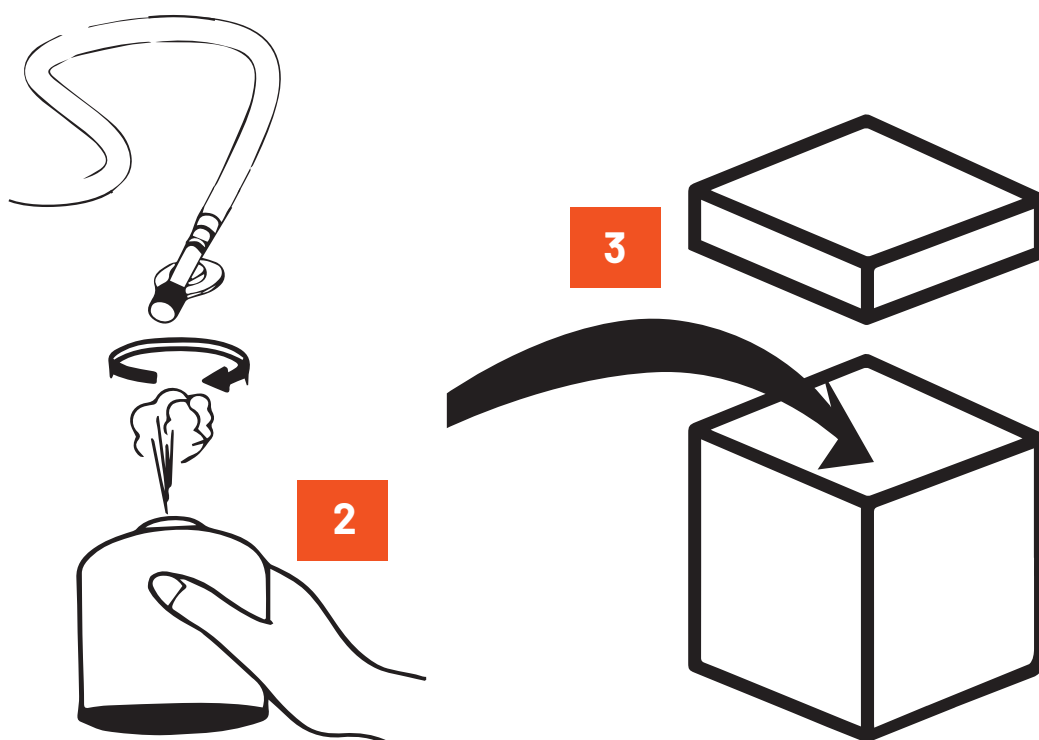

Maintenance

1. Never leave the stove unattended when hot or in use.
 2. Do not modify the appliance.
- CAUTION:** Accessible parts may become very hot.
3. Keep young children away from the appliance at all times.
 4. Keep the stove area clear of combustible materials, gasoline, and other flammable vapors or liquids.
 5. Do not obstruct the flow of ventilation and combustion air around the appliance.
 6. It is recommended to service the appliance yearly. If the injector gets blocked, it should be replaced by an authorized person.
 7. Clean the stove using a stiff brush to remove debris from the burner head.
 8. Use a soft cloth to clean the greasy parts of the stove with soap and water.
 9. Keep the igniter and burner head gap free from debris to ensure easy lighting.
 10. Clean the stove frequently to avoid grease buildup and perform maintenance as necessary.

Safety Cautions

1. This appliance is intended for outdoor use only, not for household or commercial use (Fig.1-2).
2. Ensure proper ventilation if used indoors. Inadequate airflow may result in injury or death (Fig.1-2).
3. Do not store butane near high heat, open flames, direct sunlight, or locations exceeding 40°C (Fig.1-2).
4. Maintain a minimum clearance from combustible walls, tables, or floor surfaces (Fig.3-4).
5. Do not use this appliance under a shelf or in locations where objects may fall (Fig.3-4).

6. Do not use this appliance for drying clothes (Fig.5).
7. Keep the appliance away from fire or items that are easily flammable (Fig.6).
8. The pot should not cover the cartridge cover during use (Fig.7). Do not use the appliance to cook food by placing a large pot between two appliances (Fig.8).
9. Never use this appliance to catch fire (Fig.9).
10. Do not use the appliance by placing trays made of asbestos or ceramic on it (Fig.9).
11. Never heat an empty pan (Fig.10).
12. The surface temperature is very high. Avoid touching the appliance with hands while in use (Fig.10).
13. Remove the gas cartridge before checking the appliance (Fig.11).
14. Do not store the gas cartridge in direct sunlight (Fig.11).
15. Never use the appliance on an unstable surface or when it is unstable itself (Fig.12).

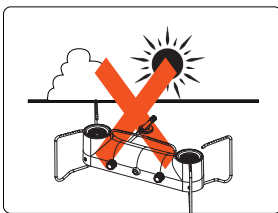


Fig.1

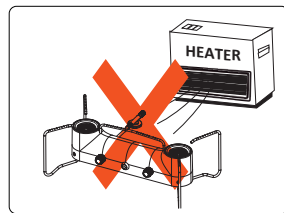


Fig.2

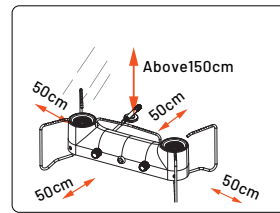


Fig.3

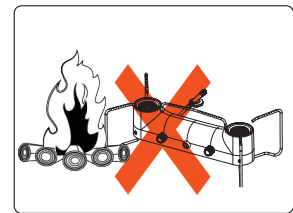


Fig.4

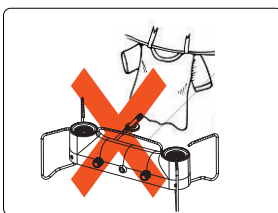


Fig.5

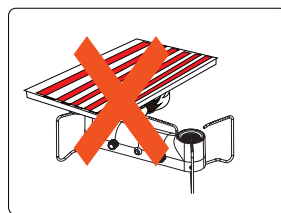


Fig.6

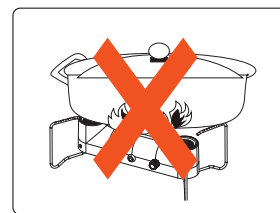


Fig.7

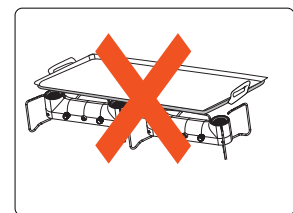


Fig.8

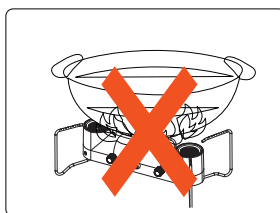


Fig.9

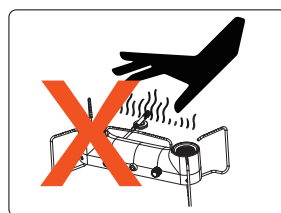


Fig.10



Fig.11

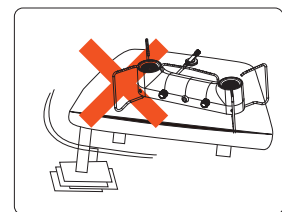


Fig.12

Cautions for Cartridges

1. Always read the caution printed on the gas cartridge before use.
2. Never store the butane gas cartridge near a heat source, open flame, or any source of ignition.
3. Ensure the cartridge is empty before removal.
4. Keep the cartridge away from children when not in use.
5. Never refill the gas cartridge.
6. Do not use appliances when the ambient temperature exceeds 35°C.
7. Do not use appliances when the cartridge enclosure cover is in an open position.

Important Note: If the pressure-sensitive safety device is triggered, it indicates a critical pressure level within the cartridge. The appliance should not be used until it has completely cooled down. Do not bypass the pressure-sensitive safety device.

Cleaning Instructions

1. Remove the Cartridge

Always remove the cartridge before cleaning the appliance.

2. Clean with a Damp Cloth

Use a damp dishcloth with a mild cleanser to wipe down the appliance. Then, use a dry cloth to dry the surface thoroughly.

3. Clear Blockages Around the Burner

If any holes around the burner are blocked, use a toothpick to clear away any dirt or debris.

4. Clean the Gas Container

Use a brush to clean the interior of the gas container.

Troubleshooting Guide

1. General Cleaning and Maintenance:

- a.** Cooling: Always ensure the appliance has fully cooled down before cleaning.
- b.** Routine Cleaning: Clean the stove after every use and perform maintenance every 6 months.

2. Visual Check: Before storing, inspect the appliance for any contamination (e.g., sand, insects, grass). Clean if necessary.

3. Cleaning Instructions:

- a.** Main Unit: Clean the main body of the stove only after the canister is removed and the unit is cooled. Use a damp cloth and mild detergent if necessary.
- b.** Pan Support & Drip Pan: Clean using warm water and mild detergent as needed.
- c.** Dirt & Debris: Use a metal brush to remove dirt that may clog the burner and affect flame performance.
- d.** Ignition Plug: If the ignition does not work, clean the ignition plug with a dry cloth.

4. Storage & Use:

- a.** Storage: When not in use, ensure the lever is in the unlock position. Store in a cool, dry, well-ventilated area, away from children and direct sunlight.
- b.** Damaged "O" Ring: If the "O" ring is damaged or worn, it must be replaced by a qualified technician. Attempting to replace it yourself can cause damage and pose a safety risk.

5. Repairs:

- a.** Authorized Repairs: If the appliance needs repairs, send it to an authorized repair service. Transport it in its original carry case, without the gas cartridge, to prevent damage.
- b.** Shipping Instructions: The appliance should be packed securely to prevent damage during shipping. Include this manual with the appliance when sending it for repair.

	ISSUE									
		Cartridge would not install	No gas supplied in ON position	Smell of gas in OFF position	Low flame	Uneven flame	No ignition faulty ignition	Extinction in operation		
Possible Cause	Flame control is not turned to OFF position	●							Turn ignition control to OFF and reset cartridge	Possible Solution
	Flame control malfunction		●	●	●		●		Replace product	
	Cartridge incorrectly installed	●	●	●			●		Fit cartridge guide into cartridge slot	
	Clogged burner holes				●	●	●		Use metal brush to clean it	
	Bent or rusty piezo ignition						●		Clean the piezo electronic	
	No gas		●		●	●	●	●	Replace fuel cartridge	

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**