



Porodo Soundtec

RUSH

Euphoric Sound Portable Speaker

SKU: PDSTS244ABK

Table of Contents

Product Overview	2
Specifications	2
Product Features	3
Package Contents	3
Schematic View	3
Power On/Off	4
Bluetooth Pairing	4
Multiple Link Function	5
Playing from USB Storage	6
Power Bank Function	6
AUX-IN	6
Equalizer Function	7
RGB Light	7
Activating Voice Assistant	7
Hands-Free Call	7
How to Reset	7
Charging Instructions	8
Precautions	8
Disposal	8
Warranty	9
Contact Us	9

Product Overview

The Soundtec Rush Euphoric Sound Portable Speaker by Porodo delivers an immersive audio experience with powerful bass and vibrant RGB lighting effects, ideal for enhancing your music and creating a dynamic atmosphere. Designed for portability, it features Bluetooth 5.3 connectivity, allowing you to easily stream music from your devices. With its voice assistant integration, you can control the speaker hands-free, while multi-function controls provide convenience for adjusting volume, skipping tracks, and more. The speaker boasts up to 8 hours of playtime and comes with a convenient carry strap, making it perfect for high-mobility use. Whether you're hosting a party or enjoying music on your own, the Soundtec Rush ensures deep bass and euphoric sound in any setting.

Specifications

Model	PDSTS244A
Input	DC 5V/2A
Rated Power	60W (120W Peak)
Battery Capacity	5400mAh
Charging Port	Type-C
Bluetooth Version	5.3
Transmission Distance	15m
Frequency Response	80Hz-20kHz
Water Resistance Level	IPX6
Working Time	2.5H (100%Volume), 8H (50%Volume)

Recharge Time	3H
USB Flash Support	Up to 128GB (Not Included)
Product Size	157 x 180 x 377mm
Product Weight	2.8kg

Product Features

- a. 2.2CH Superb Portable Outdoor Boombox
- b. Amazing sound all around with punchy bass beats
- c. Excellent build quality with a strong, durable handle
- d. Three modes of RGB light activity, perfect for creating a disco party atmosphere
- e. IPX6 water resistance, ideal for beach, poolside, and boating use
- f. Google Assistant and Siri voice control optimized for hands-free operation
- g. Multiple link function, allowing unlimited device connections for enhanced sound
- h. USB port compliance with the power bank and USB disk playing capabilities
- j. Dedicated hands-free microphone for easy call management
- k. Line-in function, compatible with PC, MIDI, TV, and other audio devices



Package Contents

- Portable Bluetooth Speaker x1
- Type-C Charging Cable x1
- Audio Cable x1

Schematic View

- 1. Backward/Volume Down
- 2. Forward/Volume Up
- 3. RGB Light

- 4. Built-in Microphone Hole
- 5. Power On/Off
- 6. Multiple Link Button
- 7. Play/Pause
- 8. Mode Button (Switch Bluetooth, USB, and AUX)
- 9. AUX Socket
- 10. Reset jack
- 11. Type-C Input
- 12. USB Output

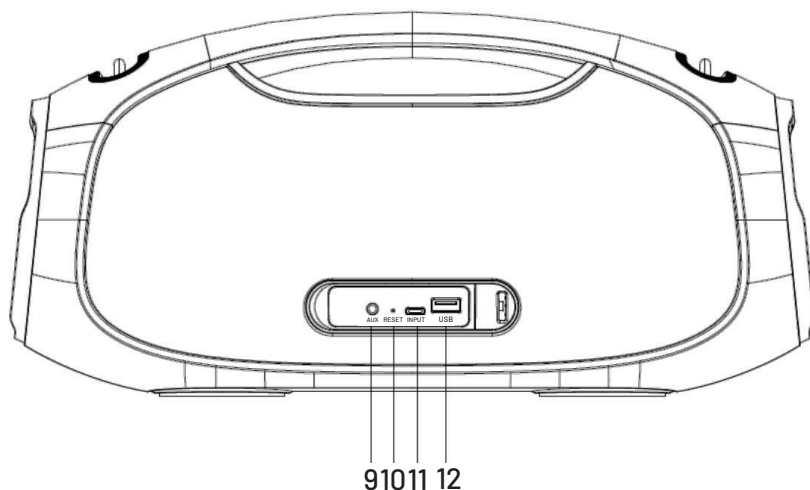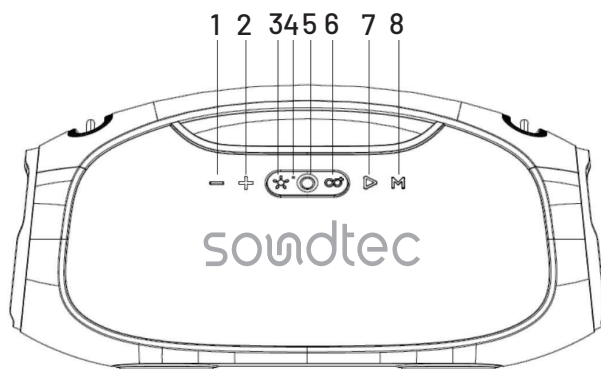

Power On/Off

Press and hold the power button to turn the speaker on and off.

Bluetooth Pairing

1. Press the power button to activate Bluetooth mode on the speaker automatically.

2. Enable Bluetooth on your mobile phone and search for the device named "RUSH". Connect to it.
3. Play music from your phone and enjoy.
4. To switch songs, long-press the Forward or Backward button.
5. To adjust the volume, short-press the Forward or Backward button.
6. To play/pause music, short-press the Play/Pause button.
7. To disconnect the Bluetooth connection, long-press the "Multiple Link" button.

Note: If your smartphone disconnects from the speaker due to a shutdown or mode switch, the speaker will automatically reconnect when it is powered on again or switched back to Bluetooth mode.

Multiple Link Function

Prepare all the speakers (there is no number limit, but they need to have the same Bluetooth pairing name) you need to connect by multiple link, choose 1pc as the master speaker and follow the steps below.

Steps	Operation/Status		Power indicator (white LED)		Multiple Link indicator (white LED)	
1	Master Speaker	To connect to external devices (smartphone, USB player, AUX player): a. Turn on the speaker and connect to the external device. b. Short-press the "Multiple Link" button to prepare the speaker for a Multiple Link connection with slave speakers.	Master Speaker	Lighting constantly	Master Speaker	Lighting constantly
2	Slave Speakers (Infinite Quantity)	To search for the master speaker in a Bluetooth disconnected state: a. Turn on the speaker and ensure it is in Bluetooth disconnected mode. b. Short-press the "Multiple Link" button to search for the master speaker. The speaker will automatically start connecting via Multiple Link.	Master Speaker	Blink slowly	Slave Speaker	Lighting constantly if slave speaker is connected successfully.
			Master Speaker	Blink slowly	Slave Speaker	Light is off if the slave speaker fails to connect in one minute.

3	Master Speaker	To exit the Multiple Link state: Short-press the "Multiple Link" button to exit from the Multiple Link state.	Master Speaker	Blink slowly (if it is still connected to your smartphone, then the indicator would stay constantly lit.)	Master Speaker	Light off
			Slave Speaker	Blink slowly	Slave Speaker	Blink slowly (searching status), then the light goes off if it fails to connect to the master speaker in one minute.
4	Master Speaker	To exit the Multiple Link state: Short-press the "Multiple Link" button again to exit the Multiple Link state.	Master Speaker	Lighting constantly	Master Speaker	Lighting constantly
			Slave Speaker	Blink slowly	Slave Speaker	Light off

Playing from USB Storage

1. Switch the power button to "ON".
 2. Insert the USB flash drive into the USB socket. The speaker will automatically begin playing the stored music.
 3. Long-press the Forward or Backward button to select your desired song, and short-press to adjust the volume.
 4. Short-press the Play/Pause button to play or pause the music.
- Note:** In any playing mode, when you insert a USB disk into the speaker, it will automatically switch to play music from the USB disk.

Power bank Function

1. Turn on the speaker
2. Connect another device to the 5V/1A port via a charging cable.

AUX-IN

1. For other compatible music devices, use the supplied audio line cable to connect the device's "Line Out" to the "Aux In" port on this speaker. Then, enjoy the music.

2. Under any playing mode, when you connect the audio cable, the speaker will automatically switch to AUX mode.
3. When using an external device, all functions can be controlled by the external device.

Equalizer Function

This unit offers 2 kinds of sound effects. Press and hold the Mode button to change EQ modes.

RGB Light

The RGB light is on when the speaker is powered on. The user can press the RGB light button to turn the three different light modes and turn it off.

Activating Voice Assistant

1. Make Bluetooth connection with your mobile phone.
2. Press and hold Play/Pause button to activate voice assistant.

Hands-Free Call

1. When the speaker is connected via Bluetooth, and there is an incoming call, short-press the Play/Pause button to accept the call or long-press it to reject the call.
2. During the call, long-press the Play/Pause button to switch to the phone's speaker.
3. Short-press the Play/Pause button or use your mobile phone to end the call.

How to Reset

If the speaker does not turn off or respond, short-press the Reset Jack with a small round pin to reset the speaker.

NOTE: The default volume is set at 50% of the maximum volume, and play time may vary depending on the volume level and music style.

Charging Instructions

1. When the battery voltage is low, the speaker will emit a prompt sound, and the Red LED indicator will blink. Please Recharge In Time.
2. The charger is not included in the package. Please charge the speaker using a rated 5V/2A charger or via a PC. A fast charger (rated 9V/2A) is also supported.
3. After inserting the charging cable and starting charging, the Red LED indicator will remain on without blinking.
4. Charging time should be 4-6 hours. Once fully charged, the red Power LED indicator will switch off.
5. To protect the battery, do not use the speaker while it is charging.

Precautions

1. Store and use this product in a normal temperature environment.
2. Do not expose the product to rain or moisture.
3. Do not disassemble, repair, or modify this product without proper authorization.
4. When cleaning the product, use a soft cloth and a small amount of water if necessary. Do not use any chemicals for cleaning.
5. To extend the product's life and protect your hearing, avoid listening to music at maximum volume for prolonged periods.
6. The product contains a built-in lithium battery. To avoid danger, do not discard the product or dispose of it in a fire.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://www.porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **<https://www.porodo.net/>**

Service Support: **support@porodo.net**

Instagram: **porodo**