



**Green Lion**

**GP Ultra 4  
Coming Console**

 
 
 
 
 
SKU: GNGPU4CONSBK

Model No: GL-GC07

## Table of Contents

Quick View	2
Specifications	3
Joystick Light Settings	4
In-Game Shortcuts (PSP, MDB)	4
Child Unlock Mode	4
PSP Game Button Instructions	4
Charging Instructions	4
Switch Simulator Core	5
Global, Individual Simulator and Individual Game Settings	5
Change the Theme	6
Add a Game to Favorites List	6
Adjust Screen Brightness	6
Switch Language	7
Set Side B in FDS Game	7
Add Games	7
Disposal	8
Warranty	8
Contact Us	8

## Quick View

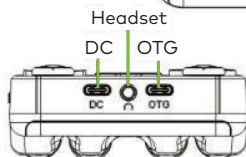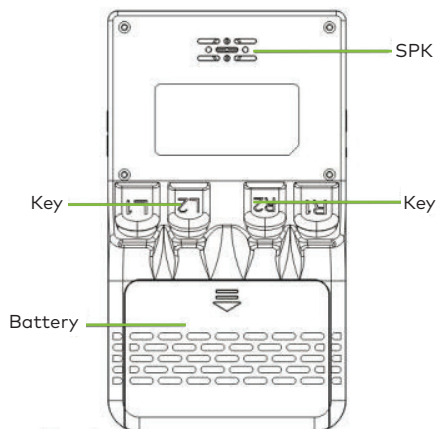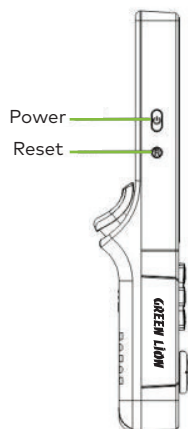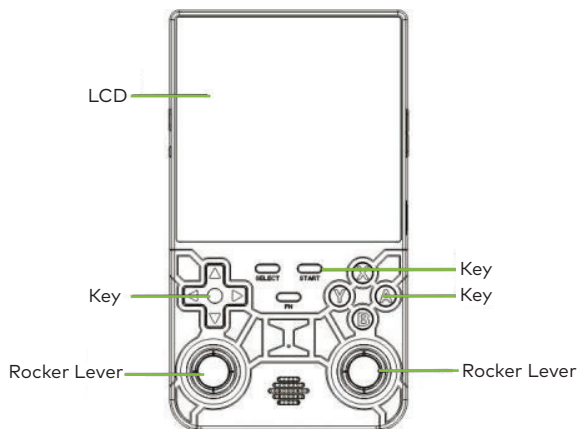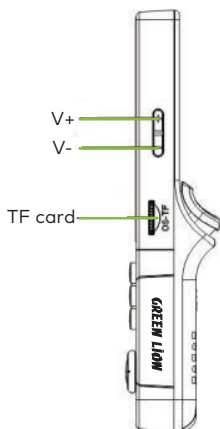

## Specifications

Material	ABS
Operating System	Linux
Screen	4" IPS HD (720 x 720)
RAM / ROM	1GB RAM / 8GB eMMC
CPU	Cortex-A1.5 ,35GHz
GPU	Mali-G31 MP2
Frequency	1.5GHz
Storage	64GB TF Card (Expandable up to 256GB)
Battery Capacity	3000mAh
Wi-Fi	2.4GHz
Voltage Input	5V / 2A
Charging Port	Type-C
Charging Time	1 Hour
Working Time	5-7 Hours
Product Weight	330g
Product Dimensions	16.8*10.5*4.7 cm

## Joystick Light Settings

Press the R1 key to switch the primary color of LED lamp.

First system boot:

Hold down SELECT + L2 + R2 keys, then press A to confirm.

## In-Game Shortcuts (PSP, MDB)

Load the game progress: SELECT + R1

Save the game progress: SELECT + L1

Display the PSP: SELECT + START

Pause the game: SELECT + A

Exit the game: SELECT + B

## Child Unlock Mode

Press START, select UNLOCK USER INTERFACE MODE, press A, and press AAAA to unlock.

## PSP Game Button Instructions

Game start: SELECT + B

Load the game progress: R8

Save the game progress: L8

## Charging Instructions

When loading the main engine is on, please change in time. The charging cable is connected to the D interface for charging. When fully charged, the light slightly glows off. If the charge is not sufficient, the light will remain fully lit. Do not press the start button for the charging state. The charger must not exceed 5V.

## Switch Simulator Core

If the game cannot run, the main reason is that the simulator core does not match. Changing the game can be solved by changing the settings of the game, but you must change the core in the game list and press Advanced and the A key, select the second to last item "Simulator" to change. If you click and it cannot be run on the game, it is likely that there is a problem with the engine. Please give feedback to let them correct it!

### **Other notes:**

(1) Open(2) ,2 give priority to the FBAAIpha2012 core, followed by the FSAHCore.

(2) FBNeo: Give priority to the FBNeo core, followed by FBAAIpha2012 and other FBA cores.

(3) MAME: Give priority to the FBNeo core, followed by MAME2010, and then other cores.

(4) GBA: IMGBA supports key combinations, and GPSP supports game modifications.

## Switch Global, Individual Simulator and Individual Game Settings Simulator Core

EE has three ways to set up games:

The first is global settings: set in the "Game Settings" section of the ES menu.

The second is simulator settings: "Game Settings-PER SYSTEM ADVANCED CONFIGURATION" corresponds to different models.

The third is individual game settings: Press and hold the A button on the game name, and set in the "Advanced Game Options" that appears. Pay attention to the priority:

individual game settings > simulator settings > global settings.

## **Change the Theme**

Press STAET to pop up the selection menu, select Game Settings, press A to enter the settings pull-down to select the game screen ratio, and select the appropriate screen ratio.

X/Y: Select based on the screen resolution, for example, the resolution is 720x720 which happens to be a 10/10 ratio. If the "Game Display Ratio" is set to 10/10, all games will basically display full screen (some games themselves have black edges, which cannot be fully displayed).

CORE PROVDEO: The default resolution of the emulator core, which corresponds to the default resolution of the game model. This setting can ensure that the game screen is completely displayed according to the original scale without deformation. For example, if the arcade vertical shooting game is displayed horizontally, it will be stretched to full screen in X/Y mode, causing severe deformation of the screen. However, using CORE PROVDEO can ensure that the original scale remains unchanged. There are also GB and GBC games, which can severely deform if you use X/Y full screen.

## **Add a Game to Favorites List**

Select the game you want to collect in the game list, press and hold the A button, a menu will pop up, select Add to Favorites, press the A button to confirm, and the selected game will be added to the favorites list.

## **Adjust Screen Brightness**

Press the START key to pop up the selection menu, select System Settings, press the A key to enter the System Settings menu, select Brightness, the left key of the cross key is to reduce the brightness, and the right key of the cross key is to increase the brightness.

## **Switch Language**

Press START to pop up the selection menu, select System Settings, Language, press A to enter the language selection, select the language that suits you, press A to confirm. Changing the language requires a restart, after selecting, return to the previous menu, enter the exit option, and select RESTART ENULATION STATION.

## **Set Side B in FDS Game**

Press START to pop up the selection menu, select System Settings, Language, press A to enter the language selection, select the language that suits you, press A to confirm. Changing the language requires a restart, after selecting, return to the previous menu, enter the exit option, and select RESTART ENULATION STATION.

## **Add Games**

Insert the TF card into the computer, enter the disk named EEROMS, put the downloaded game into the corresponding simulator folder, put the game image into the media/screenshot folder, and then find the file named game list.xml. You can choose to open it with Notepad, simulate the existing game information, add the newly added game to the list, and then save it.

Eject the TF card from the computer, insert it into the machine, start it, and the newly added game will appear. If your computer does not show the EEROMS disk, select This Computer on the desktop, right-click, select Manage, Disk Management, scroll down to This Disk, select it, right-click, and assign it a drive letter.



## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

## Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.greenlion.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
<https://www.greenlion.net/warranty>

## Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: <https://www.greenlion.net/>

Sales: [sales@greenlion.net](mailto:sales@greenlion.net)

Service Support: [Support@greenlion.net](mailto:Support@greenlion.net)

Telegram: [@greenlion\\_global](https://www.instagram.com/greenlion_global)

Instagram: [@greenlion\\_global](https://www.instagram.com/greenlion_global)