

PORODO



Porodo

8-IN-1

Rechargeable Electric Nail Drill

SKU: PDLFSTA0L12WH

Table of Contents

Product Overview	2
Specifications	2
Product Features	3
Product Design	4
Package Contents	5
Drill Bits Description	6
Charging Instructions	7
Operation Instructions	7
Cleaning and Maintenance	8
Safety Precautions	8
Frequently Asked Questions	9
Disposal	10
Warranty	11
Contact Us	11

Product Overview

The Porodo 8-in-1 Rechargeable Electric Nail Drill is a versatile tool designed for both manicure and pedicure, offering a professional-quality experience at home. It features 10 adjustable speed levels, allowing for precise control with a motor speed of 4500 RPM to effectively handle various nail care tasks. This electric nail drill includes a built-in LED light for enhanced visibility during use and comes with multiple attachments to remove calluses and dead skin, ensuring smooth and soft feet and hands. The tool's forward and reverse rotation function adds flexibility, making it ideal for both left and right-handed users. Whether you're looking to shape nails or treat your skin, this portable device provides all the essential features for a salon-like experience.

Specifications

Input	5V/1A
Battery Capacity	2000mAh
Rated Power	3W
Working Time	3h
Recharging Time	3-4h
Material	ABS
Motor Speed	2500-4500rpm
Noise Level	<70 dB

Charging Interface	USB-C
Product Weight	202g
Product Size	36.5 x 36.5 x 157mm
Model Number	PDLFSTA0L12

Product Features

- 1. Ten Adjustable Speed Levels:** This feature provides customizable control over the nail drill's power, allowing you to adjust the speed according to your specific needs, whether you're working on delicate nails or removing tougher calluses.
- 2. High Motor Speed:** With a powerful motor running at 4500 revolutions per minute (RPM), this nail drill ensures fast and efficient performance, making it ideal for trimming nails, buffing, and smoothing skin. The speed also helps reduce time spent on each session, giving you professional results in a fraction of the time.
- 3. Forward and Reverse Rotation:** The nail drill offers both forward and reverse rotation, providing flexibility for all users. This feature is especially useful when working with both hands or when performing different nail care techniques. It ensures you can easily switch directions depending on your comfort and the task at hand.
- 4. Built-in LED Light:** The integrated LED light illuminates your nails and skin during use, ensuring precision and better visibility. It's particularly helpful when working in low-light environments or focusing on intricate details of your nails.
- 5. Interchangeable Attachments:** The nail drill comes with 8 various attachments, each designed for different functions such as filing, buffing,

shaping, and exfoliating. This versatility makes the tool suitable for both manicures and pedicures, ensuring it can handle a wide range of nail and skin care tasks.

 
6. Rechargeable Design: The rechargeable battery allows for cord-free operation, giving you greater flexibility and ease of use. It's perfect for on-the-go use or when you want to avoid dealing with tangled wires.

7. Removes Calluses and Dead Skin: Equipped with the right attachments, this nail drill helps you effectively remove stubborn calluses and dead skin, leaving your feet and hands feeling smooth and rejuvenated.


8. Suitable for Left and Right-Handed Users: The forward and reverse rotation settings, combined with its ergonomic design, ensure that both left and right-handed individuals can comfortably use the nail drill. This feature enhances the overall user experience, making it convenient for everyone.

Safety Precautions

- 1. Drill Bit**
- 2. LED Light**
- 3. Display Screen**
- 4. Clockwise/Anticlockwise**
- 5. Speed**
- 6. Battery Display**
- 7. Speed UP Button**
- 8. Speed Down Button**
- 9. L/R Button**
- 10. Power Button**
- 11. Charging Port**

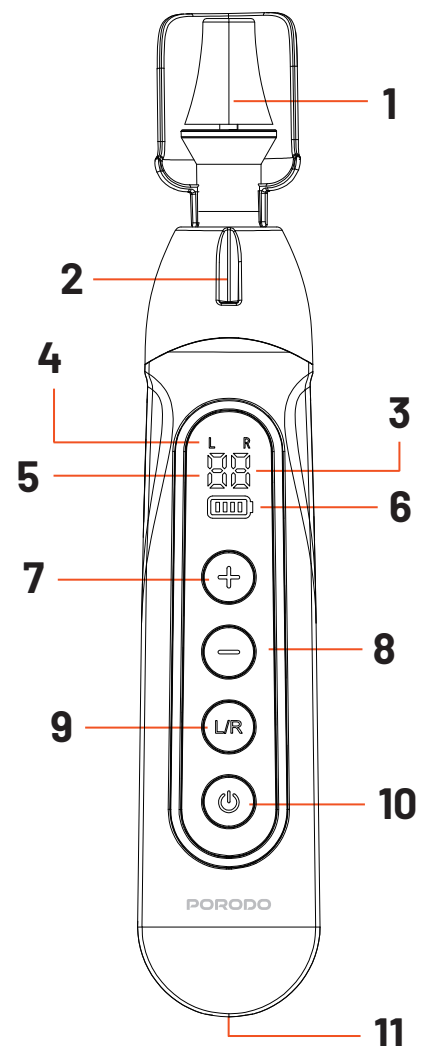


Package Contents

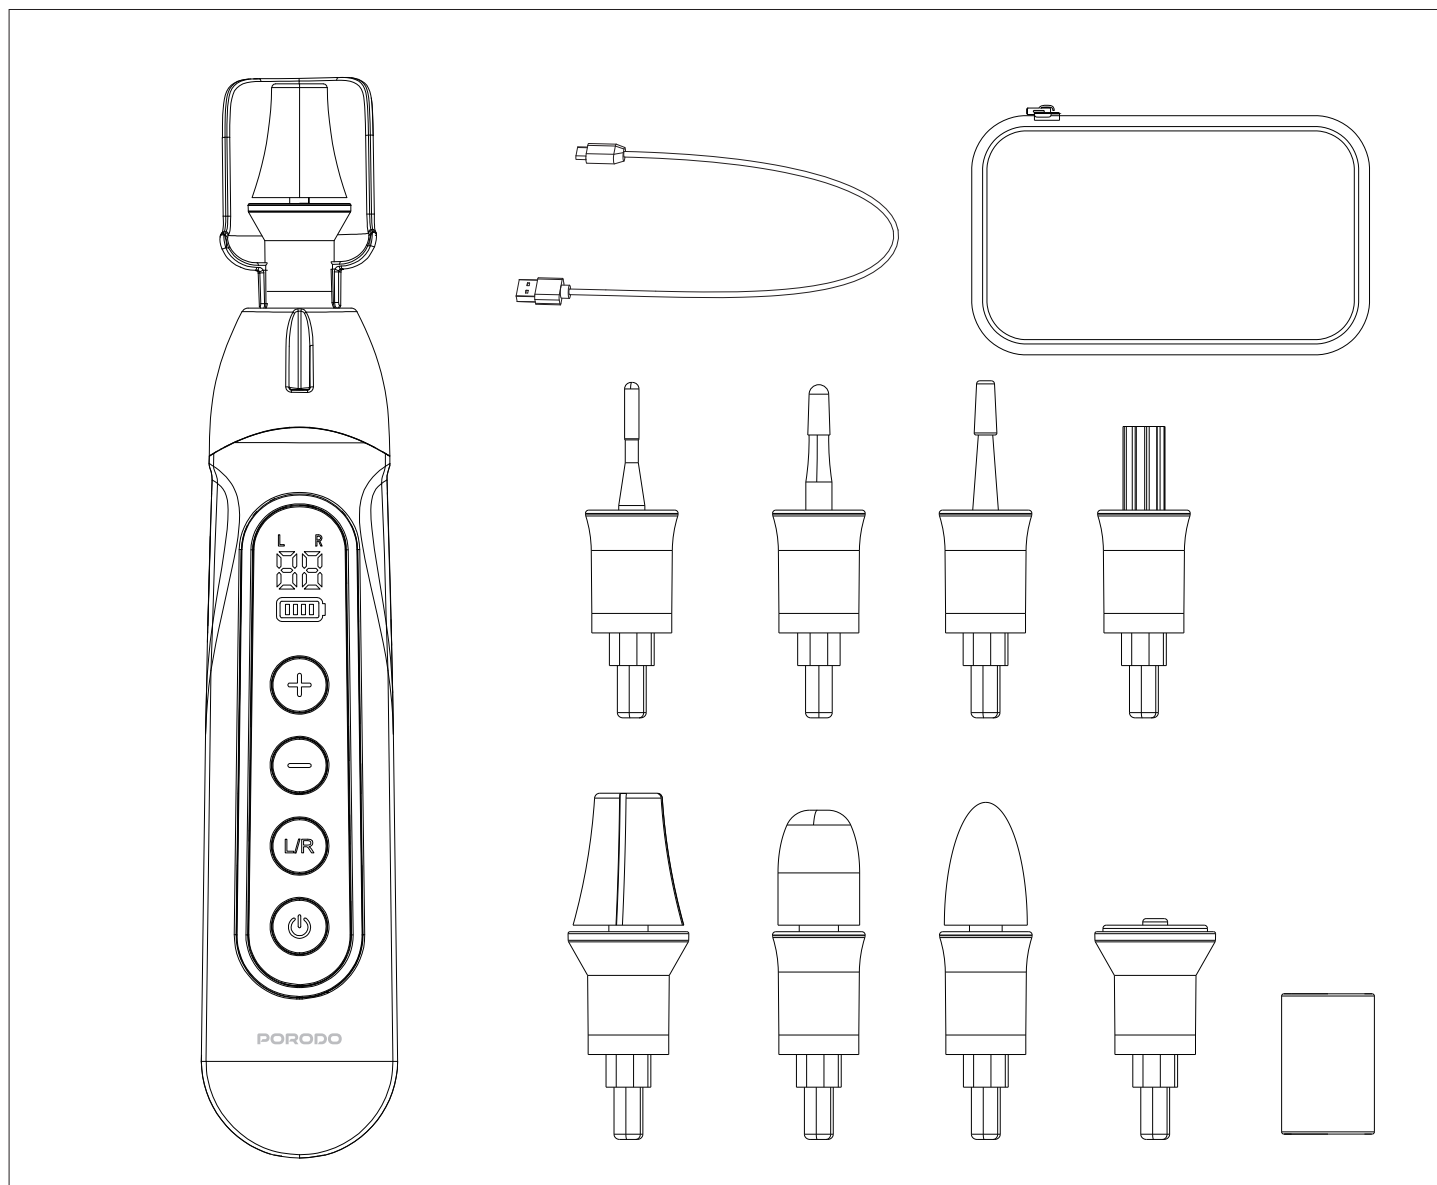 


- 1.** Manicure and pedicure device
- 2.** High-quality nail drill bits x 8
- 3.** Clear dust shield

- 4.** Type-C charging cable
- 5.** Storage case
- 6.** Standing band

 
Drill Bits Description

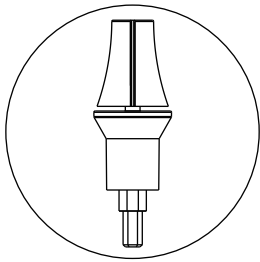

 
Sapphire Callus Sander: For removing callus and dead skin

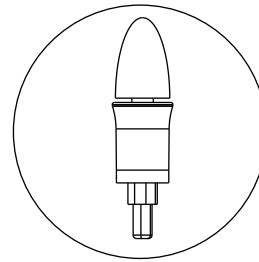

 
Sapphire cone bit: For thin nails, removing calluses and dead skin, trim and shape nails

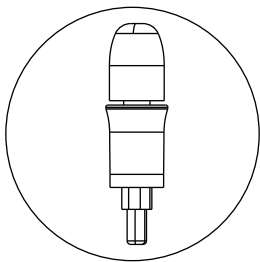

 
Felted Wool Bit: For polishing and cleaning debris on nail surfaces

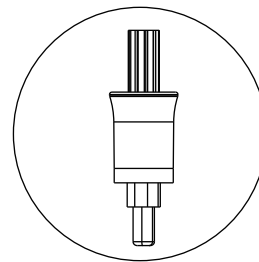

 
Mandrel: For using with sand bands to polish and remove nails and dead skins

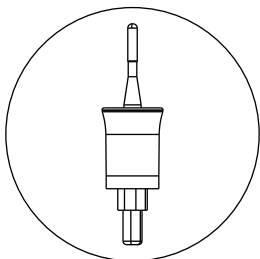

 
Needle Bit: For nail carving and nail corner filing

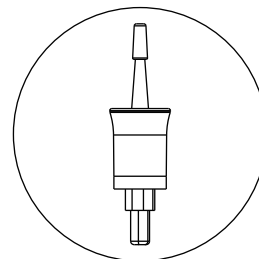

 Long Cone Bit: To polish nails sidewalls and cuticles

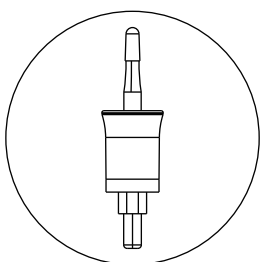

 Cylindrical Milling Cutter: For removing cuticles, grinding, and smoothing fingernails and toenails.

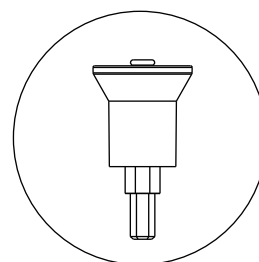


Coarse Disc Bit: For polishing and exfoliating the edges after trimming nails.

Charging Instructions

1. **Charging the Device:** Connect the Type-C cable to both the device and an adapter (not included in the package). During charging, the battery indicator will flash. Once fully charged, the indicator will display steady full bars.
2. **Charging Time:** The device takes approximately 3 hours to fully charge and will work continuously for about 3 hours once fully charged.

 Operation Instructions

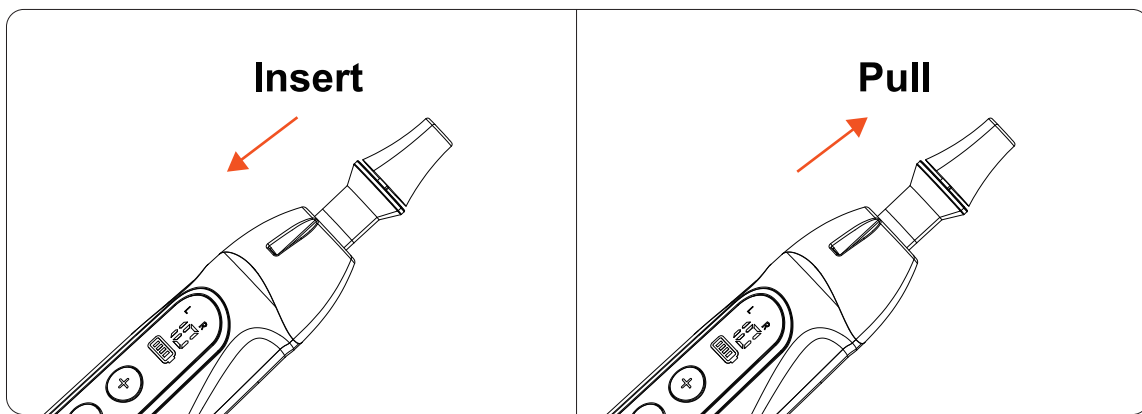

1. Drill Bit Installation

Hold the handpiece in one hand and the drill bit in the other hand. Insert or pull out the drill bit firmly.

2. Choose the appropriate drill bit based on your needs and attach it to the connecting shaft at the tip of the handpiece until it is securely in place.
3. Press the Power button briefly to start the machine. Press the "L/R" button to switch the grinding head forward or backward.
4. Use the "+/-" button to adjust the speed.
5. To stop the device, press the Power button again.
6. **Rotor control:** When the drill bit comes into contact with your hands, the device will suspend operation and resume once the hand is removed.
7. When the machine is powered on, the LED light will automatically illuminate.

When the device is turned off, the LED light will automatically shut off. You can also manually turn the LED light on or off by pressing the Power button for 2 seconds.

Cleaning and Maintenance

1. Power Off the Device

Before cleaning the device, ensure it is completely powered off to avoid any electrical hazards or damage during the process.

2. Avoid Immersion in Water

Do not submerge the device in water. If the device includes detachable accessories, these parts should be cleaned separately, following the specific care instructions for each item.

3. Use a Clean Cloth

For cleaning the device surfaces, use a soft, lint-free cloth. If necessary, slightly dampen the cloth with water (ensure it's not soaking wet) to wipe the device clean. Avoid abrasive materials to prevent scratches.

4. Avoid Harsh Chemicals

Refrain from using any lubricants, cleaners, polishes, or air fresheners on the device. These substances may damage the device's exterior or internal components. Stick to using a mild, damp cloth for safe cleaning.

Safety Precautions

1. Do not store the product in a humid or high-temperature environment.

2. If the product is not in use for an extended period, ensure it is stored after it is fully charged.

3. Do not dispose of the product with regular household waste.

4. Please dispose of the product at an authorized recycling center in compliance with local laws and regulations.

- 5.** This product is not suitable for use by children, diabetics, or individuals with skin inflammation on their fingers or toes.
- 6.** Not recommended for individuals with allergies or those with physical, sensory, or mental disabilities.
- 7.** Consult a doctor if you have any medical concerns before use.
- 8.** If you feel discomfort or any adverse effects during use, immediately stop using the product and seek medical advice.
- 9.** This product is designed exclusively for nail drilling. Do not use it for any other purpose to avoid damage or injury.
- 10.** Do not attempt to disassemble, repair, or modify the product yourself.
- 11.** Unauthorized repairs or modifications may compromise the product's functionality and safety.
- 12.** Regularly inspect the product for damage or wear.
- 13.** If any part is damaged, stop using the product and replace it immediately.
- 14.** Ensure the battery is fully charged before storing the product for extended periods.
- 15.** Avoid exposing the product to extreme temperatures or direct sunlight when charging.

Frequently Asked Questions

Q: The product does not work.

A:

- 1.** Check if the product needs charging or is in a suspended state.
- 2.** Verify if the product is damaged. Falling may deform the drill hole or damage internal parts.
- 3.** Accumulation of excessive nail dust or nail polish near the power hole or switch button may affect operation.
- 4.** Do not wash with water, as it can cause internal parts to rust. It is recommended to clean the device with a cleaning brush after each use.

Q: The product cannot use a replacement drill bit.

A: Ensure that the diameter of the drill bit is not too large to fit.

Q: The product has power, but it shuts down automatically.

A: Surfaces that the drill bit touches may be too hard. It is recommended to increase the rotating speed or operate on suitable surfaces.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**