

PORODO
LIFESTYLE



Porodo Lifestyle
Grip & Mix
Protein Shaker Bottle

SKU: PDFFX396FQ

Table of Contents

| | |
|--------------------------|---|
| Product Overview | 2 |
| Specifications | 2 |
| Product Features | 3 |
| Instructions for Use | 3 |
| Cleaning and Maintenance | 4 |
| Safety Precautions | 4 |
| FCC Statement | 5 |
| Disposal | 6 |
| Warranty | 7 |
| Contact us | 7 |

Product Overview

The Porodo Grip & Mix Protein Shaker Bottle is designed to provide a high-performance, convenient, and leak-proof solution for mixing your protein shakes or other drinks. It features a powerful shaking function with a high-speed motor operating at 7500 RPM, ensuring smooth and consistent mixing with just a press of a button. The shaker bottle is equipped with a 600mAh battery, offering long-lasting performance for multiple uses before needing a recharge. Its built-in magnetic phone holder adds extra convenience, allowing you to keep your phone secure while you work out or prepare your drinks. Additionally, the shaker is BPA-free, ensuring safe use, and has a 700ml capacity, making it an ideal choice for your daily hydration and mixing needs.

Specifications

| | |
|--------------------|------------------------|
| Capacity | 700mL |
| Motor Speed | 7500RPM |
| Battery Capacity | 600mAh |
| Charging Interface | Type-C |
| Charging Time | 2H |
| Battery Life | 30 Days |
| Material | PP + Tritan (BPA-Free) |
| Product Size | 67 × 105 × 260mm |

Product Features

- a. Powerful Shaking Function (7500 RPM):** The shaker uses a high-speed motor at 7500 RPM for smooth and even mixing of your drinks, ensuring consistency with every use.
- b. Long Battery Life (600mAh):** With a 600mAh battery, the shaker provides long-lasting performance and can be used multiple times before needing a recharge.
- c. Magnetic Phone Holder:** The built-in magnetic holder keeps your phone secure while you mix drinks, offering hands-free convenience during workouts or daily use.
- d. Leak-Proof Design:** The shaker is leak-proof, making it safe to carry without worrying about spills or mess.
- e. BPA-Free Material:** Made from BPA-free materials, the shaker ensures your drinks remain free from harmful chemicals for safe use.
- f. 700ml Capacity:** The 700ml capacity is ideal for mixing your drinks, providing enough space for protein shakes, smoothies, and other beverages.

Instructions for Use

- 1.** Before using the mug for the first time, flex and flick the bottom grip-pad 7 to 10 times.
- 2.** Place the mug on a flat, smooth surface and tap it gently on one side. Lift it vertically. If the bottom grip-pad is deformed, please repeat the previous steps to restore its function.

Hint: If the bottom grip-pad is deformed, repeat the above steps to restore the function.

Note: Fill the mug with a hot or cold beverage. Do not overfill the mug beyond the maximum level. Avoid placing large ice pieces directly into the mug.

Cleaning and Maintenance

Cleaning Before First Use:

1. Fill the mug with hot water.
2. Use a soft cloth or sponge to clean the inside.
3. Rinse all parts thoroughly under running water.

Safety Precautions

1. Do not overfill the beverage to prevent spills of hot liquids.
2. To avoid scalding, always lift the bottle vertically when filling it with hot beverages.
3. Always lift the mug vertically. Avoid excessive pulling, knocking, or hitting the product, as this may cause damage.
4. If hot liquid is added, do not open the lid when the product is tilted or near your face. Hot steam may be released due to built-in heat pressure.
5. Clean all parts with warm, soapy water before use. Always store with the lid removed and allow all parts to dry completely.
6. Keep the product out of reach of children when filled with hot beverages.
7. Do not use metal cleaners (such as steel wool) on the product surface, as this may cause damage.
8. Do not use bleach, chlorine, abrasive cleaners, or other harsh chemicals to clean the product.
9. Avoid any excessive impact that may damage the product or cause injury.
10. Do not use in a microwave, oven, freezer, or dishwasher.
11. Do not disassemble or attempt to repair the mug. It is not suitable for dry ice or carbonated beverages.

12. Keep away from direct fire to avoid damage.
13. Ensure the temperature of the beverage is between 90-0 degrees Celsius.
14. When filling with boiling water, avoid direct contact between the hot water pot and the mug body to prevent burns, spills, or damage. Allow boiling water to cool for at least 3 minutes before placing the lid on.
15. The special lid design reduces spillage but does not completely seal the product. To prevent overflow, do not place the product upside down or put it in a bag.
16. To prevent scalding, do not overfill the beverage.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference; and

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for assistance.

RF warning statement:

The device has been evaluated to meet general RF exposure requirements.

The device can be used in portable exposure conditions without restriction.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: <https://www.porodo.net/>

Service Support: support@porodo.net

Instagram: **porodo**