



Green Lion

STYLE PRO 6 in 1 Grooming Kit

SKU: GNSTP6I1GKGN Model No:GL-TM59

Table of Contents

Overview	2
Specification	2
Safety Instructions	3
Package Contents	3
Instructions	4
A. Trimming Fundamentals	4
B. Tips	4
C. Body Grooming Instructions	4
Accessory Guide	5
Care and Maintenance	6
A. Oiling Blades	6
B. Battery Charging	6
C. Blade Cleaning	7
Troubleshooting	7
Disposal	8
Warranty	8
Contact Us	8

Overview

The Green Lion Style Pro 6-in-1 Grooming Kit offers a comprehensive grooming solution with six interchangeable heads for body, beard, nose, and ear trimming. Featuring an IPX6 waterproof rating, 6800RPM motor power, and a 1200mAh battery, it provides 180 minutes of runtime on a single charge. Its digital display allows for real-time monitoring, making it the smart choice for precise and efficient at-home grooming.

Specifications

Model No.	GL-TM59
Material	ABS + Stainless Steel
Charging Port	Type-C
Input	5V 1A
Battery	1200mAh Lithium Battery
Charging Time	2 Hours
Working Time	3 Hours
Waterproof Rating	IPX6
Product Size	38.2 × 33.3 × 156.2 mm
Net Weight	79.63g

Safety Instructions

- **1.** Always keep the grooming kit out of reach of children to avoid accidents.
- **2.** Avoid using the grooming kit on irritated or broken skin to prevent further injury or infection.
- **3.** Only charge the trimmer using the provided charging base or USB-C plug. Ensure the charging port is dry before plugging in the device.
- **4.** Use the grooming kit only for its intended purpose—grooming body hair, beard, and face. Do not use on sensitive or delicate areas like eyes.
- **5.** While the device is waterproof (IPX6 rated), avoid using the grooming kit while submerged in water.
- 6. Always turn off the device after use and store it in a dry, cool place.

Package Contents



Instructions

A. Trimming Fundamentals

- **1.** This unit is fully waterproof, allowing you to groom wherever you prefer.
- **2.** Clean your facial hair thoroughly before use, ensuring it is free from debris and product buildup.
- 3. Comb or brush your hair evenly to achieve a uniform look.
- **4.** Begin with your desired trim length using the appropriate trimming attachment or T-blade.
- **5.** Trim the bulk of your hair, starting with the longest setting and gradually working down to reach your desired length.
- **6.** Trim against the grain for a smooth, even finish. Take your time and proceed carefully for the best results.

B. Tips

- **1.** Be patient: Allow your beard to grow for a few weeks to help it fill in, making it easier to style.
- 2. Brush regularly: Brushing your beard daily helps to distribute natural oils and reduce frizz.
- **3.** Consistency is key: Use the same comb attachment length to maintain even growth.
- **4.** Adjust as needed: Depending on the look you wish to achieve, change the comb to a longer or shorter size.
- **5.** Use beard oils and balms to keep your beard moisturized and healthy, reducing itching and flakes.

C. Body Grooming Instructions

- **1.** Select the appropriate attachment: The trimmer blades and combs are designed for use in less sensitive areas.
- **2.** Utilize the 2-in-1 body grooming head (with or without combs) for extra-sensitive areas or closer grooming.

- 3. Move the trimmer head in all directions for optimal coverage. Work with the grain for comfort, or against the grain for a more thorough result.
- 4. Move gently and slowly for a smoother, more comfortable experience, especially in sensitive areas.

Accessory Guide















Body Grooming

Trimmer Head

Nose & Far Trimmer Head

Precision Blade

Trimming Blade

The Trimmi na Blade is the go-to tool for versatile grooming and close cuts. Use it to cut through large sections of body or beard hair and pair it with combs to achieve your desired length.

T-Blade & Beard Trimmina

The T-Blade is a versatile alternative to the trimming blade when paired with the adjustable T-Blade combs. Perfect for precision edging, hairlines, touch-ups, and fine points. Ideal for shaping your style with defined contours.

Body Groomer

Designed for trimming closer and on sensitive areas, the 2-phase Body Groomer uses dual blades to trim down hair and a full shaver in the center to leave you smooth.

Nose & Ear Trimmer

This attachment ensures the entrance to your nose and ears is free of unwanted hair. It fits comfortably into your nostrils and ears for easy cleaning.

Precision Blade

Achieve precise lines and finer details with the Precision Blade. Perfect for corners, hard-to-reach areas, and sensitive spots for a clean, even look.

Body Trimmer Attachment

The R-shaped Body Trimmer Attachment works best on delicate skin areas, such as the underarms, chest, abdomen, back, and groin.



Care and Maintenance

A. Oiling Blades

- 1. For optimal cutting performance, oil the blades regularly.
- 2. Ensure blades are free of debris, then turn on the trimmer.
- 3. Turn the trimmer over so the cutting blades are exposed.
- 4. Place 2 drops of oil directly on the cutting blades.
- 5. Leave the trimmer running for 10 seconds to allow the oil to spread.
- **6.** Turn off the trimmer and wipe away any excess oil. Keep oil away from children.

B. Battery Charging

- **1.** Charge your trimmer for the first time for 3 hours. 2.Maximum battery capacity will be reached after 3 charging cycles.
- 3. Use a 5V, 1000mA USB adapter to charge your trimmer.
- 4. The adapter may become warm while charging.

This is normal.

- 5. When charging, the unit will not operate.
- **6.** Unplug the adapter when the trimmer is in use.
- 7. There are 2 ways to charge your trimmer:
- **7.1** Use the included charging base, with the USB-C plug located on the back of the base.
- **7.2** Charge your trimmer directly using the USB-C plug located on the bottom of the handle.


C. Blade Cleaning

- 1. Use the included cleaning brush to remove any trapped debris.
- 2. Rinse under running water to clean out any remaining debris.
- 3. Dry off your blades with a cloth.

Troubleshooting

If the trimmer doesn't seem to be taking a charge, try the following:

- 1. Ensure charging cord is securely plugged in the base or handle.
- 2. Try switching from the base to direct plug in or vice versa.
- **3.** Make sure your plug or adapter is working by testing another appliance.

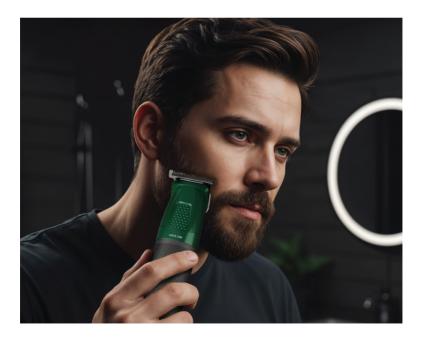

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **https://www.greenlion.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check: https://www.greenlion.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: https://www.greenlion.net/

Sales: sales@greenlion.net

Service Support: Support@greenlion.net

Telegram: @greenlion_global
Instagram: @greenlion_global