

PORODO
LIFESTYLE



Porodo Lifestyle
OPTIVIST Smart HD Projector
SKU: PDA10BBK

Table of Contents

Safety Notes	2
User Interface Preview	3
Remote Control	5
Adjusting Focus	5
Powering On/Off	5
Zoom Function	5
Keystone Correction	6
Wi-Fi Network	7
Manage Applications	7
File Management	8
Input Sources	9
Installation Guide	9
Specifications	10
Disposal	11
Warranty	12
Contact Us	12


Safety Notes

1. Please read this manual thoroughly before operating the device.
2. Use the power supply type indicated on the device and the supplied power cord.
3. Handle the power cord carefully to prevent excessive bending. Damage to the cord may result in electric shock or fire.
4. Do not attempt to disassemble the device yourself; failure to comply will void the warranty.
5. Avoid looking directly into the lens while the device is operating to prevent eye injury.
6. Maintain a minimum distance of 30 cm around the device. Do not cover it with newspapers, cloth, or other materials.
7. Keep the device away from humidity, exposure to sunlight, high temperatures, and magnetic objects.
8. To prolong the life of the device and protect your eyesight, we recommend turning off the machine after 3 hours of continuous use. Disconnect the power supply for at least 30 minutes before restarting the device.
9. If there is no operation within five minutes on the static interface, the device will automatically enter the screensaver mode. You can press the back button on the remote control to exit the screensaver.



Caution: To prevent electric shock, do not open the casing. Maintenance should only be performed by qualified professionals.

User Interface Preview

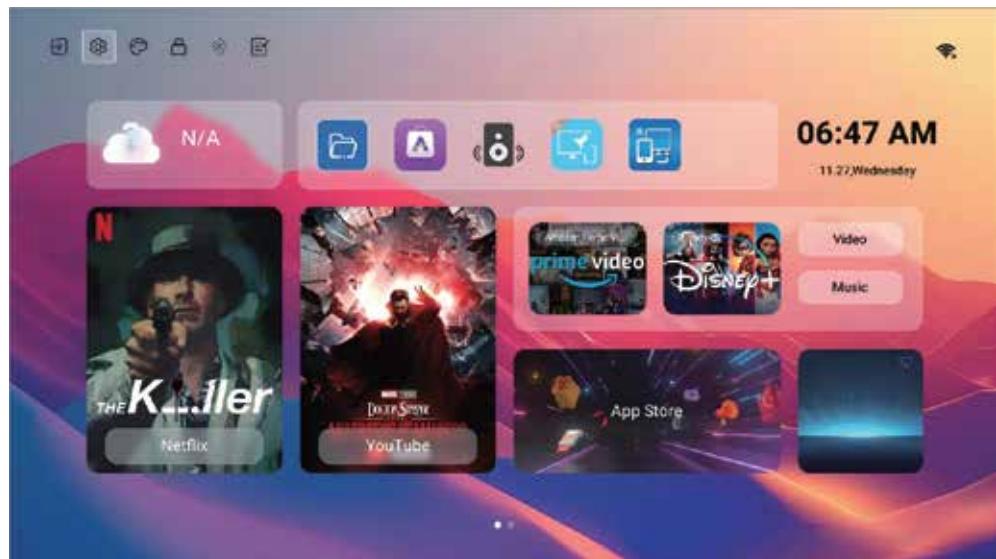

Home Page



Weather Information




Back




Setting



Calendar

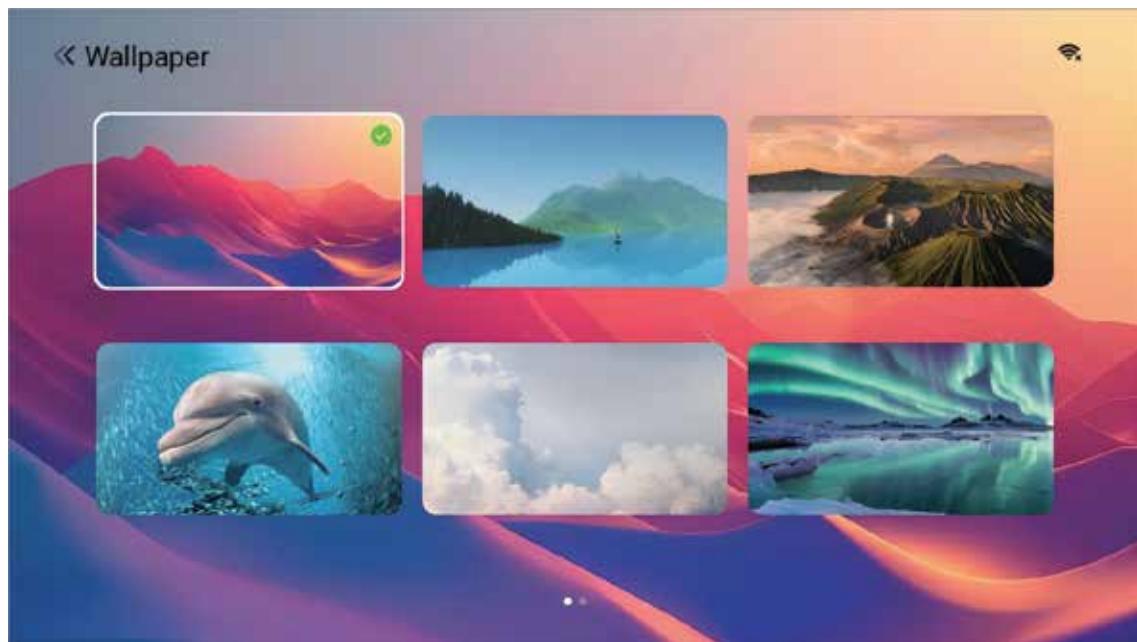

Wallpaper Setting

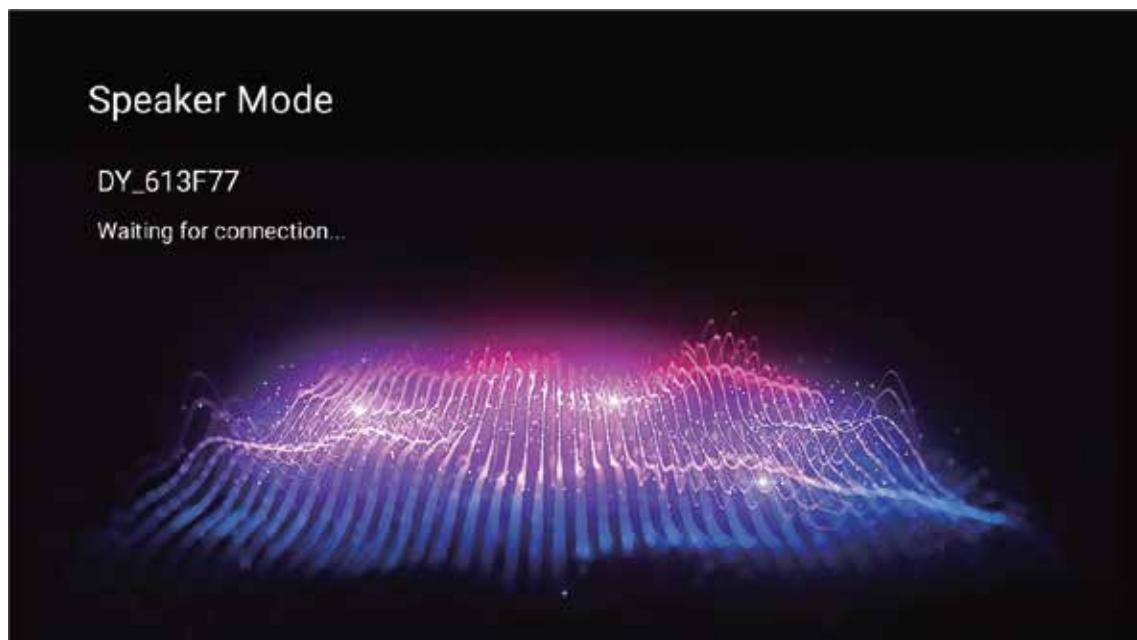

Speaker Mode



Photo



Speaker




Home



Volume

Remote Control

1. Power Button
2. Volume Down
3. Mute
4. Arrow Keys
5. Menu
6. Increase Focus
7. Home
8. Increase Volume
9. OK
10. Source
11. Back
12. Decrease Focus
13. Adjusting Focus

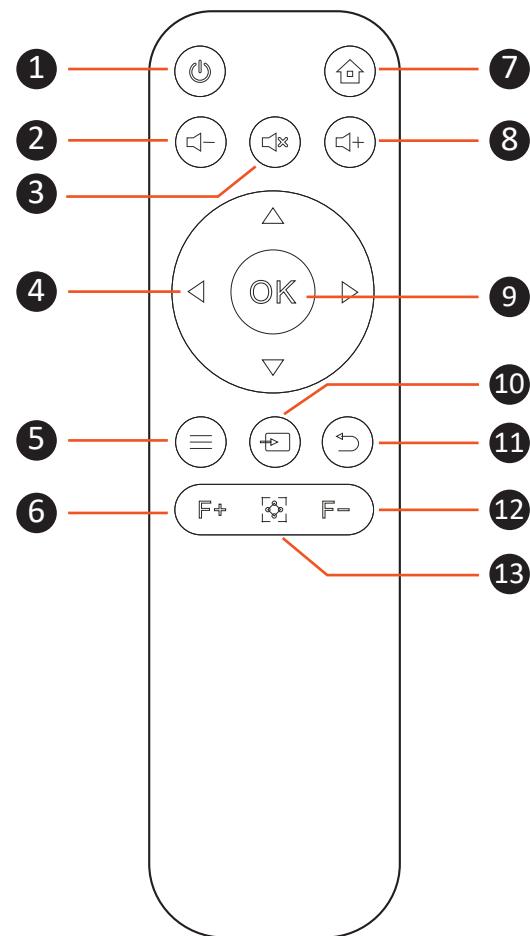

Adjusting Focus

When the autofocus makes the screen unclear, you can adjust the focus appropriately using the Focus + and Focus - buttons on the remote control.


Powering On/Off

In addition to using the remote control to power the machine on and off, the power button located on the device itself can also be used.

Zoom Function


From the home page, navigate to [Settings] > [Projection Settings] > [Screen Zoom] to adjust the screen size without moving the machine.

1. Use the up and down arrows to scale the screen size.
2. Press the Menu button to reset

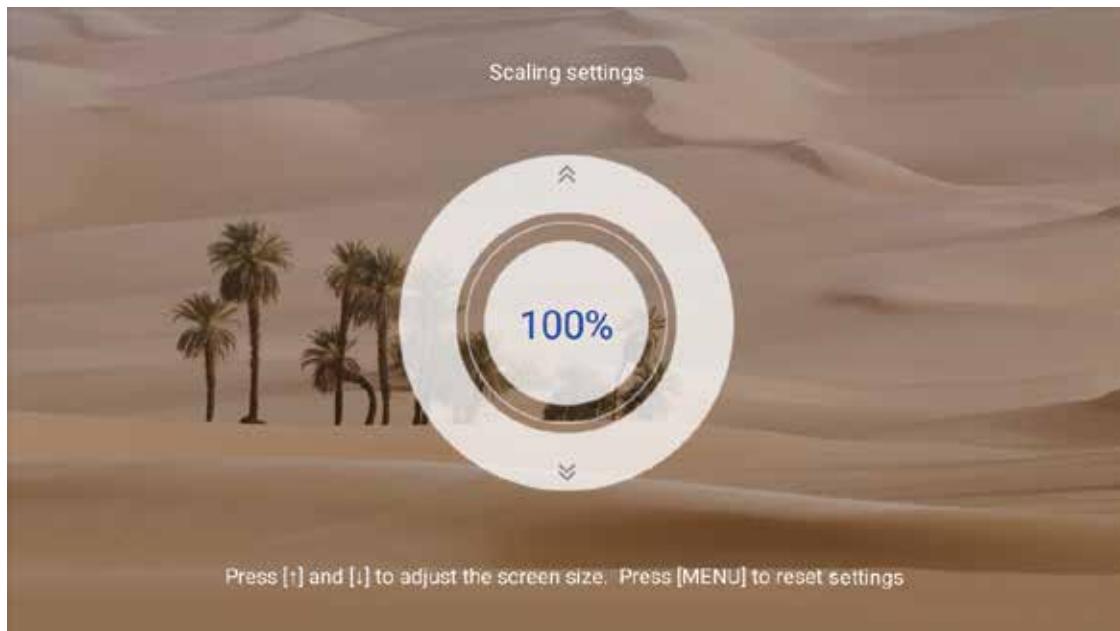

Keystone Correction

The auto keystone adjustment is enabled by default. If the auto keystone effect is unsatisfactory, go to [Settings] > [Projection Settings] > [Manual Keystone Correction] and follow the on-screen guide to manually adjust the image until it's clear.

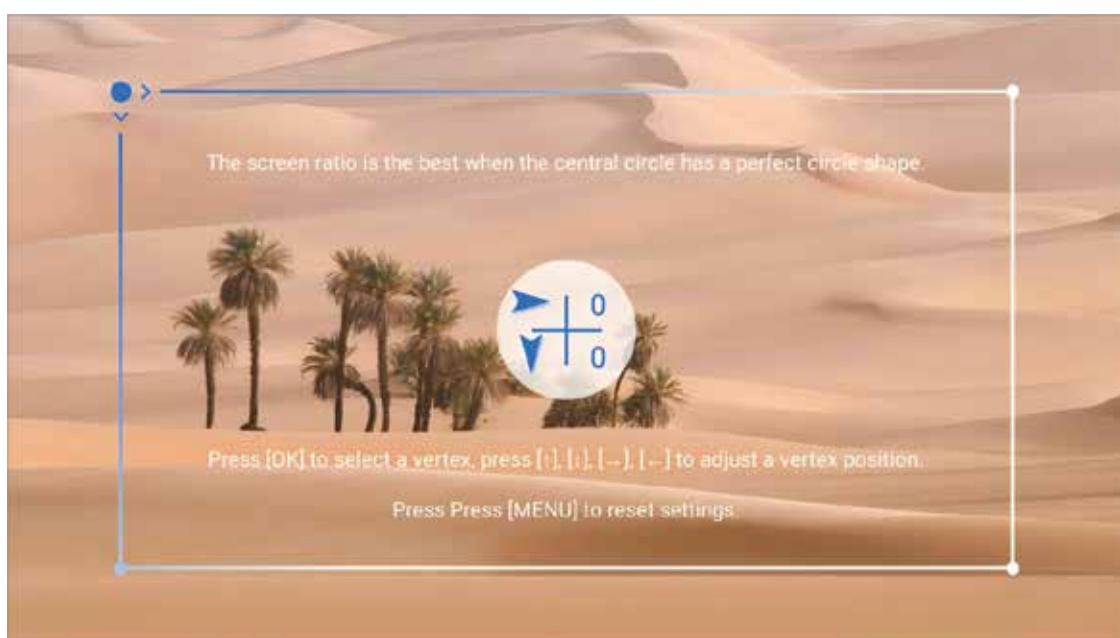


Wi-Fi Network

1. From the home page, press the Source button on the remote control. Select the desired input source (e.g., HDMI, USB) and press OK to switch to that source.
2. To connect to Wi-Fi, enter your network details on the screen and press Connect.




Manage Applications

From the home page, press the Right arrow key to display the list of installed apps. Select an app and press OK to open it. To uninstall an app, press the Menu button. Alternatively, go to [Settings] > [Application] to view and manage installed apps. To install an app:

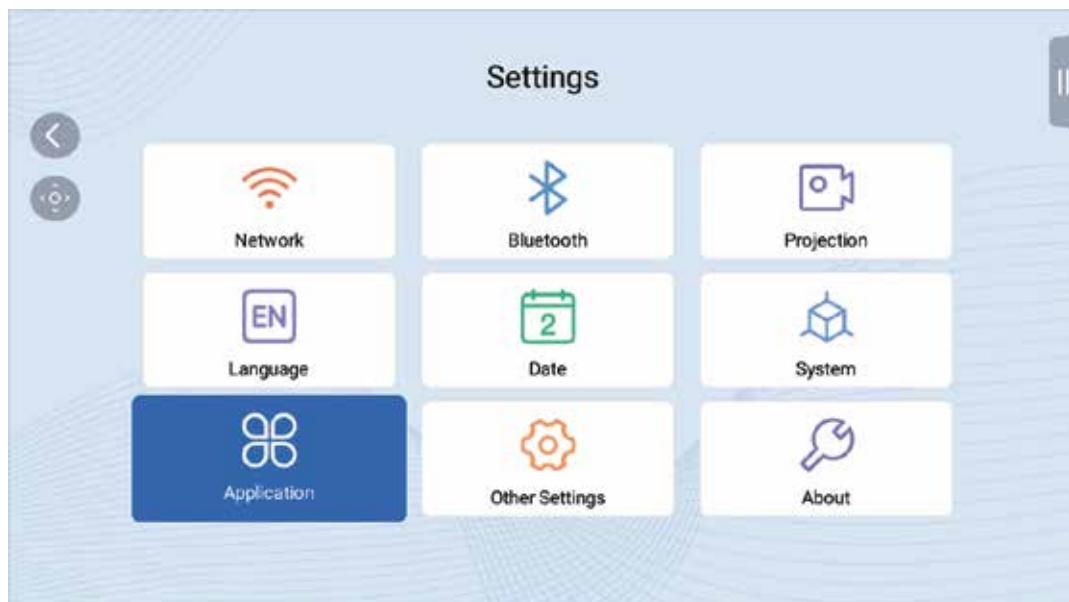


1. Open the App Store.
2. Search for the desired app, then download and install it.
3. Please ensure you stay on this page during the download and installation process.

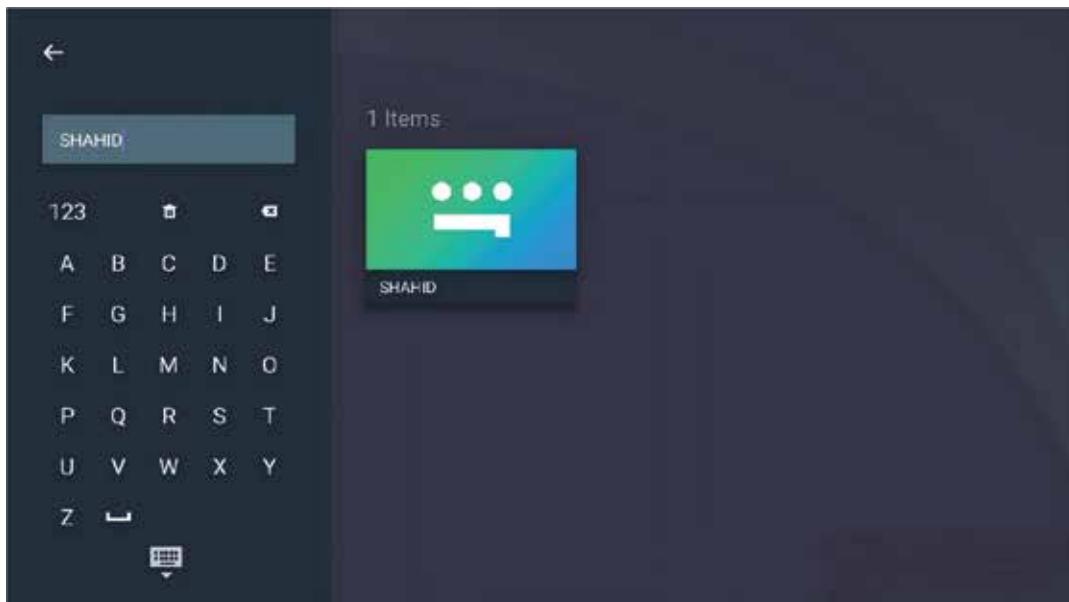


File Management

Insert the USB flash drive containing multimedia files into the USB port. From the home page, select "USB". Once the screen appears, you can browse and select the desired multimedia file to play.

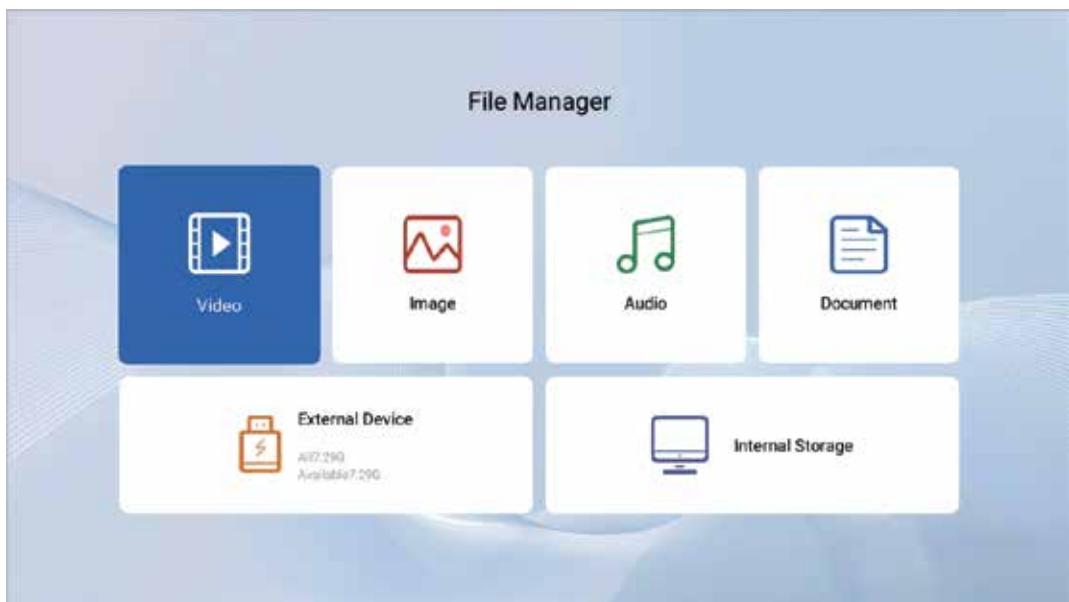


K Input Sources

From the home page, press the Source button on the remote control. On the displayed page, select the desired input source (e.g., HDMI, USB), then press OK to switch to that source.

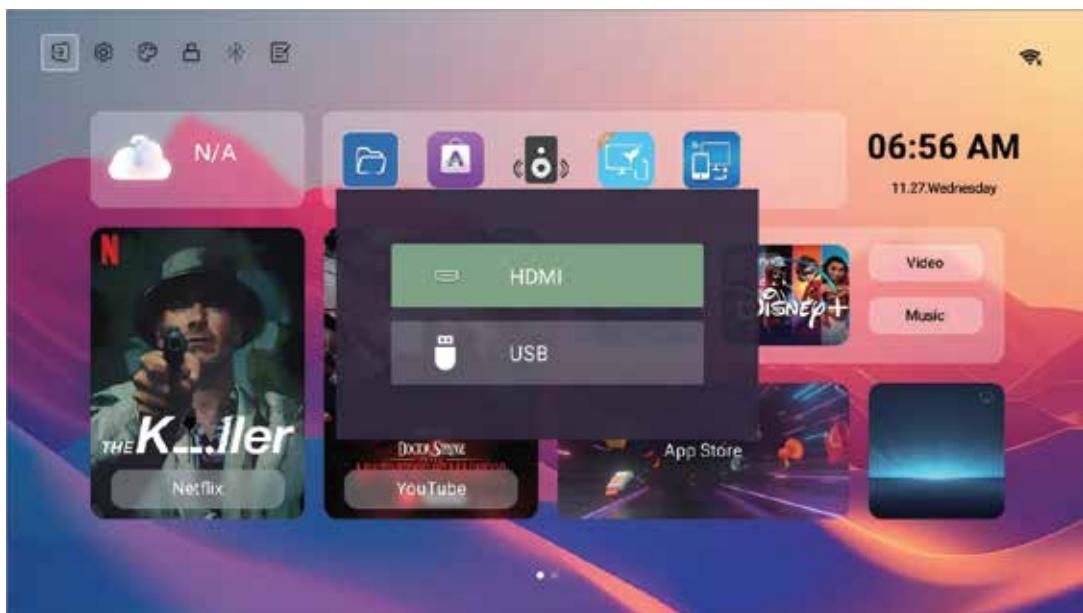

K Installation Guide


Based on your environment and preferences, you can mount the projector on the ceiling using a special hanger, place it on a stable desktop, or use alternative installation methods as illustrated in the following diagram.

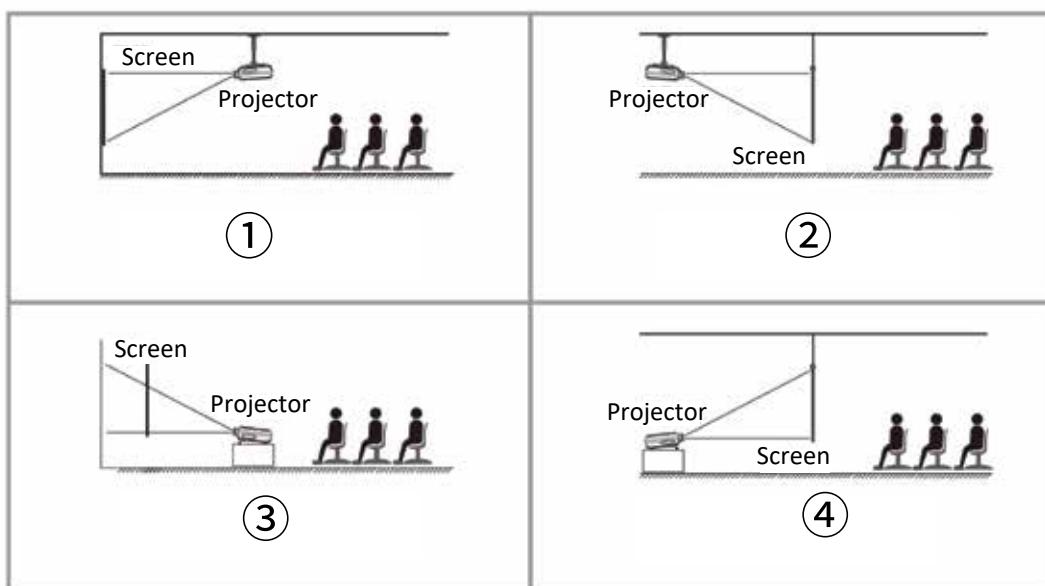

1. Hoisting Forward: Mount the projector on the ceiling in a forward-facing position. This setup provides an optimal viewing experience for the audience sitting in front.
2. Hoisting Rear: Mount the projector on the ceiling with the rear-facing position. This configuration projects the image from behind the screen.
3. Desktop Forward: Place the projector on a stable desktop facing forward. This setup is ideal for projecting onto the screen from the front.
4. Desktop Rear: Place the projector on a stable desktop with the rear-facing position. The projector will project the image from behind the screen.

Notice

1. Projector Off to the Right: The image will appear large on the left and small on the right.
2. Position and Angle Correct: The image will appear square.
3. Projector Off to the Left: The image will appear large on the right and small on the left.

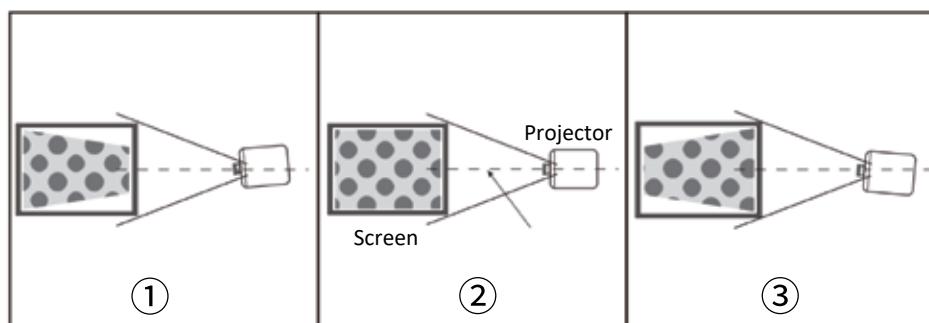

Specifications

Input	AC 100-240V, 50/60Hz
Display	2.69 inch, 1280x720, LCD
Deputy Display	7 inch, 1024x600, IPS, Capacitive touch
Brightness	200LM
Contrast Ratio	2000:1
Camera Lens	720P
Light Source Type	LED
Light Source Power	64W

Light Source Lifespan	>10,000 hours
Projection Size	30-250 inches
Standard Resolution	RGB 1280x720
Projection Distance	1.3-10.0M
Picture Scale	16:9 , 4:3
Net Weight	1.6kg
Model Number	PDA10B

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at porodo.net/warranty and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**