

PORODO



Porodo

NASPANORA Portable Smart Tablet

SKU: PDSSK245WH

Table of Contents

Overview	2
Safety Warnings and Notices	2
Package Contents	7
Buttons and Interfaces	7
Adjusting the Screen Angle	8
Instructions for Use	8
Wireless Network Connection	9
Important Statement	9
Troubleshooting	10
Specifications	11
Use of Wall Mount	12
Disposal	13
Warranty	13
Contact Us	13

Overview

The Naspanora Portable Smart Tablet offers a 24.5" FHD touch screen and runs Android 14, providing a premium visual experience with stereo speakers and deep bass. It boasts an 8MP camera for high-quality video calls and photos, along with 8GB RAM and 128GB storage for seamless performance. The tablet's versatile features include wireless casting, VESA mount support, and a portable magnetic handle, making it ideal for work, play, and on-the-go use. Whether for creative tasks, education, or entertainment, this tablet adapts to every occasion.

Safety Warnings and Notices

This product has been carefully designed and rigorously tested to ensure personal safety. However, improper usage may lead to electric shock, fire hazards, or other dangers. To maintain the safety of both the device and its user, please follow the instructions in this manual and observe all safety labels before use. Keep this manual for future reference.

Warning: Could result in serious injury or even fatalities.

Attention: Could result in personal injury or property damage.

Prohibited Actions: Behaviors that must be avoided for safety.

Required Actions: Operations that must be performed to ensure safety.

In case of a gas leak (e.g., coal gas or other flammable gases), do not unplug the device or any other electrical appliances. Immediately close the gas valve, open all doors and windows, and ensure proper ventilation.

If any of the following conditions occur, immediately disconnect the power plug and contact authorized professional service for assistance:

Power failure or unstable voltage.

Abnormal sounds or odors emanating from the device.

Damage to the power cord.

Device damage due to drops, knocks, or impacts.

Liquid or foreign objects entering the device.

Warning

- 1.** This product is compatible only with the power supply specified on its nameplate. If you are uncertain about the type of power supply, please consult the product dealer or your local power supply authority.
- 2.** Do not disassemble the adapter or power cord, as this may lead to electric shock, fire, or other hazards.
- 3.** Ensure the power adapter is placed securely to avoid it being dropped or damaged.
- 4.** Always fully insert the power plug into the outlet. A loose connection may cause sparking, overheating, or even fire.
- 5.** Avoid placing the device in an unstable position to prevent accidental falls, injuries, or potential damage. Follow these precautions to minimize risks:
 - 5.1** Use only recommended furniture or brackets that are designed to support the product.
 - 5.2** Ensure the furniture or surface used can safely hold the tablet without risk of tipping over.
 - 5.3** Do not allow the product to overhang the edge of any surface.
 - 5.4** Anchor tall furniture (such as cabinets or bookshelves) to prevent tipping, especially when placing the tablet on top.
 - 5.5** Avoid placing the tablet on soft materials (e.g., cloth or pillows) that could cause instability.
 - 5.6** Educate children about the dangers of climbing on furniture or interacting with the tablet in unsafe ways.
 - 5.7** Keep objects such as toys or remote controls off the tablet or its stand, as they may tempt children to climb.
- 6.** If relocating the device, ensure that all the above safety considerations are applied in the new setup.
- 7.** Avoid placing the tablet in environments that could subject it to mechanical vibrations or other disruptions.
- 8.** Do not place the tablet in locations with the following conditions:
 - 8.1** Direct sunlight, excessive moisture, overheating, or heavy dust.
 - 8.2** Flammable or explosive substances.
 - 8.3** Flammable or corrosive gases.

- 8.4** Bathrooms, kitchens, or other areas prone to humidity or spills.
- 9.** Do not use damaged or incompatible power sockets. Ensure the plug and socket are properly connected.
- 10.** Keep the power plug and socket free from dust or metal objects.
- 11.** Avoid damaging the power cord by following these guidelines:
- 11.1** Do not attempt to repair or modify the power cord.
- 11.2** Keep heavy objects away from the cord.
- 11.3** Keep the cord away from heat sources.
- 11.4** Always unplug by pulling the plug, not the cord.
- 12.** Do not overload power strips by connecting too many devices, as this can cause overheating and potential fire hazards.
- 13.** Avoid placing the tablet near open flames (e.g., lit candles) to prevent fire or electrical hazards.
- 14.** Do not place containers filled with water or liquids near the tablet to avoid electric shock or fire from accidental spills.
- 15.** Do not insert sharp objects, metal, or liquids into the device's connectors or vents, as this could lead to electrical short circuits, damage, or fire risks.
-  Avoid touching the plug with wet hands, as this can lead to electric shock.
-  Do not use the device during a thunderstorm. Unplug the power cord during lightning storms to prevent damage from lightning strikes.
-  Do not attempt to disassemble the product on your own, as this could result in electric shock or fire. Always contact qualified personnel for maintenance or repairs.
- 16.** This product contains an internal lithium battery. Handle with care during use.
- 17.** If the battery leaks, stop using the device immediately and avoid contact with the leaking liquid. Contact with the battery's contents can cause serious health risks, including eye damage or burns.
- 18.** If any part of your skin or eyes comes into contact with the leaked liquid, rinse thoroughly with clean water and seek medical attention immediately.
- 19.** Dispose of the battery correctly to avoid the risk of explosion or fire. Battery disposal guidelines may vary depending on your country or region.

- 20.** Do not expose the device, especially the lithium battery, to electricity, flames, electric heaters, or direct sunlight. Exposure to these elements could cause electric shock, injury, or fire.
- 21.** When charging the battery, use only the specified power supply or circuit within the recommended range. Using an incorrect power source may lead to battery damage or fire.
- 22.** Handle the lithium battery with caution, as there is a risk of fire or explosion if mishandled.
- 23.** Clean the charging port using a soft cloth. Ensure there is no dirt or foreign object in the port, as this can prevent the battery from charging properly and may lead to fire hazards.
- 24.** If the battery is fully discharged and left unused for an extended period, it may not be able to charge again, or the battery's lifespan could be shortened.
- 25.** Do not remove, disconnect, disassemble, or short-circuit the battery, as this could cause electric shock, injury, or fire.
- 26.** Do not throw the battery into fire or a heating furnace, or attempt to cut or mechanically extrude the battery. Doing so could cause an explosion.
- 27.** Never place the battery in an environment with extremely high temperatures, as this could cause the battery to explode or leak flammable liquids or gases.
- 28.** Do not place the battery in environments with extremely low atmospheric pressure, as this could cause battery explosion or leakage of hazardous fluids or gases.

Attention

- 1.** Keep small accessories away from children's reach to prevent the risk of swallowing.
- 2.** Avoid placing the tablet near air conditioners, as condensation may form inside the display and cause damage.
- 3.** Do not place the tablet in areas with strong magnetic fields, as this can interfere with the device and potentially cause damage.
- 4.** If the tablet won't be used for an extended period, turn it off and unplug the power cord.

- 5.** Before cleaning, unplug the tablet and use a soft cloth to wipe it.
- 6.** Do not use chemical cleaners or allow foreign substances to enter the device.
- 7.** Avoid cleaning with water or cleaning agents, as this could damage the appearance, erase printed information, or cause internal components to malfunction.
- 8.** When adjusting the position or angle of the tablet, make sure to disconnect all wires and move the device gently to prevent accidental falls.
- 9.** Do not rub hard objects on the screen or apply excessive force, such as knocking, bending, or squeezing, which could damage the LCD screen.
- 10.** Allow the tablet to adjust to the new temperature when moving it from one environment to another, as drastic temperature changes could cause internal fogging or failures.
- 11.** If the LCD screen is broken and the liquid comes into contact with your skin, immediately wash the affected area with clean water for at least 15 minutes and consult a doctor.
- 12.** Avoid placing stress on the screen when carrying the device by hand to prevent damage.
- 13.** Displaying the same image for extended periods (such as static icons or text) may cause image retention or "ghosting" on the screen, which can remain visible even after the tablet is powered off. This issue is not covered under warranty.
- 14.** Always use the tablet in appropriate lighting. Prolonged use in low-light environments or excessive screen time may strain your eyes.
- 15.** Ensure you adjust the volume to a comfortable level to avoid damaging your hearing.
- 16.** If using an external power plug or appliance coupler as a disconnecting device, ensure it is properly connected to allow for easy and safe operation.
- 17.** Environmental Conditions:
Operating Temperature: 0°C to +40°C; Humidity: 0 % to 65 %, non-condensing.
Storage Temperature: -10°C to +50°C; Humidity: 0 % to 80 %, non-condensing.
- 18.** Operating Altitude: Up to 3000 meters.


19. All technical specifications provided in the user manual and packaging are subject to change without prior notice. In case of any slight discrepancies between the manual and the actual operation, the actual operation shall take precedence.

Package Contents

1. Portable Smart Tablet
2. User Manual
3. Power Cord

Buttons and Interfaces

Open the port dust cover and connect the corresponding ports as needed.

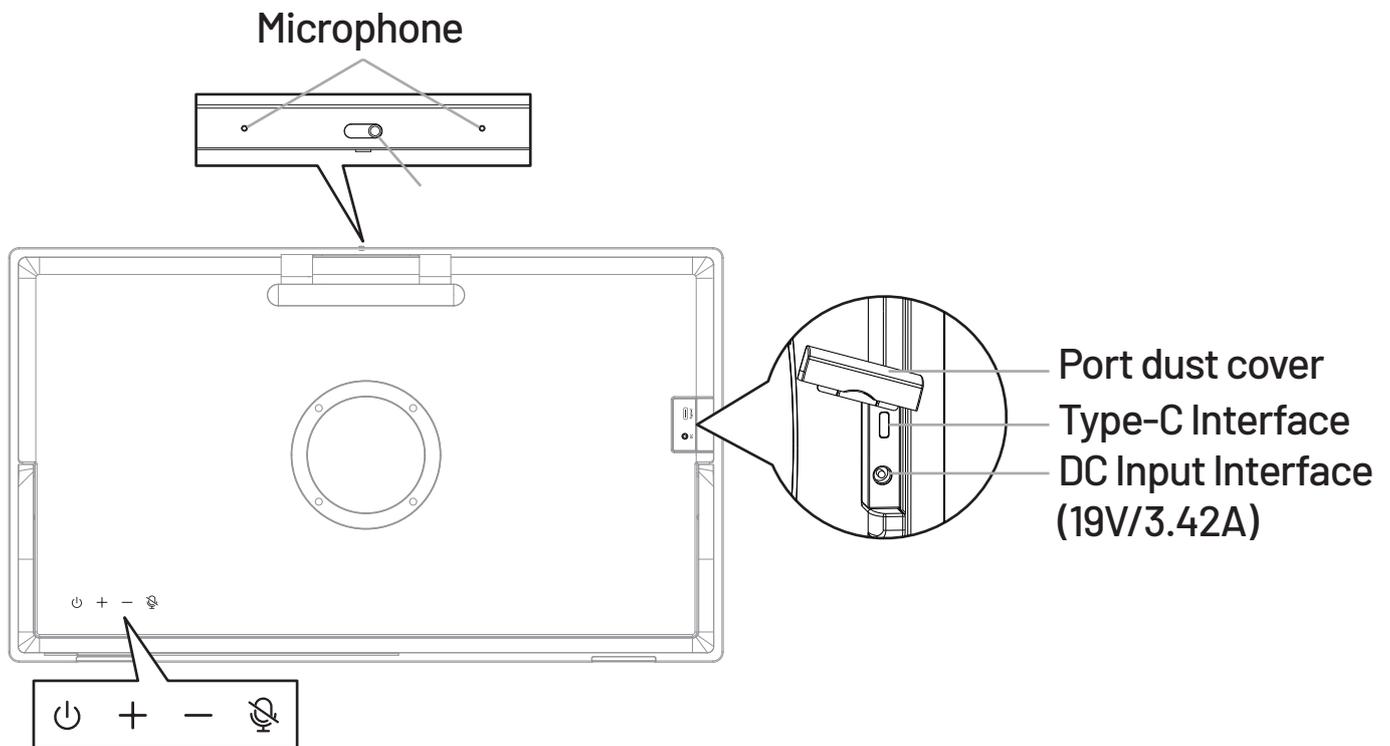

1. **Type-C Interface:** Supports external PD 5W power supply, USB 2.0, and DP-IN.
2. **DC Input Interface:** Connect to the power adapter for charging.
3. () **Mute Button:** Use to turn the microphone on or off.
4. **Volume +/- Control:** Press the + or - button to increase or decrease the volume.
5. () **Power Button Functions:**

Power-Off State: Press and hold the power button () to turn the device on.

Screen-Off State: Press the power button () to turn the device on.

Normal Operation: Press the power button () to enter screen-off mode.

Custom Settings: From the drop-down menu, go to () > System > Gestures > Press & Hold Power Button, then select either Power Menu or Digital Assistant to assign a custom function to the "Press & Hold" action.

Attention


- a. If the product has been powered off for an extended period, first connect the power adapter to the device before turning it on to ensure proper startup.
- b. To power the device, first connect the product to the power adapter, and then plug the adapter into the power outlet.

Adjusting the Screen Angle

Adjust the base and screen angle for an optimal viewing experience.

Attention:

- a. Do not rotate the screen beyond its designated angle limits.
- b. Be careful when adjusting the angle to avoid pinching your fingers.

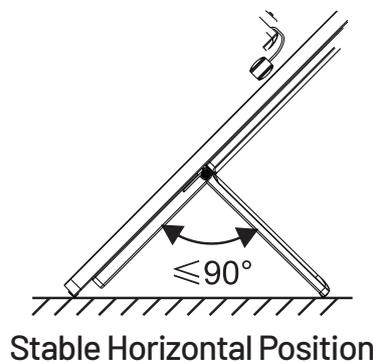

Instructions for Use

1. Power On/Off

1.1 After connecting the power cord and turning on the power supply, press and hold the power button to turn on the device.

1.2 During normal use, swipe down from the top edge of the screen to open the drop-down menu.

1.3 To turn off the device, click the Power option in the menu, and the device will enter the power-off state.

2. Touch Operations

Click: Tap on the screen.

Click and Hold: Tap and hold on the screen for 2 seconds or longer.

Swipe: Swipe up, down, left, or right on the screen.

Drag: Tap and hold on the target (e.g., an app), then move it to the desired position.

Open/Close: Place two fingers on the screen and spread them apart to zoom in, or pinch them together to zoom out.

3. For the gesture guide, go to:

() Settings > System > Gestures > Navigation mode.

Attention

a. The ability to zoom in or out depends on whether the displayed content supports this function, which may vary by app. Please operate based on the content displayed.

b. Avoid pressing the screen with excessive force. If necessary, use your fingertip to tap the screen. If you wear gloves or use your fingernail to touch the screen, it may not respond as expected.

c. If the screen is slightly wet or damp, the sensor may not work properly.

Wireless Network Connection

1. Go to () Settings > Network & internet > Internet, and turn on Wi-Fi. The system will automatically search for available wireless networks.

2. Select the network you wish to connect to.

3. A lock icon () next to the network indicates that it is encrypted. Enter the correct password to connect to the network.

Note: Additional system settings () can be adjusted under Settings as needed.

Important Statement

All contents and services obtained through this product are owned by third parties and protected by copyright, patent, trademark, and other intellectual property laws.

These contents and services are provided solely for personal, non-commercial use and may not be used in any manner not authorized by the content owner or service provider. Under no circumstances will our company be held liable for any direct, indirect, or unexpected losses or damages resulting from your or any third party's access to any content, services, or third-party software through this product.

Troubleshooting

1. The Screen Is Blank and No Sound Is Heard

1.1 Please ensure that the device is powered on.

1.2 Check to confirm that the power cord is securely connected.

2. The Product Shuts Down Unexpectedly

2.1 The internal battery may have run out. Please connect the power adapter to recharge it.

2.2 Verify whether the auto shutdown feature is enabled, as it may cause the device to turn off after a set period.

2.3 If the battery overheats, the device will automatically shut down for safety reasons.

3. There Is No Sound

3.1 Adjust the volume to an appropriate level.

4. The Screen Is Too Bright or Too Dark

4.1 Adjust the screen brightness by using the drop-down menu in the settings.

5. Unable to Connect to the Network

5.1 Contact your network administrator to verify the network IP addresses and other relevant settings.

5.2 Ensure that the network cable is properly connected.

5.3 Reach out to your network service provider for additional support.

6. The Network Is Very Slow When Streaming Videos

6.1 Consider upgrading your network bandwidth to a higher speed to improve performance.

6.2 Try switching to different VOD (Video on Demand) addresses for better video

quality and streaming resources.

7. The Device Is Unresponsive or Crashes

7.1 Turn off the device, wait for 1-2 minutes, and then power it on again.


Specifications

Display Size	24.5"
Display Resolution	Full HD (1920 x 1080)
Operating System	Android 14
Refresh Rate	60Hz
Brightness	250cd/m2
Backlight	E-LED, Side-Entry
Brightness	250cd/m2
Contrast Ratio	1300:1
Display Colors	16.7 Million
GPU	Mali-G52 MC3
Processor	ARM Cortex-A72x4 + Cortex-A53x4, Up to 2.2GHz
RAM	8GB
ROM	128GB
Camera	8MP with Physical Privacy Slider
Battery Capacity	77.7Wh Li-Ion
Battery Life	Up to 6h
Recharge Time	2h
Response Time	14ms, ≤20ms Max
I/O	USB-C (PD 45W), DC, USB 2.0
Speakers	2x7W Woofers + 2x3W Tweeters
Wireless Connectivity	Wi-Fi 6; Bluetooth V5.2
Power Adapter	19V/3.42A (65W)
Mounting	VESA 75 x 75mm
Product Size	25 x 377 x 569mm
Product Weight	4.8kg
Model Number	PDSSK245

Use of Wall Mount

Warning

1. Ensure you purchase a suitable wall mount for proper installation.
2. The wall must have a bearing capacity at least four times the weight of the tablet and wall mount to avoid any risk of falling.
3. Follow the installation instructions provided with both the product and wall mount.
4. Check that there are no cables or conduits in the wall section where the wall mount will be installed.
5. Professional installation is highly recommended. Please have a certified technician perform the installation. The company is not responsible for any accidents, personal injury, or damage resulting from improper installation.

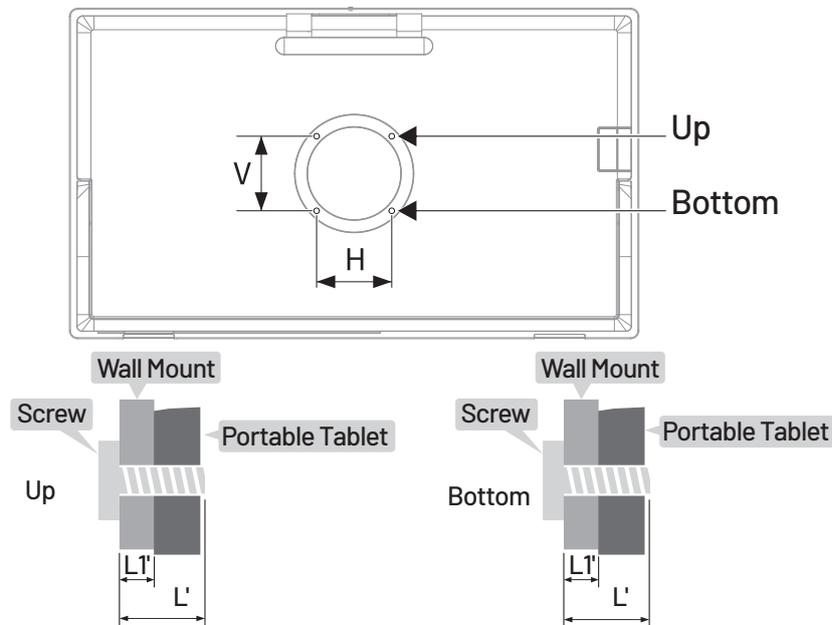

L1/L1': Thickness of the wall mount

Distance Between Holes on the Wall (H x V)	Required Screws (Recommended Bolt Length)
75 x 75 mm	Up: 2 x M4 ($9 + L1 \leq L \leq 11 + L1$), Machine screws Bottom: 2 x M4 ($9 + L1 \leq L' \leq 11 + L1$), Machine screws

Note: Please select the appropriate wall screws based on the actual situation.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**