

# PORODO



**Porodo**

**SOLAR-POWERED**  
**20000mAh Power Bank**

SKU: PDPBAS149BK

# Table of Contents

Product Overview	2
Specifications	2
Product Features	3
Package Contents	3
Product Design	4
Operation Instructions	4
Safety Precautions	5
Disposal	6
Warranty	6
Contact Us	6

## Product Overview

The Porodo Solar-Powered 20000mAh Power Bank is designed for on-the-go charging and outdoor use. With a powerful 22.5W PD (Power Delivery) and QC (Quick Charge) output, it ensures fast and efficient charging for your devices. The power bank features a solar panel for eco-friendly charging, making it ideal for outdoor adventures. Additionally, it includes a multi-mode flashlight, providing practical illumination when needed. Built to withstand outdoor conditions, this power bank is a reliable companion for fast charging, solar charging, and emergency lighting needs.

## Specifications

Battery Capacity	20000mAh/74Wh
Type-C Input	5V/3A, 9V/2A, 12V/1.5A, 18W Max
Type-C Output	5V/3A, 9V/2.22A, 10V/2.25A, 12V/1.67A, 22.5W Max
USB-A Output	5V/3A, 9V/2A, 12V/1.5A, 10V/2.25A, 22.5W
Sharing Output	5V/3A, 15A
Charging Time	4H
Product Size	33.8x60x184mm
Product Weight	20+442.7g
Model Number	PDPBAS149

## Product Features


- 1. Solar Charging:** Eco-friendly charging option with a built-in solar panel for outdoor use.
- 2. Fast Charging:** 22.5W Power Delivery (PD) and Quick Charge (QC) for efficient device charging.
- 3. Multi-Mode Flashlight:** Integrated flashlight with multiple modes for practical illumination.
- 4. High Capacity:** 20000mAh power bank for extended device charging.
- 5. Durable Design:** Built to withstand outdoor conditions and rugged use.
- 6. Compact and Portable:** Lightweight and easy to carry, making it perfect for travel and outdoor activities.

## Package Contents

- 1. Power Bank**
- 2. USB Charging Cable**
- 3. Wrist Strap**
- 4. Carabiner Hooks**



## Product Design

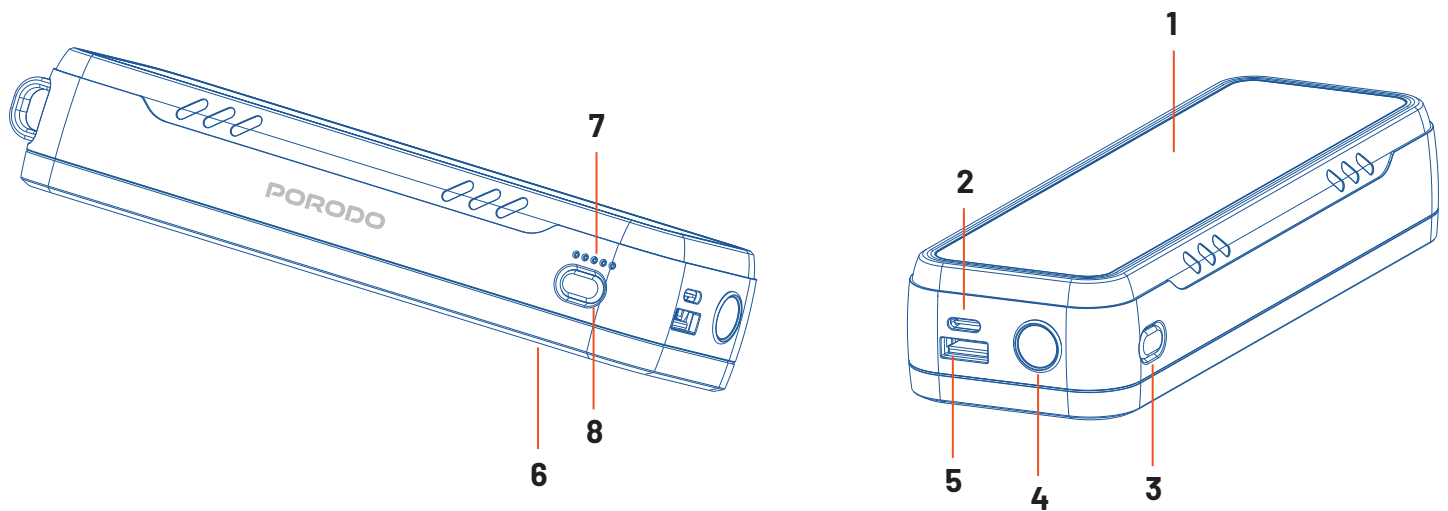

1. Solar panel
2. Type-C input/output
3. Flash light button
4. Flash light
5. USB-A outputs
6. Camping Light
7. Led light
8. Camping light button and Power button

## Operation Instructions

### 1. Charging the Power Bank

Connect a charger to the USB Type-C port (2) on the power bank. The charging process will begin. Disconnect the charger once fully charged.

**Note:** For the first use, fully charge the power bank. Charging typically takes approximately 4 hours, but this may vary depending on the USB charger used.

### 2. Checking the Battery Level

To check the battery level, press the power button (8). The LED indicators (7) will flash for a few seconds, displaying the battery level:

**a.** Four LEDs mean the power bank is fully charged.

**b.** One LED means it is almost empty.

### **3.** Charging Devices with the Power Bank

To charge devices, connect the device to a USB cable and plug it into one of the USB-A ports (5) or the USB-C port (2).

### **4.** Flash Light

The flashlight is operated by the button (3):

**a.** To switch on, press and hold the button (3) for approximately 3 seconds.

**b.** Press the button (3) briefly again to change the light mode.

**c.** To switch off, press and hold the button for approximately 3 seconds.

### **5.** Multiple USB Ports

If you use multiple USB ports simultaneously, the available power will be divided. Refer to your device's manual to ensure the required current draw is met.

### **6.** Camping Light

**a.** Turning On: Press and hold the button (8) to turn on the camping light.

**b.** SOS Flashing Mode: Press the button (8) once to activate the SOS flashing mode. A single press will cycle through the flashing modes.

**c.** Turning Off: Press and hold the button (8) to turn off the camping light function.

## **Safety Precautions**

**1.** Do not open the device.

**2.** Avoid immersing the device in water and protect it from moisture.

**3.** Do not reverse the power input and output connections.

**4.** Ensure cables are not forced. Keep electrical appliances out of reach of children.

**5.** Unplug electronic equipment when not in use for extended periods.

**6.** Do not use the device if it shows visible damage.

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

## Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **[porodo.net/warranty](https://porodo.net/warranty)** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
**[porodo.net/warranty](https://porodo.net/warranty)**

## Contact Us

If you have any questions about this Privacy Policy, please contact us at:  
**[info@porodo.net](mailto:info@porodo.net)**

Website: **[porodo.net](https://porodo.net)**

Service Support: **[support@porodo.net](mailto:support@porodo.net)**

Instagram: **[porodo](https://www.instagram.com/porodo)**