

PORODO



Porodo

MAGSAFE 10000mAh Power Bank

SKU: PDPBFCH065BK

Table of Contents

Product Overview	2
Specifications	2
Product Features	3
Charging Instructions	3
LED Indicators	4
Product Design	4
Usage Instructions	5
FCC Statement	6
Disposal of Used Batteries	7
Warranty	9
Contact Us	9

Product Overview

The Porodo MagSafe 10000mAh Power Bank is a versatile and high-performance charging solution designed to offer convenience and efficiency on the go. Featuring a strong magnetic hold, this power bank securely attaches to your device, ensuring a stable connection for wireless charging. With a 20W output, it provides fast and reliable charging for your devices. The integrated USB-C cable adds further ease, eliminating the need to carry extra cords, while the secure foldable stand allows for hands-free viewing during use. Compact and sleek, this power bank is a practical companion for users who value functionality and portability.

Specifications

Battery Capacity	10000mAh
Wireless Output	5W, 7.5W, 10W, 15W
USB-C Input	5V/2A, 9V/2A, 18W
USB-C Cable Input	5V/3A, 9V/2A, 18W
USB-C Cable Output	5V/3A, 9V/2.22A, 12V/1.67A, 20W
USB-C Cable + Wireless Output	5V/3A
Product Weight	245g
Product Dimension	19 x 71 x 110 mm
Model Number	PDPBFCH065

Product Features

- a.** Strong magnetic hold: Securely attaches to your device, ensuring a stable wireless charging connection without slipping off.
- b.** 10000mAh capacity: Provides ample power to charge your devices multiple times, offering long-lasting performance.
- c.** 20W fast charging output: Delivers quick charging speeds to power up your devices efficiently.
- d.** Integrated USB-C input/output cable: Eliminates the need for extra cables, providing convenience for on-the-go use.
- e.** Secure foldable stand: Allows for hands-free charging and easy device viewing during use, perfect for video watching or browsing.
- f.** Compact and portable design: Lightweight and easy to carry, making it ideal for travel or everyday use without taking up much space.
- g.** MagSafe compatibility: Seamlessly works with MagSafe-enabled devices for wireless charging with ease.
- h.** Sleek, modern design: Stylish and durable, designed to complement your tech accessories and built to last.

Charging Instructions

- 1. MagSafe Wireless Charging:**
 - a.** Ensure your device is compatible with MagSafe charging.
 - b.** Align the magnetic charging pad on the power bank to the back of your device.
 - c.** The device will begin charging wirelessly once properly aligned.
 - d.** For optimal performance, ensure the wireless charging output is set to 15W by checking the device's charging settings.
- 2. Wired Charging with Retractable Cable:**

- a. Pull out the integrated USB-C retractable cable from the power bank.
- b. Connect the USB-C end to your device or a compatible charging port.
- c. Ensure the cable is fully extended for proper charging.
- d. The power bank will automatically provide charging through the cable (5V/3A, 9V/2.22A, 12V/1.67A, or 18W depending on your device).

3. Charging the Power Bank:

- a. Use the USB-C input to charge the power bank.
- b. Connect the USB-C cable (included) to a power source.
- c. Charging status will be indicated by the power bank's LED.

LED Indicators

The LED indicators on your power bank provide an easy way to monitor its battery status:

- 4 Lights:** 76-100% charge – Your power bank is fully charged or near full.
- 3 Lights:** 51-75% charge – There's more than half of the battery left.
- 2 Lights:** 26-50% charge – The battery is in the mid-range, and a recharge may be needed soon.
- 1 Light:** 0-25% charge – The battery is low and should be charged as soon as possible.

The green LED will glow when the power bank is in use or charging, letting you know it's ready for use.

Product Design

- | | |
|----------------------------|-------------------------|
| 1. Wireless Charging Pad | 4. LED Indicator Lights |
| 2. USB-C Cable | 5. Cable Holder |
| 3. Stand/Support Kickstand | |



Usage Instructions

1. Initial Charging:

Upon first use, it is essential to fully discharge the product, followed by a complete recharge. This initial cycle ensures optimal battery performance and longevity.

2. Handling and Safety:

Avoid disassembling, impacting, puncturing, or exposing the product to fire or extreme heat. These actions can compromise the battery's integrity and pose safety risks.

3. Battery Condition:

If the battery shows signs of swelling, deformation, or any abnormality, immediately stop using the product and contact customer support for guidance. Using a damaged battery can be hazardous.

4. Temperature and Pressure Guidelines:

Do not use the product in environments with high temperatures or extreme pressure conditions. Excessive heat and pressure can affect the battery's functionality and lifespan.

5. Storage:

Store the product in a dry, cool environment at room temperature. Ensure that the battery does not come into contact with water, as exposure could damage the device and battery.

6. Child Safety:

Keep the product out of reach of children. Accidental use or improper handling can lead to accidents, especially when the product is not being used correctly.

7. Regular Charging:

To maintain optimal battery health, ensure the product is charged and discharged at least once every two months. This practice helps prevent battery degradation over time.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference; and

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for assistance.

RF warning statement:

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Disposal of Used Batteries

1. Please do not dispose of batteries or accumulators with household waste at the end of their life. They must be disposed of separately to avoid environmental harm.

2. Battery symbols: Batteries containing hazardous materials are marked with specific symbols:

Cd = Cadmium

Pb = Lead

Hg = Mercury

These symbols appear below the crossed-out trash can icon.

3. Return of used batteries: You are legally obligated to return used batteries and accumulators.

a. You can return them free of charge at designated collection points such as retail stores.

b. You can obtain information on local collection points from your city or local government.

- 4.** Environmental and health precautions: Batteries may contain harmful substances. Special care should be taken when handling batteries containing lithium. Proper disposal and recycling of batteries help prevent negative effects on human health and the environment.
- 5.** Waste prevention: To minimize waste, use batteries with longer lifespans or opt for rechargeable batteries.
 - a.** Avoid leaving discarded batteries in public places or improperly disposing of them.
 - b.** Consider reconditioning or repairing the battery instead of discarding it.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**