

PORODO
LIFESTYLE



Porodo Lifestyle
MiniSpin ELECTRIC
CLEANING BRUSH

SKU: PDS3CBWH

Table of Contents

Product Overview	2
Specifications	2
Product Features	3
Operation Instructions	3
Troubleshooting	5
Usage Instructions	5
FCC Statement	6
Disposal	7
Warranty	8
Contact Us	8

Product Overview

The Porodo MiniSpin Electric Cleaning Brush offers powerful and efficient cleaning with its 360° rotating design, ensuring deep cleaning for various surfaces. It features multiple interchangeable brush heads, including a sharp tip, scrub brush, soft surface pad, scouring pad, and sponge, providing versatility for different cleaning tasks. With dual-speed settings, the brush allows users to adjust for gentle or intense cleaning, while the IPX6 water resistance ensures durability even in wet environments. The brush is equipped with a smart power display that shows the battery status, and it charges quickly via Type-C fast charging for convenience.

Specifications

Input	DC 5V
Rated Power	10W
Battery Capacity	1200mAh
Motor Speed	320RPM
Working Time	45 Minutes
Water Resistant Level	IPX6
Charging Interface	Type-C
Net Weight	275g
Product Size	33.8 x 77 x 134.9mm
Model Number	PDS3CB

Product Features

- 1. Rotating Deep Clean:** Ensures thorough and efficient cleaning from all angles with 360° rotation.
- 2. Multiple Brush Heads:** Includes a sharp tip, scrub brush, soft surface pad, scouring pad, and sponge for versatile cleaning.
- 3. Dual-Speed Cleaning:** Choose between gentle or intense cleaning depending on the task.
- 4. IPX6 Water Resistance:** Safe to use in wet environments without worry of damage.
- 5. Smart Power Display:** Displays the current battery level for easy monitoring.
- 6. Type-C Fast Charging:** Charges quickly for uninterrupted use.

Operation Instructions

1. Read the Instruction Manual

Before use, please carefully read the accompanying manual to ensure correct operation.

2. Charging Preparation

After removing the silicone plug, plug the charger into the device to charge.

3. Operation Gear Switching

After turning on, press the power button briefly to switch to the first gear. Press again to switch to the second gear.

4. Brush Head Installation

Align the brush head with the machine slot and gently insert it until it is securely in place.

5. Power On

Press and hold the power button for about 2 seconds to turn on the device.

6. Gear Description

The device provides two gears: the first gear is the soft mode, and the second gear is the strong mode.

7. Add Cleaning Solution

Pour an appropriate amount of cleaning solution into the brush head.

8. Start Cleaning

Aim the brush head at the area to be cleaned and start cleaning.

9. Shutdown Operation

After finishing cleaning, press and hold the power button for 2 seconds to turn off the device.

10. Brush Head Replacement


Brush heads can be easily replaced according to need.

11. Best Use

To ensure optimal cleaning results, it is recommended to keep the brush head at a 90° perpendicular angle to the cleaning surface and apply slight pressure.

12. Attention During Charging

Do not turn on the device while charging.

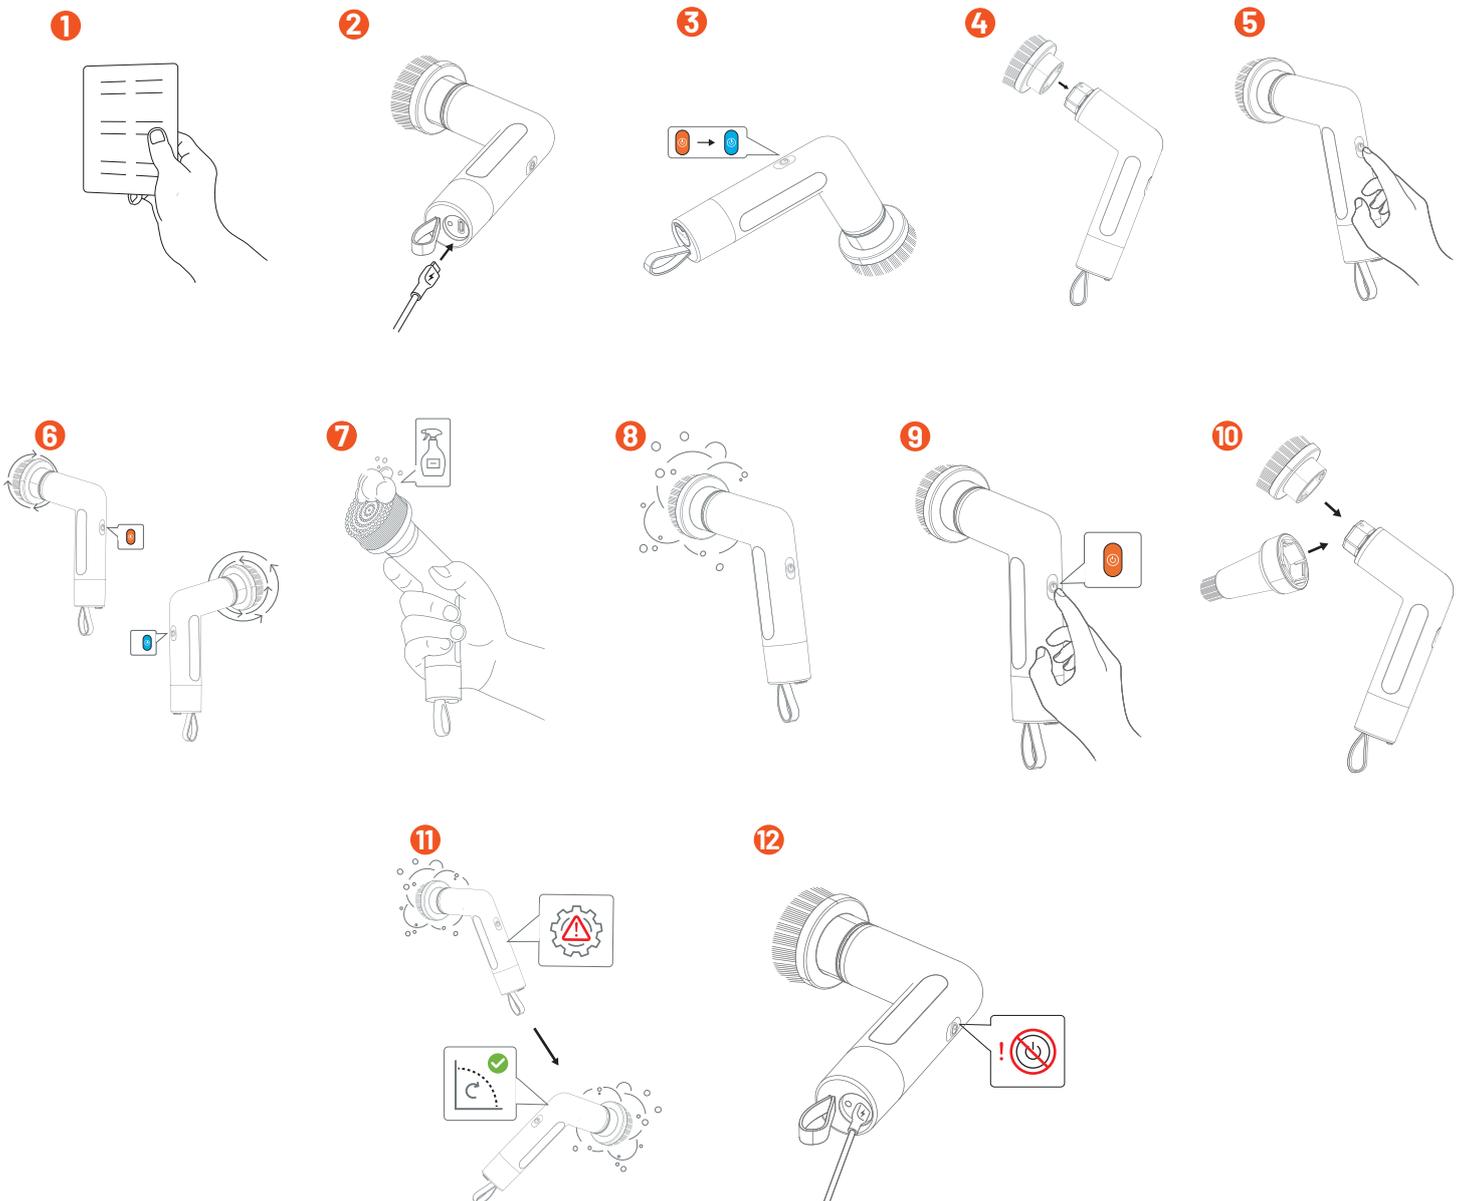

Troubleshooting

1. Device not working

Reason: Low battery level

Solution: Charge the product fully.

2. Device cannot be turned on/off

Reason: Power button not pressed properly

Solution: Press and hold the power button for 1 second to turn it on/off.

3. Sudden shutdown during use

Reason: Low battery level, high cleaning resistance, blocked rotor

Solution: Charge the product and restart it.

4. Unable to charge

Reason: Charging cable not properly plugged in, incorrect charging cable

Solution: Ensure the charging cable is plugged in correctly and use the specified cable.

Usage Instructions

1. This product is not a toy and should not be used by children. It is recommended for users aged 16 and above.

2. This is a household cleaning tool and is not suitable for industrial or harsh environments.

3. If the spindle joint of the cleaning brush is damaged, discontinue use and contact after-sales service promptly.

4. Do not use this product for cleaning humans or animals.

5. Avoid placing the product in areas with excessively high temperatures during charging.

6. The product may heat up in the front section while in use; this is normal and not a malfunction.
7. Do not disassemble the unit yourself. Only use the specified batteries and connectors.
8. If the product is not in use for an extended period, ensure it is fully charged before storage. Recharge it every 6 months if not used frequently.
9. Follow the product instructions carefully to prevent unnecessary damage to the product or the object being cleaned.
10. Recycle battery packs in an environmentally friendly manner.
11. Always turn off the device power when disassembling the battery pack.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference; and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for assistance.

RF warning statement:

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Disposal

This product must not be disposed of as unsorted household waste.

It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**