



GREEN LION



Green Lion
BLEND MAX
PORTABLE JUICER

SKU: GNBLNDMXPJ

Model No: GL-JU21

Table of Contents

Product Overview	2
Specifications	2
Product Components	3
Preparation	4
Operation Guide	4
Cleaning the Blender	4
Charging Instructions	4
Food-grade materials	5
Troubleshoot	5
Precautions	6
Maintenance	7
LED Indicator	7
Material Content	8
Disposal	9
Warranty	9
Contact Us	9


Product Overview

The Green Lion Blend Max Portable Juicer is a compact and powerful solution for on-the-go blending. Equipped with two 2000mAh USB-C rechargeable batteries, it offers a 20-second blending cycle, making it perfect for quick smoothies or juices. The juicer features a 75W motor, 6 powerful blades, and a 20,000 RPM motor that easily crushes ice and frozen fruits. The 650ml capacity BPA-free bottle is dishwasher safe for convenient cleaning and includes a built-in carry handle for portability. With its anti-slip base and portable design, the Green Lion Blend Max ensures a reliable and effortless blending experience wherever you are.

Specifications

Model No.	GL-JU21
Material	AS, ABS, 304 Stainless Steel
Bottle Capacity	650 mL
Battery Capacity	2000mAh*2
Charging Time	4 Hours
Working Time	Up to 15 Blends
Charging Port	USB-C
Motor Speed	20000 rpm
Motor Power	75W
Working Voltage	7.4V
Product Weight	710 g
Product Dimension	277*87*87 mm

Product Components

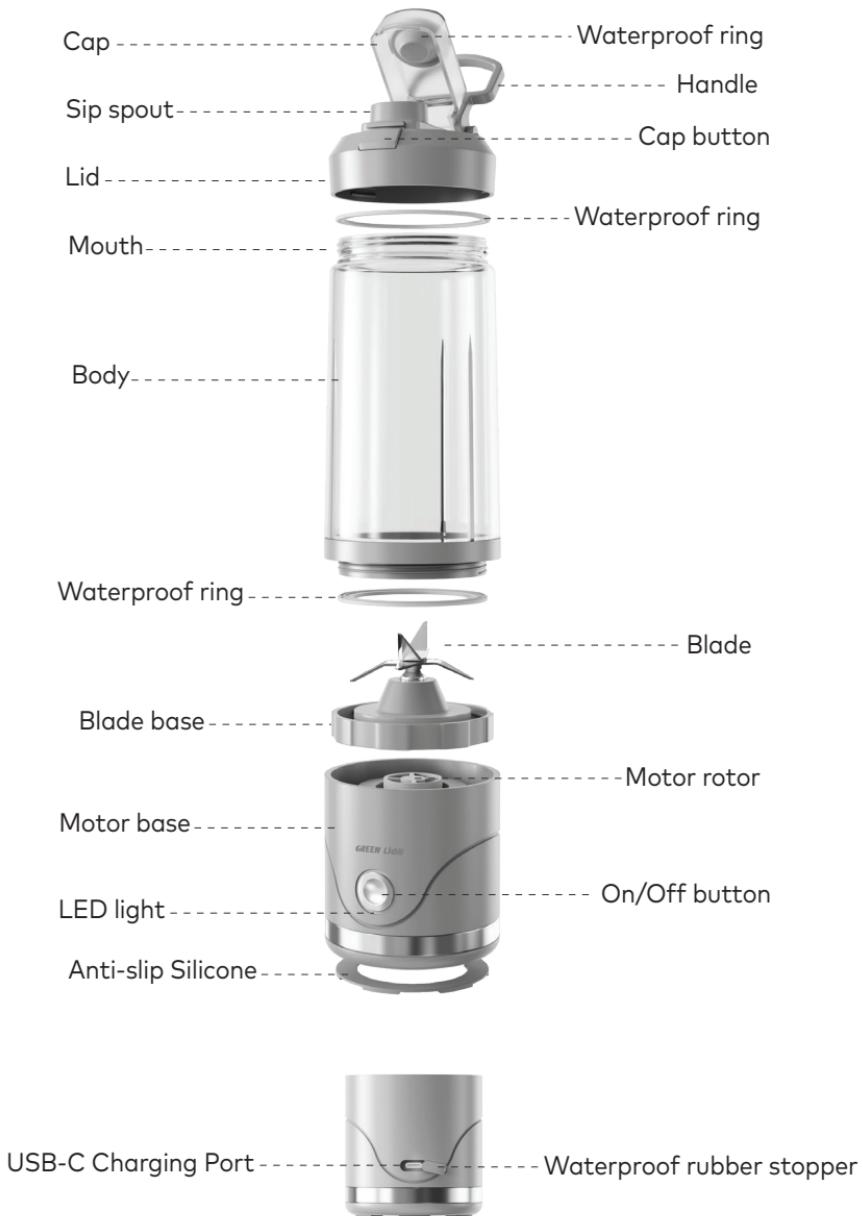

Preparation

1. Unscrew the cap: one hand holds the body while the other twists the lid.
2. Cut vegetables or fruits into 2-3 cm diameter pieces, then add them to water or another drink of your choice.
3. Securely tighten the cap to prevent leaks.
4. Ensure the bottle is properly attached to the base, then proceed with the operation.

Operation Guide

1. Hold the body of the juicer in one hand and press the button with the other hand to start.
2. If larger ingredients become stuck in the blades, gently shake the body to release them.
3. Press the button to run the juicer for 20 seconds. If more time is needed, press the button again to continue.
4. Once the juicing is complete, open the bottle and enjoy your drink.

Cleaning the Blender

1. Fill the bottle halfway with water and press the button for 20 seconds. This will clean the blade. The plastic bottle (apart from the host device) can be washed with water.
2. For a complete cleaning, twist off the blade base from the cup body and wash both the body and the blade under running water. Once clean, tighten them back together clockwise. The LED light on the base button will flash five times to indicate that the installation is successful.

Charging Instructions

1. Please connect the charger to the input at the back of the device. You can charge the device by mobile chargers too.

2. When the indicator light turns blue, the charging is completed.

NOTE: Do not start the product while charging.

Food-grade materials

Food-grade materials		
Component name	Material	Standard
Plastic	AS resin	GB 2016-4806.7
Metal	Blade material: 403 steel	GB 2016-4806.9
Waterproof	Silicone rubber	GB 2016-4806.11

Troubleshoot

1. Product Won't Start:

Check: If used continuously for a long time, is the blade stuck by fruit, is the plastic bottle detached from the host device, or is the battery out of charge?

Solution: Wait for the motor to cool down. Remove the stuck fruit, ensure the plastic bottle and host device are properly connected, and use it after fully charging.

2. Food Ingredients Can't Be Stirred:

Check: Is there too much or too little food, are the cut cubes too big or hard, or does the food contain too little water?

Solution: Add the proper amount of food and cut it into smaller cubes. Add water or milk as needed.

3. There is a Smell of Burns:

Check: Has the juicer been used continuously for a long time?

Solution: The high-power juicer may generate a smell due to friction. Don't worry, it's not a product malfunction.

4. Red and Blue Light Flickers Alternately, and the Motor Won't Work:

Check: Is the safety device activated, or is the battery out of charge?

Solution: Recheck or reset the plastic bottle and host device, and charge the device.

5. Red Light Flickers and Motor Won't Work:

Check: Is the device overloaded (faulty operation alert)?

Solution: Adjust the food inside the bottle and restart the device.

Precautions

1. Do not separate the plastic bottle from the host device or open the bottle while the juicer is operating, as this may cause product failure or physical injury.
2. Use with caution to avoid injury; the stainless steel blade is very sharp.
3. Keep the host device away from water or other liquids to avoid electric shock.
4. Do not disassemble the product until the motor and blade have stopped working.
5. Avoid using the product continuously for extended periods to prevent performance depreciation or other issues.
6. Do not press the 'ON/OFF' button when the plastic bottle and host device are separated, as it is extremely dangerous if the safety device is not functioning properly.
7. Keep the product out of reach of children.
8. Do not operate the product when the bottle is empty, as this may cause the motor to overheat.
9. Do not expose the plastic bottle or cover to water hotter than 70°C to avoid temperature distortion.
10. Do not disassemble, modify, or repair the product, as this may lead to malfunction or risks such as explosion, fire, or electric shock.
11. Keep the product away from direct light, microwave ovens, electric heaters, and other heating devices to avoid distortion or discoloration.
12. Do not wash the product with banana oil, gasoline, scouring powder,

or any corrosive liquid, as these may damage the surface.

13. Do not use the product for business purposes, as this may lead to performance degradation or reduced lifespan.

Maintenance

1. Ensure that the blade has stopped before cleaning the product.
2. Avoid using steel balls, abrasive cleaners, or corrosive liquids (such as gasoline or acetone) to clean the product.
3. The main unit can be quickly rinsed under a tap and wiped dry. Do not soak it in water or other liquids to prevent damage or leakage.
4. Wash the inside of the cup and the parts that come into contact with food. Rinse with water and dry promptly.
5. For quick cleaning, add an appropriate amount of clean water to the cup, tighten the host, and run the switch for ten seconds.
6. When storing, ensure the product is clean, dry, and placed in a well-ventilated area away from direct sunlight.

LED Indicators

1. The LED light will be red while the device is charging, and blue when it is fully charged.
2. Once the battery is full, press the button, and the light will turn blue, indicating the device is ready to use.
3. If the battery is low, the red and blue lights will flash alternately, and the device will not work.
4. If the battery is completely drained, the juicer will not function.
5. Quiescence mode: After stopping, the device will automatically enter quiescence mode after 15 seconds.
6. Please operate the device only after it has finished charging.

Material Content

Component name	Hazardous material					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Plastic components	<input type="circle"/>					
Hardware components	<input type="circle"/>					
Container	<input type="circle"/>					
Motor assembly	X	<input type="circle"/>				
Battery	X	<input type="circle"/>				
Data cable	X	<input type="circle"/>				

The table follows SJ/t11364 standards.

O: The content of this hazardous component is within the prescribed limits of GB/T 26572.

x: The content of this hazardous component exceeds the prescribed limits of GB/T 26572.

Remark: Substances marked with "x" cannot be reduced at the moment due to industry technical limitations.

 Marking for the restriction of the use of hazardous substances	<p>Environmental Protection Use Period: 10 years. The hazardous material will not lead to leakage or mutation. Operating the device according to instructions will not cause pollution or harm to the body.</p> <p>Recycling Information: This product is recyclable. After the environmental protection use period, if the product no longer works, it should be properly handled by qualified enterprises and not discarded carelessly.</p>
--	---

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.greenlion.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
<https://www.greenlion.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
Website: <https://www.greenlion.net/>
Sales: sales@greenlion.net
Service Support: Support@greenlion.net
Telegram: [@greenlion_global](https://t.me/greenlion_global)
Instagram: [@greenlion_global](https://www.instagram.com/greenlion_global)