



**GREEN LION**



**Green Lion**  
**OUTDOOR WIRELESS**  
**SPEAKER**

SKU: GNALSPKR5WBK

Model No: GL-SP26

# Table of Contents

Product Overview	2
Specifications	2
Safety Precautions	3
Product Design	3
The speaker's battery performance	4
Connecting status	5
Playing mode	5
Adjusting Volume and Song	6
Hands-Free Functionality	6
Reset setting	7
Package including	7
TWS (True Wireless Stereo) Connection	7
TWS Disconnect	8
Maintenance Speaker	8
Important Notes	9
FCC Statement	9
IC Caution Statement	11
Troubleshooting Guide	12
Disposal	13
Warranty	13
Contact Us	13

## Product Overview

The Green Lion Alps Wireless Speaker is a portable, pocket-friendly Bluetooth speaker designed for outdoor use. It features an IPX4 water resistance rating, 5W power, and up to 4 hours of playtime. With an adjustable strap, USB-C charging, and true stereo pairing, this lightweight speaker offers easy controls and is perfect for on-the-go music enjoyment. It's built to be durable and convenient, making it a great choice for music lovers who need a reliable and portable audio solution.

## Specifications

Model No	GL-SP26
Material	ABS + Fabric + Silicone
Battery	1200mAh
Power	5W
Voltage	3.7V
Bluetooth	V5.4
Transmission Distance	10m
Speaker	4Ω 45mm
Waterproof	IPX4
Charging Port	USB-C
Charging Time	2 hrs
Playtime	4 hrs
Product Weight	210g
Product Dimensions	67*77*90 mm

## Safety Precautions

### A. Cautions

Ensure that you only charge the speaker using devices rated and marked with 5V to prevent damage to the speaker.

Opening the speaker will void the warranty and may cause irreversible damage to the product.

Rechargeable batteries have a limited number of charge cycles. Battery performance and the number of charge cycles may vary based on usage and settings.

Avoid placing the speaker near high-temperature heat sources to ensure optimal performance.


To maintain your warranty, refrain from attempting to repair the product yourself.

### B. Warning

Any changes or modifications made to the equipment that have not been explicitly approved by the designated compliance authority may result in the revocation of the user's right to operate the equipment.

This version provides clarity and emphasizes the consequence of non-compliance while maintaining the formal tone.

## Product Design

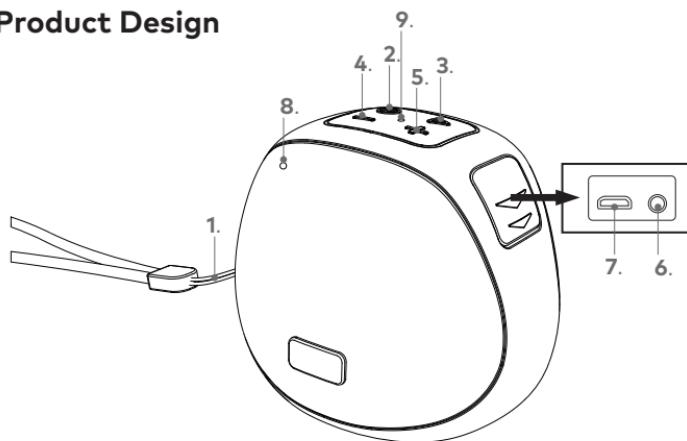

1. Lanyard
2. Power Button: Power on/off, switch between playing modes, reset
3. Pause Button: Play/pause, answer calls, TWS
4. Volume Down Button: Previous song, decrease volume
5. Volume Up Button: Next song, increase volume
6. AUX IN Port
7. USB Charging Port
8. Microphone
9. Bluetooth Indicator

## The speaker's battery performance

The speaker is powered by a built-in, rechargeable battery.

### A. CHARGING

Connect the Charging Cable: Use the supplied charging cable to connect the speaker to the charging port. You can plug it into a USB port on your computer or a USB charger.

Charging Indicator: During charging, the LED light will appear red. Once fully charged, the LED will turn off.

Charging Recommendation: If the speaker has not been used for 7 days or more, it is advisable to charge it for at least 10 minutes before powering it on. After this brief charging period, you can continue using the speaker while charging.

### B. POWER ON/OFF

**Power On:** To turn on the speaker, press and hold the power button for 3 seconds. The Bluetooth indicator light will illuminate, signaling that the speaker is ready to connect to Bluetooth devices.

**Power Off:** To turn off the speaker, press and hold the power button for 3 seconds. The Bluetooth indicator light will turn off, confirming that the speaker is powered off.

## Connecting status

### A. Connecting the speaker

Power on the speaker. The Bluetooth indicator will flash white.

On your device, search for Bluetooth devices and select the speaker from the list.

Once connected, you will hear an indication sound confirming the successful connection.

The Bluetooth indicator will turn solid white when the connection is complete.

Note that only one Bluetooth device can be connected to the speaker at a time. If you wish to connect a different device, you must first disconnect the current one.

### B. Disconnecting the speaker

To disconnect the speaker when connected via Bluetooth, double-click the power button.

### C. Reconnect the speaker

Some Bluetooth devices support automatic reconnection. For such devices, the speaker will automatically reconnect once powered on.

However, if the connected device does not support automatic reconnection, the speaker will not reconnect automatically.

In cases where the speaker is not connected to any device, simply double-click the power button to reconnect to the last device that was previously paired.

## Playing mode

Press the power button briefly to toggle between different playing modes: BT (Bluetooth) and AUX.

## A. AUDIO CABLE CONNECTION

To connect via audio cable:

Power on the speaker.

Connect a 3.5mm audio cable from the speaker to your device.

The speaker will now be connected to your device.

## B. Pause button functionality

**Short Press:** To control music playback: Press to play or pause the music. When there is an incoming call: Press to answer the call. When you're receiving a call: Press to hang up the phone call.

**Long Press:** When you're making a call: Hold for 2 seconds to reject the call. To enter TWS (True Wireless Stereo) connection: Hold for 2 seconds once the speaker is connected. To disconnect the TWS connection: Press and hold for 2 seconds.

**Double Press:** When the speaker is connected to your phone via Bluetooth: Press twice to redial the last call.

## Adjusting Volume and Song

Increase Volume: Short press the "+" button.

Decrease Volume: Short press the "-" button.

Previous Song: Long press the "-" button.

Next Song: Long press the "+" button.

## Hands-Free Functionality

**1. Connecting Your Phone:** Connect your phone to the speaker via Bluetooth. The speaker will automatically play ringtones for any incoming calls.

**2. Answering a Call:** Short press the pause button to accept a call. You can then communicate through the speaker's microphone. The speaker will continue playing music after the call ends.

3. Rejecting a Call: Long press the pause button on the speaker to reject an incoming call.
4. Redialing the Last Call: When connected to your phone, press and hold the pause button to redial the last call.

## **Reset setting**

### **A. Reset Functionality**

To reset the speaker and turn it off, hold the power button for 8 seconds. This will automatically reset the speaker.

### **B. Automatic Power-Off**

The speaker will automatically turn off after 10 minutes of inactivity, provided that Bluetooth is not connected, and no music is playing.

## **Package including**

1 pcs\* Q2 Wireless Speaker

1 pcs\* Product Manual

1 pcs\* Micro USB Cable

## **TWS (True Wireless Stereo) Connection**

### **1. Power On Both Speakers**

Ensure both speakers are turned on and ready for pairing.

### **2. Activate Pairing Mode**

Press and hold the Play/Pause button on one of the speakers for about 2 seconds, or until you hear a brief "beep" sound. The speaker you initiate this action on will be the primary one for the pairing process.

### **3. Release the Play/Pause Button**

Once you hear the "beep," release the Play/Pause button. It may take a few moments for the speakers to connect with each other. Monitor the indicator lights on both speakers to determine which one is

assigned to the left and right channels:

### 3. Release the Play/Pause Button

Once you hear the "beep," release the Play/Pause button. It may take a few moments for the speakers to connect with each other. Monitor the indicator lights on both speakers to determine which one is assigned to the left and right channels:

## TWS Disconnect

Press and hold the Play/Pause button on one of the speakers for approximately 2 seconds. Release the button once you hear a "beep" sound to confirm the action.

## Maintenance Speaker

### Issue 1: Connection Failed

#### Solution:

1. Verify that the multifunction indicator light on the speaker flashes white. If the light is not on, please power on your speakers. If it still does not light up, try charging the speaker.
2. If the speaker's light is on but the connection isn't successful, check for interference from other nearby Bluetooth devices. Turn off or disconnect any unnecessary Bluetooth devices to improve the connection.
3. Restart your device's Bluetooth search function. This may help resolve any connection issues.

### Issue 2: Audio Breaks During Playback

#### Solution:

1. Ensure the distance between your player and the speaker is within the effective Bluetooth range (typically 12-8 meters). Exceeding this range can cause connection instability.
2. Confirm there are no physical obstructions between the player and the speaker that may disrupt the signal.

## Important Notes

This product has been carefully designed with attention to safety performance. To ensure safe operation, please follow these guidelines:

- 1. Stable Placement:** Position the speakers securely to prevent any risk of falling or tipping, which could lead to damage or personal injury.
- 2. Handling:** Avoid dropping, disassembling, opening, crushing, bending, or puncturing the speakers. Mishandling can compromise their functionality.
- 3. Distance from Heat Sources:** Keep the speakers away from heat sources such as radiators, heaters, stoves, or any other equipment that generates heat, to prevent damage.
- 4. Professional Maintenance:** If the speakers are damaged for any reason, please contact a qualified professional to perform repairs.
- 5. Power Switch Off:** Before cleaning the speakers with a dry cloth, ensure that the power switch is turned off and the power cord is unplugged from the outlet.
- 6. Sound Level:** For health and comfort, adjust the sound to a suitable level to avoid hearing damage.

## FCC Statement

- 1.** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference; and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
- 2.** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference; and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for assistance.

**RF warning statement:** The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

## IC Caution Statement

Radio Standards Specification RSS-Gen, Issue 5 - English:

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s).

Operation is subject to the following two conditions:

This device may not cause interference.

This device must accept any interference, including interference that may cause undesired operation of the device.

RF Exposure Statement:

The device has been evaluated to meet the general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

### French:

Cet appareil contient des émetteurs/récepteurs exemptés de licence conformes aux RSS d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes :

Cet appareil ne doit pas causer d'interférences.

Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

Déclaration d'exposition RF :

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. L'appareil peut être utilisé dans des conditions d'exposition portable sans restriction.

# Troubleshooting Guide

## 1. The speaker does not turn on

Ensure the speaker is fully charged. If not, plug it in to recharge.

Check that the power button is not malfunctioning or stuck.

## 2. The speaker does not turn off or is unresponsive

Reset the speaker: Press and hold the power button for 10 seconds to reset the speaker. This should restart the system and turn it off automatically.

## 3. There is no sound

Adjust the volume: Make sure the volume on both the speaker and the connected device is turned up.

Bluetooth connection: Ensure your Bluetooth device is within range (usually up to 10 meters).

**Signal interference:** Check for any obstacles that might block or disturb the Bluetooth signal between the speaker and the device.

**Device connectivity:** Confirm that the speaker is properly connected via Bluetooth to your device.

## 4. There is poor sound quality

**Proximity to the speaker:** Move your device closer to the speaker to ensure a stronger connection.

**Remove obstacles:** Clear any obstacles between the speaker and the device to improve signal strength.

## 5. Cannot connect the device with the speaker

**Disconnect other devices:** Ensure no other devices are connected to the speaker and try again.

**Bluetooth range:** You can force a disconnection by moving out of Bluetooth range (10 meters). This should help reset the connection.

To maintain optimal performance, it is recommended that you charge your device at least every 3 months to avoid damaging the internal battery and ensure it continues

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

## Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.greenlion.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.greenlion.net/warranty>

## Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: <https://www.greenlion.net/>

Sales: [sales@greenlion.net](mailto:sales@greenlion.net)

Service Support: [Support@greenlion.net](mailto:Support@greenlion.net)

Telegram: [@greenlion\\_global](https://t.me/greenlion_global)

Instagram: [@greenlion\\_global](https://www.instagram.com/greenlion_global)