

**PORODO
GAMING**



Porodo Gaming
POWERPLAY
Power Bank Gaming Controller

SKU: PDX642GY

Table of Contents

Product Overview	2
Specifications	2
Product Components	3
Charging Instructions	4
Using a TF Card (Optional)	4
Button Functions	5
Battery and Maintenance Tips	5
Troubleshooting	6
Safety Instructions	7
Material Content	9
Disposal	9
Warranty	10
Contact Us	10

Product Overview


The Porodo Gaming PowerPlay Power Bank Gaming Controller is a compact all-in-one gaming companion built for players who want uninterrupted play anywhere. It combines a handheld gaming controller with a built-in power bank, featuring a vivid 2.8-inch display, responsive 3D dual joysticks, and an ergonomic, lightweight design for comfortable extended sessions. With fast charging support, USB-C connectivity, and 15W wireless charging, it keeps both the controller and your devices powered simultaneously. Integrated LED lighting adds a subtle gaming aesthetic, while support for up to 4000 retro-style games turns it into a portable entertainment hub. Designed for convenience, mobility, and continuous play, it delivers gaming and charging in one smart, travel-ready device.

Specifications

Material	ABS+PC
Battery Capacity	10000mAh Lithium Polymer
USB-C Input	5V/3.0A, 9V/2.0A, 12V/1.5A, 18W Max
USB-C Output	5V/3.0A, 9V/2.22A, 12V/1.5A, 20W Max
Wireless Output	2.5W/5W/7.5W/10W/15W
Working Timer	12h (Games), 10h (Movies) Max


Charging Time	2.2 h
Display Size	2.8"
Utilization Rate	≥65%
Support	Games, Movies, Music, eBooks, Photo
T-Card Expansion	4000 Games
Product Weight	210g
Cable Length	15cm
Product Size	19.15 x 70.6×116.8mm
Model Numbe	PDX642

Product Components

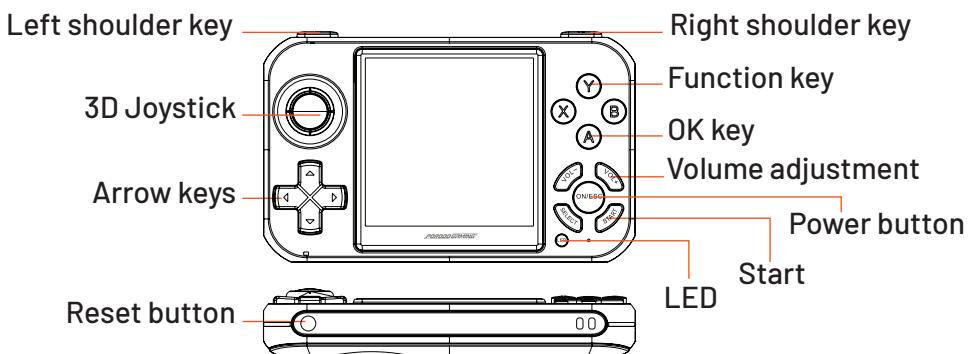


Charging Instructions

1. Charging the product: This product can be charged by connecting it to a Type-C or iPhone interface using a charger. You may also use any suitable USB-compatible DC adapter connected to a power outlet. After the connection is complete, press the power switch on the back of the device (Figure 1) to start the game console.
2. Charging mobile phones and digital devices: Use the charging cable to connect the power bank to the device you want to charge. Once connected, the mobile phone or digital device will indicate that charging is in progress. When the device is fully charged, unplug the charging cable.
3. Using wireless charging: Place the game console with the wireless charging area on the back of the device in contact with the back of the mobile phone to activate the wireless charging function.

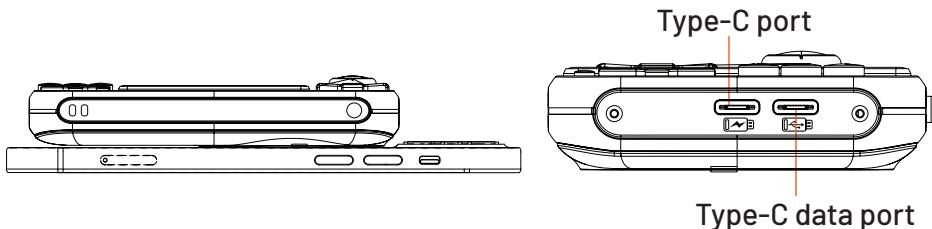

Using a TF Card (Optional)

If you need to play other games, please copy the game software on a TF card, then insert it into the TF port on the side of the device to connect it (figure 3).

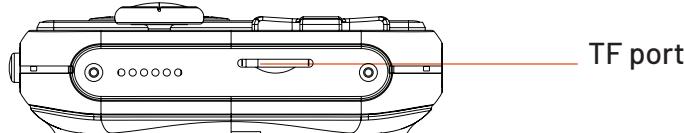

Button Functions

1. Button Function Overview

Press and hold the ON/ESC button for about 3 seconds to turn on the game console. Short-press the VOL+ / VOL- buttons to adjust the volume. Press ON/ESC to return to the main game menu. In the main menu, press SELECT to switch to the language interface. Press START to confirm and begin. Press the LED button to turn on the ambient light.

2. Main Menu Interface

After the game console starts, the main user interface will appear, allowing you to select games, movies, photo albums, e-books, music, file management, settings, and other functions. To select a game, press the A button to enter the game directory, use the directional keys to move left or right, and choose a game icon, then press the START button to confirm your selection.

3. Game Operation

After selecting a game, press the START button to begin playing. Press the START button again to pause the game, noting that this function may vary depending on the game. For the specific functions of the joystick and the A / B / X / Y buttons, refer to the in-game instructions. The joystick can also be used to control movement and direction.

Battery and Maintenance Tips

Before charging mobile phones or other devices, carefully check the required voltage and current of the devices to be charged. If incompatible, damage such as battery swelling, reduced battery lifespan, or damage to devices without short-circuit protection may occur.

1. When charging this product, please use a USB charger with an output voltage of 5V, 9V, or 12V, or a computer USB port.
2. Before use, ensure that the voltage of the device to be charged is compatible with this product.

3. During use, charging, or storage, if you notice an abnormal smell, unusually high temperature (slightly warm is normal), or any deformation, stop using the product immediately and contact the dealer.

4. Please fully charge the product before using it for the first time. If the product is not used for a long period, make sure to charge it at least once every three months. During extended use, the product may become slightly warm but will not overheat, which is normal.

5. When using this product to charge mobile phones or digital devices, confirm that the device displays a charging status to ensure the product is functioning properly.

6. When charging a device through this product, the device will draw power from this product first. After the device is fully charged, unplug the charging cable in time to avoid power loss.

7. Improper use or excessive self-consumption of the product or materials may shorten the product's lifespan or cause other damage, which is not covered by the warranty.

8. Do not disassemble or attempt to repair the product. Stop using the product and contact the dealer or manufacturer if it becomes overheated, deformed, damaged, or scratched.

Troubleshooting

If you need to play other games, please copy the game software on a TF card, then insert it into the TF port on the side of the device to connect it (figure 3).

Problem	Reasons	Solutions
The indicator does not display a full charge status after a long charging time.	1. Insufficient charging time. 2. Adapter or product malfunction.	1. Charge the product for 12 hours. 2. Consult the distributor or after-sales service.
The remaining power of the product cannot be detected.	1. No remaining power. 2. Power button or indicator malfunction.	1. Recharge the product. 2. Consult the distributor or after-sales service.

The product cannot charge other devices.	1. Low battery level of the product. 2. No power transmission through the USB cable or adapter. 3. Improper adapter selection. 4. The product's power management system prevents charging the device.	1. Recharge the product. 2. Replace the USB cable or adapter. 3. Use a connector compatible with the product's interface. 4. The product may be incompatible with the device.
The product can charge other devices, but cannot fully charge them.	The product's battery is depleted.	Recharge the product.
While charging other devices, the product suddenly stops working or fails to display power.	An external short circuit or overload triggers automatic shutdown for self-protection.	Recharge the product to reactivate it.

Safety Instructions

1. If the battery is not replaced correctly, there is a risk of explosion. Using an incorrect battery model may cause fire or explosion. Only the same or an equivalent battery type may be used for replacement, and replacement must be performed by qualified maintenance personnel only.
2. Do not expose batteries to sunlight, fire, or other high-temperature environments.
3. If a power adapter is used for charging, ensure that it is a compatible adapter with CCC certification and meets standard safety requirements.
4. Do not disassemble, strike, compress, or throw batteries into fire. If severe swelling occurs, stop using the product immediately. Do not place the product in high-temperature environments or use it after immersion in water.

5. During use, place the product in a well-ventilated area to allow proper heat dissipation. Do not place it on beds, bedding, inside packages, or in other enclosed environments that restrict heat dissipation.
6. Prevent contact with liquids such as rainwater, and keep the product out of reach of infants and young children.
7. Do not use or store this product in high-temperature or humid environments, and avoid direct sunlight exposure.
8. Operating temperature range: 0°C to 45°C. It is recommended not to operate the product below 0°C or above 45°C.
9. Storage temperature range: -5°C to 35°C. Do not store the product at temperatures above 35°C for extended periods.
10. Do not cover or obstruct the product with paper or other objects that may hinder heat dissipation and cooling.
11. Do not use this product without supervision.
12. Do not disassemble the device yourself, as it contains no user-serviceable parts.
13. Do not drop, shake, impact, or forcibly compress this product.
14. Do not short-circuit the cathode and anode of the product, as this may cause the device or external objects to catch fire.
15. Keep the product out of reach of children.
16. Before using this product, verify that the charger's output voltage matches the product specifications to avoid damage.
17. If the charger voltage does not match, it may cause the power bank to overload, resulting in smoke, fire, or other hazards.
18. Use chargers from reputable manufacturers and those certified with national CCC certification.
19. Unplug the charger promptly after the power bank is fully charged.
20. If you notice any abnormal odor, heat, discoloration, deformation, leakage, or other irregularities during use, stop using the power bank immediately.
21. If battery liquid comes into contact with skin, rinse immediately with clean tap water and seek medical attention promptly.
22. Do not use the product after immersion in water.
23. During use, contact with the product's indicator light area should not exceed 1 minute.


24. Dispose of the product properly when it is no longer needed.

Material Content

Part Name	Name of Hazardous Substance					
	Pb	Cd	Hg	Cr(VI)	PBB	PBDE
Battery	0	0	0	0	0	0
PCB	0	0	0	0	0	0
Plastic	0	0	0	0	0	0
Wrapping Paper	0	0	0	0	0	0
Packing Box	0	0	0	0	0	0
Electronic Parts	0	0	0	0	0	0

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

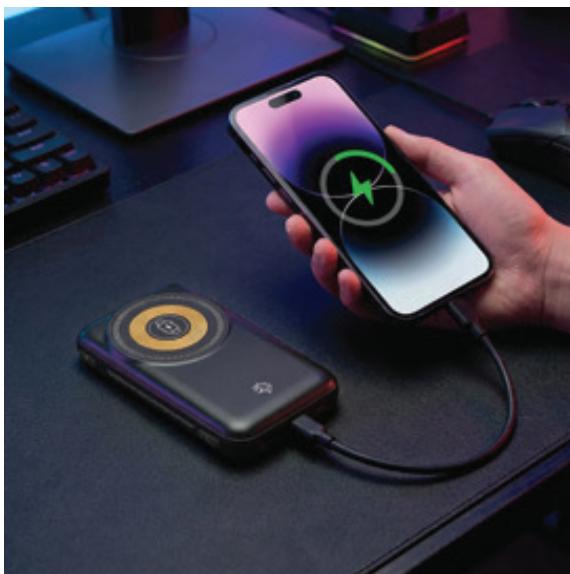

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: <https://www.porodo.net/>

Service Support: support@porodo.net

Instagram: [porodo](#)