

LePRESSO



LePresso  
**BrewWave  
Gooseneck Electric Kettle**

SKU : LPCFFGEK0021SL



# Table of Contents

Product Overview	2
Specifications	2
Safety Instructions	2
Schematic View	6
Initial Setup	6
Operation Guidelines	6
Boil-Dry Protection Guide	9
Cleaning and Maintenance	9
Disposal	10
Warranty	11
Contact Us	11

# Product Overview

The LePresso BrewWave Gooseneck Electric Kettle offers a 0.8L capacity and is made from durable SUS 430 stainless steel. It features a precise gooseneck spout for controlled pouring and digital temperature control for accurate water heating. The keep-warm mode maintains the desired temperature, making it ideal for tea, coffee, or other hot beverages. Stylish and practical, this kettle combines functionality with ease of use for an enhanced brewing experience.

## Specifications

Rated Voltage	220-240V
Rated Frequency	50-60Hz
Rated Power	1110-1300W
Maximum Capacity	800ml
Dimension	197 x 216 x 295mm
Material	Glass and Stainless Steel

## Safety Instructions

When using electrical appliances, always follow basic safety precautions, including the following:

1. Read all instructions before using the appliance.

- 2.** Before connecting the kettle to the power supply, ensure that the voltage indicated on the appliance (on the underside of the kettle and base) matches the voltage in your home. If it does not, contact your dealer and do not use the kettle.
- 3.** The base is designed only for use with this kettle and should not be used with other appliances.
- 4.** Do not operate the kettle without water, as this can damage the heating elements.
- 5.** Always unplug the kettle when it is not in use.
- 6.** Do not let the power cord hang over the edge of a table or counter, or allow it to touch hot surfaces.
- 7.** Do not place the kettle on or near a hot gas or electric burner, or in a heated oven.
- 8.** If the kettle is accidentally operated without water, the boil-dry protection will turn it off automatically. Let the kettle cool down before filling it with water and boiling again.
- 9.** Always place the kettle on a flat, firm surface to prevent it from tipping over. Keep the kettle out of reach of children.
- 10.** To prevent fire, electric shock, or injury, do not immerse the cord, plugs, or kettle in water or other liquids.
- 11.** Always pour boiling water slowly and carefully to avoid splashing.
- 12.** Be cautious when opening the lid for refilling when the kettle is hot.
- 13.** Close supervision is required when the kettle is used by or near children.
- 14.** Do not touch hot surfaces. Use the handle or the button to operate the kettle.
- 15.** Be extra careful when moving the kettle containing hot water.
- 16.** The kettle is not a toy. Do not allow children to play with it.
- 17.** Using attachments not recommended by the manufacturer can cause fire, electric shock, or injury.

**18.** While boiling water, avoid contact with steam from the spout, especially right after the kettle has turned off. Do not rush to open the lid.

**19.** Unplug the kettle when not in use and before cleaning. Let it cool before handling or cleaning.

**20.** Always ensure that the lid is properly closed before use. Do not remove the lid during boiling to avoid scalding.

**21.** If the supply cord is damaged, it must be replaced by the manufacturer, a service agent, or a similarly qualified person to avoid hazards.

**22.** Use the kettle only for its intended purpose.

**23.** Do not move the kettle while it is switched on.

**24.** The kettle should only be used with the stand provided.

**25.** Do not overfill the kettle, as boiling water may spill out.

**26.** Do not use the kettle outdoors.

**27.** Save these instructions for future reference.

**28.** This appliance has a grounded plug. Ensure that the wall outlet in your home is properly earthed.

**29.** This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless supervised or instructed by someone responsible for their safety.

**30.** To disconnect the kettle, turn the control to "off," then remove the plug from the wall outlet.

**31. Warning:** Be cautious to avoid spillage on the connector during cleaning, filling, or pouring. Always follow these cleaning instructions:

**a.** Unplug the appliance.

**b.** Do not clean the appliance while it is hot.

**c.** Clean with a damp cloth or sponge.

**d.** Never immerse the appliance in water or place it under running water.

- 32. Warning:** Improper use of the appliance may result in injury.
- 33. Warning:** The heating element surface remains hot after use.
34. Do not operate the appliance with a damaged cord or plug, or if it malfunctions or has been damaged in any way. Return the kettle to an authorized service facility for examination, repair, or adjustment.
35. Children should always be supervised to ensure they do not play with the kettle.
36. This device is only for household use.

### **Important Notes:**

#### **a. Polarized Plug Notice**

This appliance has a polarized plug, designed to fit into a polarized outlet only one way to reduce the risk of electric shock. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, consult a qualified electrician. Do not modify the plug in any way.


#### **b. Power Cord Safety**

1. A short power supply cord (or detachable cord) is provided to minimize the risk of entanglement or tripping over a long cord.
2. Longer detachable power cords or extension cords may be used with caution.

#### **3. If using a longer cord:**

- 3.1.** The electrical rating of the detachable power supply cord or extension cord should match or exceed the appliance's electrical rating.
- 3.2.** For grounded appliances, the extension cord should be a 3-wire grounding-type cord (for grounded plugs only).
- 3.3.** Ensure the longer cord is arranged so that it does not hang over the edge of counters or tables where it could be pulled by children or cause tripping.

# Schematic View

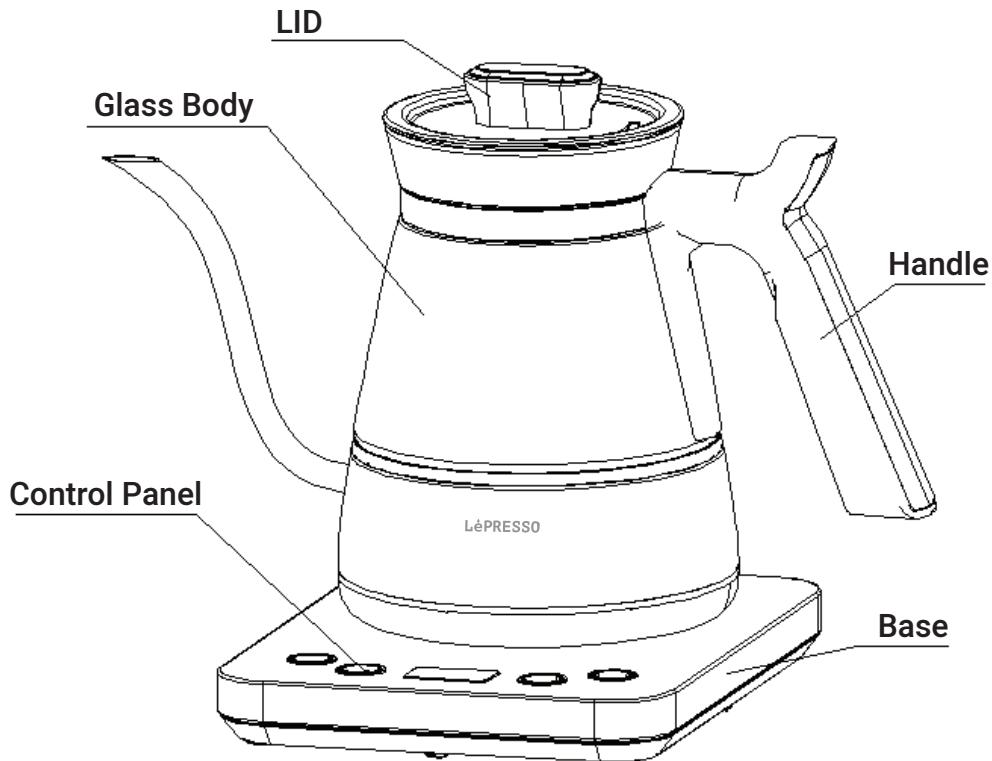

## Initial Setup

If you are using the kettle for the first time, it is recommended to clean it before use. Boil a full kettle of water twice and then discard the water.

## Operation Guidelines

### 1. Filling the Kettle

To fill the kettle with water, remove it from the power base and open the lid by pressing down. Fill the kettle between the minimum (0.5L)

and maximum (0.8L) marks. Do not overfill as water may spill out when boiling.

**Note:** Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure the lid is properly closed before plugging in the kettle.

## 2. Placing the Kettle on the Base

Close the lid and place the kettle back on the power base.

**Note:** Ensure the kettle is in full contact with the base.

## 3. Control Panel and Button Functions



**3.1. Standby Mode:** When the kettle is plugged in, all four lights on the control panel will light up along with the digital display, indicating the kettle is in standby mode.

**3.2. Boiling Function:** In standby mode, press the "switch" button to start boiling water at the default temperature of 100°C. The display will show the real-time water temperature, and once it reaches 100°C, the kettle will automatically shut off with a buzzer sound.

**3.3. Temperature Setting:** In standby mode, press the "+" or "-" buttons to set the desired temperature. Each press will increase or

decrease the temperature by 5°C, with a range from 50°C to 100°C. After selecting the temperature, press the "switch" button to start boiling. Once the set temperature is reached, the kettle will automatically shut off with a buzzer sound.

**3.4. Keep Warm Function:** After selecting the desired temperature, press the "keep warm/reservation" button to activate the keep-warm function. The kettle will heat the water to the set temperature and maintain it for 60 minutes. After 60 minutes, the kettle will automatically shut off with a buzzer sound.

**3.5. Reservation Function:** After selecting the desired temperature in standby mode, press the "keep warm/reservation" button for 3 seconds to activate the reservation function. Choose the desired time (1H, 2H, 3H, 4H, 5H, or 6H) using the "+" and "-" buttons, then press the "switch" button to start the countdown. The kettle will start boiling water once the countdown finishes. After boiling, the kettle will keep the water warm for 60 minutes.

**3.6. Celsius/Fahrenheit Switch:** The kettle displays temperature in Celsius by default. In standby mode, press both the "+" and "-" buttons for 3 seconds to switch between Celsius and Fahrenheit.

**3.7. Shutting Down the Kettle:** After boiling or maintaining the selected temperature, the kettle will automatically turn off with a notification sound. To manually turn off the kettle at any time, press and hold the "switch" button for 3 seconds.

#### **4. Pouring Water**

Lift the kettle from the power base and carefully pour the water. Be cautious, as boiling water may cause burns. Do not open the lid while the water is hot.

#### **5. Storage**

When not in use, the kettle may be stored on the power base. Ensure that the power supply is turned off when the kettle is not in use.

**Note:** Ensure the lid is securely closed before operating the kettle. If the lid is left open, water may spill out of the spout.

**Note:** Ensure power supply is turned off when kettle is not in use.

## Boil-Dry Protection Guide

If the kettle is accidentally operated without water, the boil-dry protection feature will automatically turn it off. If this happens, allow the kettle to cool down before adding cold water and restarting the boiling process.

## Cleaning and Maintenance

Always unplug the appliance and allow it to cool completely before cleaning.

Do not immerse the kettle or cord in any liquid or allow moisture to come in contact with these parts.

### **a. Removing Mineral Deposits**

Mineral deposits from tap water may cause discoloration inside the kettle. To remove this build-up, use a non-toxic liquid descaler.

Alternatively:

**1.** Fill the kettle with 3 cups of white vinegar and the remainder with water, and allow it to stand overnight (do not boil).

**2.** Empty the solution from the kettle. Use a damp cloth to clean any remaining stains inside the spout. Fill the kettle with clean water, bring it to a boil, and discard the water. Repeat if necessary, and the kettle will be ready for use.

### **b. Cleaning the Exterior**

Wipe the external housing with a soft, damp cloth or cleaner.

## Caution:

Do not use chemicals, steel wool, or abrasive cleaners to clean the kettle.

### c. Cleaning the Filter

Regularly clean the filter with a soft, damp cloth.

### d. Storage

When not in use, wind the power cord around the storage area under the kettle base.

Any other servicing should be done by an authorized service representative.

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



# **Warranty**

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website [\*\*https://www.lepresso.com/warranty\*\*](https://www.lepresso.com/warranty) and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

[\*\*https://www.lepresso.com/warranty\*\*](https://www.lepresso.com/warranty)

# **Contact Us**

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: [\*\*info@lepresso.com\*\*](mailto:info@lepresso.com)

Website: [\*\*https://www.lepresso.com/\*\*](https://www.lepresso.com/)

Instagram: [\*\*lepresso\\_official\*\*](https://www.instagram.com/lepresso_official)