



LePRESSO



# LePresso

## Drip Coffee Maker

SKU : LPCMDGBK



# Table of Contents

<b>Product Overview</b>	<b>2</b>
<b>Specifications</b>	<b>2</b>
<b>Safety Instructions</b>	<b>3</b>
<b>Product Components</b>	<b>5</b>
<b>Control Panel</b>	<b>5</b>
<b>Before the First Use</b>	<b>6</b>
<b>Operating Instructions</b>	<b>6</b>
<b>Delay Function</b>	<b>7</b>
<b>Cleaning and Maintenance</b>	<b>9</b>
<b>Removing Mineral Deposits</b>	<b>9</b>
<b>Hints For a Better-Tasting Coffee</b>	<b>10</b>
<b>Disposal</b>	<b>11</b>
<b>Warranty</b>	<b>11</b>
<b>Contact Us</b>	<b>11</b>

# Product Overview

The LePresso Drip Coffee Maker offers a convenient and customizable brewing experience. With the ability to adjust the strength, select preset programs, and set timers, it provides flexibility for personal preferences. The 1.25L glass carafe allows for up to 10 cups of coffee, perfect for home or office use. The brewing time is quick, taking only 11 minutes, and it features an auto-off function for safety. Designed to heat water to a maximum temperature of 78°C, the coffee maker ensures an optimal brewing temperature for a rich coffee flavor. Whether for personal enjoyment or sharing with others, this coffee maker makes every cup a satisfying experience.

## Specifications

Capacity	1.25L / 10-15 Cups
Power	1000W
Voltage	AC 220-240V
Frequency	50-60Hz
Filter Type	Nylon
Product Dimension	182x254x313mm
Weight	1.32kg
Power Cord	UK 3-pin

# Safety Instructions

1. Read all instructions.
2. Make sure your outlet voltage corresponds to the voltage stated on the coffee maker's rating label.
3. To protect against fire, electric shock, and injury to persons, do not immerse the cord, plug, or appliance in water or any other liquid.
4. Close supervision is necessary when the appliance is used by or near children.
5. Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return the appliance to an authorized service facility for examination, repair, or adjustment.
7. The use of accessories not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
10. Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
11. Do not use the appliance for anything other than its intended purpose.
12. Do not clean the container with cleansers, steel wool pads, or other abrasive materials.
13. To disconnect, turn any control to "Off", then remove the plug from the wall outlet. Always hold the plug; never pull the cord.
14. Scalding may occur if the cover is removed during the brewing cycle. Be careful not to get burned by the steam.

**15.** Some parts of the appliance are hot when operated, so do not touch them with your hands. Use handles or knobs only.

**16.** Never leave the empty carafe on the warming plate; otherwise, the carafe may crack.

**17.** Do not set a hot container on a hot or cold surface.

**18.** Do not let the coffee maker operate without water.

**19.** Never use the appliance if the carafe shows signs of cracks or if the carafe has a loose or weakened handle. Only use the carafe with this appliance. Use carefully, as the carafe is very fragile.

**20.** To reduce the risk of fire or electrical shock, do not attempt to repair the appliance yourself. Any repairs should be done by authorized service personnel.


**21.** The container is designed for use with this appliance. It must never be used on a range top.

**22.** This appliance can be used by children aged 8 years and older, and by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the safe use of the appliance and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.


**23.** Children should be supervised to ensure that they do not play with the appliance.



# Product Components

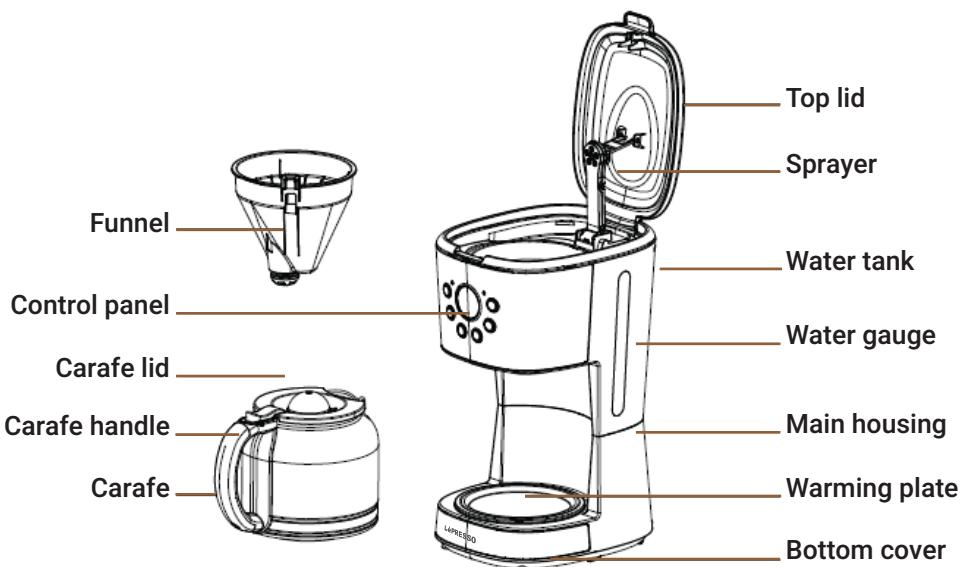

# Control Panel

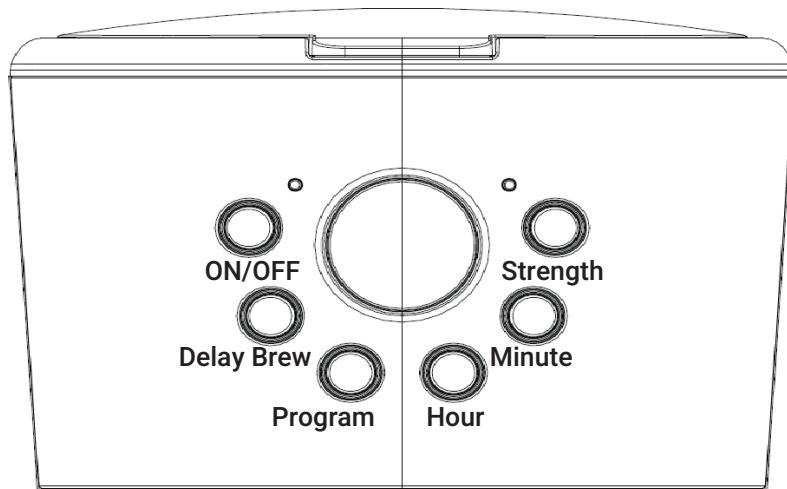

# Before the First Use

Ensure that all accessories are complete and that the unit is not damaged. Fill the water tank to the MAX level and brew water several times without adding coffee powder, then discard the water. Clean and dry all detachable parts thoroughly, following the instructions in the "Cleaning and Maintenance" section.

# Operating Instructions

1. Open the top lid and fill the water tank with drinking water. The water level should not exceed the MAX level as indicated on the water gauge.
2. Place the funnel into the funnel support, ensuring it is assembled correctly; otherwise, the top lid cannot be closed. Place the permanent filter in the funnel.
3. Add coffee powder to the permanent filter. Typically, a cup of coffee requires a level spoon of coffee powder, but you may adjust it according to your personal taste. Close the top lid completely.
4. Insert the carafe with the handle closed onto the warming plate horizontally.
5. Plug the power cord into the outlet. If you want to adjust the coffee strength, press the "STRENGTH" button once. The corresponding indicator will illuminate in orange, and the appliance will brew thicker coffee. If you do not want to adjust the coffee strength, simply follow the steps to brew normal coffee.
6. Press the ON/OFF button, which will make its indicator illuminate in red, and the LCD display will show "12:00," indicating that the appliance has started working.

**Note:** The brewing process can be interrupted by pressing the ON/OFF button at any time, causing the indicator to extinguish and the coffee maker to power off.

**Note:** During the brewing process, the "PROGRAM," "DELAY BREW," "HOUR," and "MINUTE" buttons are inactive.

**7.** The brewing process can be interrupted by pressing the ON/OFF button at any time, causing the indicator to extinguish. The appliance will resume brewing once the ON/OFF button is pressed again.

**Note:** You can take out the carafe, pour, and serve at any time. The appliance will stop dripping automatically, but the time cannot exceed 30 seconds.

**8.** Remove the carafe to serve once brewing is finished (about one minute after the coffee stops dripping).

**Note:** The coffee you get will be less than the amount of water you added, as some water is absorbed by the coffee grounds.

**9.** When the brewing process is finished, if you do not want to serve immediately, keep the coffee maker energized so the coffee can be kept warm on the warming plate. The appliance will automatically shut off 40 minutes after pressing the ON/OFF button if it has not been manually disconnected after brewing. For an optimal coffee taste, serve it just after brewing.

**10.** Always turn the coffee maker off and disconnect the power supply when not in use.

**Note:** Pay attention to pouring the coffee out; otherwise, you may be hurt as the temperature of the coffee is still high.

## Delay Function

If you do not want the coffee maker to start operation immediately, for example, if it is 8:10 and you want the coffee maker to automatically

start working at 13:00, first follow steps 1 to 5 from the above section, and then you can set the automatic start function as follows:

**1.** Set the current time by pressing the HOUR and MINUTE buttons repeatedly, for example, 8:10.

**Note:** The time cycle is 24 hours.

**2.** Press the PROGRAM button once, and the indicator of the ON/OFF button will illuminate in green and flash (this means the coffee maker has entered the preset time state).

**3.** Set the delayed starting time by pressing the HOUR and MINUTE buttons repeatedly until the desired time, for example, 13:00.

**4.** Press the DELAY BREW button, and the indicator of the ON/OFF button will illuminate in green. After a while, the LCD will display the current time. You may see the automatic start time by pressing the PROGRAM button.

**Note:** You may cancel the automatic start function by pressing the ON/OFF button. If you want to change the automatic start time, follow steps 2-4 again.

**5.** When the time is due, the indicator of the ON/OFF button will illuminate in red, and the appliance will start brewing.

**6.** When the process is finished, if you do not want to serve immediately, keep the coffee maker energized so that the coffee can be kept warm on the warming plate. The appliance will automatically shut off 40 minutes after the ON/OFF button is activated, unless manually disconnected at the completion of brewing. For optimum coffee taste, serve it just after brewing.

**Note:** During the brewing process, the buttons of "PROGRAM," "DELAY BREW," "HOUR," and "MINUTE" are inactive.

# Cleaning and Maintenance

**CAUTION:** Be sure to unplug this appliance before cleaning. To prevent electrical shock, do not immerse the cord, plug, or unit in water or liquid. After each use, always make sure the plug is removed from the wall outlet.

1. Clean all detachable parts after each use in hot soapy water.
2. Wipe the exterior surface of the unit with a soft, damp cloth to remove stains.
3. Water droplets may build up in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use.
4. Use a damp cloth to gently wipe the warming plate. Never use an abrasive cleaner to clean it.
5. Replace all parts and store for the next use.

# Removing Mineral Deposits

To keep your coffee maker operating efficiently, periodically clean away the mineral deposits left by the water. The frequency of cleaning depends on the water quality in your area. We recommend removing mineral deposits as follows:

1. Fill the tank with water and descaler up to the max level indicated on the water gauge (the ratio of water to descaler should be 4:1). For detailed instructions, refer to the descaler manual. You may also use household descaler or citric acid instead of the descaler (use one part citric acid for every 100 parts of water).

2. Place the serving cup under the brew basket.
3. Ensure all parts are assembled properly.
4. Switch on the appliance and allow it to “brew” the descaling solution.
5. After the “brew” cycle with the solution, switch off the appliance.
6. Leave the solution to stay for 15 minutes and repeat steps 3-5.
7. Switch on the appliance and run off the solution until the water tank is empty.
8. Rinse by operating the appliance with water at least three times.

## Hints For a Better-Tasting Coffee

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the “Cleaning and Maintenance” section. Always use fresh, cold water in the coffee maker.
2. Store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse coffee powder, as this will greatly reduce the coffee’s flavor. Reheating coffee is not recommended, as coffee is at its peak flavor immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.
6. Oiliness may occur more frequently if heavily roasted coffees are used.

## **Disposal**

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

## **Warranty**

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website <https://www.lepresso.com/warranty> and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:  
<https://www.lepresso.com/warranty>

## **Contact Us**

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: [info@lepresso.com](mailto:info@lepresso.com)  
Website: <https://www.lepresso.com/>  
Instagram: [lepresso\\_official](https://www.instagram.com/lepresso_official)