

**PORODO**  
LIFESTYLE



**Porodo Lifestyle**

**MULTI-FUNCTION  
RECHARGEABLE HAND BLENDER**

SKU: PDLFSTBP70BG

# Table of Contents

Product Overview	2
Specifications	2
Safety Precautions	3
Product Components	4
Charging Instructions	5
Whisk Function	5
Chopping Function	7
Usage Instructions	9
Cleaning and Maintenance	9
FCC Statement	10
Disposal	11
Warranty	11
Contact Us	11

## Product Overview

The Porodo Multi-Function Rechargeable Hand Blender is a versatile kitchen appliance designed for both chopping and whisking. Featuring a 300ml capacity container, this hand blender is equipped with a touch panel for easy control, offering three speed levels to accommodate various tasks. It provides three whisking modes and three chopping modes, ensuring flexibility for different recipes. The blender is designed with an ergonomic handle, making it comfortable to use for extended periods. It also includes several protective features, such as overcurrent protection, cordless functionality, and over-discharge protection, ensuring safe and efficient operation. Whether you're preparing smoothies, soups, or desserts, this hand blender is built to handle a range of culinary needs with convenience and reliability.

## Specifications

Material	SUS 304 + Chrome + ABS
Battery Capacity	1500mAh
Rated Voltage	5V
Rated Power	20-45W
Chopper Capacity	300mL
Speed Levels	900rpm, 1100rpm, 1300rpm
Charging Time	2-3h
Working Time	30-50 Cycles


Charging Interface	USB-C
Product Weight	0.42kg
Product Size	60 x 162 x 250mm
Model Number	PDLFSTBP70

## Safety Precautions

- 1.** Do not use the product if it is broken, damaged, or falls off. In such cases, please send the product to the nearest service center for inspection and repair.
- 2.** Do not hang the USB charging cable over the edge of a counter or table, or place it on a hot surface while charging.
- 3.** Do not immerse the motor unit in water or other liquids to avoid risk of fire, electrical leakage, and personal injury.
- 4.** Keep hands, clothing, scrapers, and other kitchen appliances away from the moving parts of the product during operation to prevent personal injury or damage to the product.
- 5.** Supervise the use of the product closely if children or vulnerable groups are present.
- 6.** Do not forcibly remove the whisk from the main body of the product when in use. Also, do not leave the product near a hot gas stove or on any hot object.
- 7.** For the first use, fully charge the product until all the indicator lights turn off. Remove any ingredients that block the whisks or the chopping blade before turning the product on again.
- 8.** Remove the USB cable before assembling or disassembling parts or during cleaning.
- 9.** The product is not designed for kneading dough.
- 10.** The appliance is not intended for use by persons (including children) who have physical, sensory, or mental disabilities, or lack experience or knowledge of how to operate it. The appliance should only be used by those who are supervised and instructed on its use by a responsible person.

- 11. Ensure children do not play with the device. Always supervise their use.
- 12. Children should not clean or maintain the equipment without adult supervision.
- 13. Do not allow fingers, clothing, or hair to come into contact with the rotating parts while the product is in operation.
- 14. Turn off the power switch and disconnect the power supply before replacing accessories or moving parts.
- 15. Do not expose the product to direct sunlight. Clean it, dry it, and store it in a cool, ventilated place out of the reach of children.
- 16. Avoid stirring thick ingredients with this product, as it may trigger the overload protection mechanism.

## Product Components

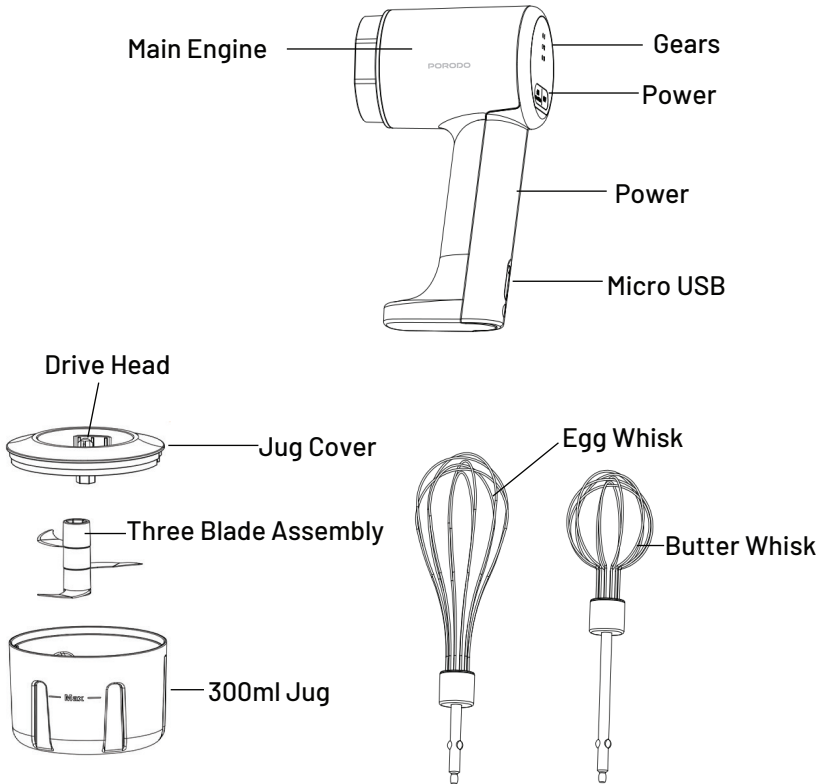

## Charging Instructions


1. Use a 5V == 1A adapter to charge the product. During charging:
  - a. The first red light will turn on when the battery is below 30%.
  - b. The first and second red lights will turn on when the battery is between 30% and 60%.
  - c. All three red lights will be on when the battery exceeds 60%.

When fully charged, all lights will turn off. It takes approximately 2–3 hours to fully charge.


2. The product does not operate while charging.
3. When the battery level reaches 3.0V, all three red lights will flash 5 times before the product turns off. Please charge the product.

## Whisk Function

1. For the first use, fully charge the motor unit and clean the parts.
  - a. Connect the motor unit to the charger.
  - b. Clean the parts (Note: Do not clean the motor unit in water!)

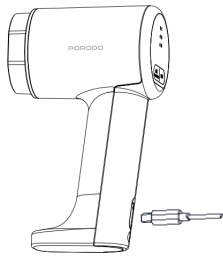

Charge

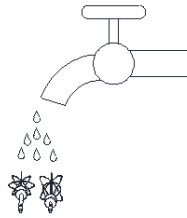

Clean  
Motor unit cannot be

2. Place the food in a mixing bowl.

**Note:** The chopping jug supplied with this product should not be used as a mixing bowl for beating eggs. This product does not include a mixing bowl for whipping eggs.




mixing bowl

**3.** Before inserting any attachments, ensure that the product is switched off.

**4.** Inserting the whisk:

When the egg white whisk is inserted into the main unit, you will hear a "click" sound. This indicates that the whisk is properly installed.

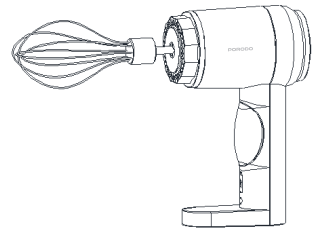

Insert the whisk

**5.** Touch Control:

**a.** Gently touch the ON icon for 1.5 seconds to turn the product on. The three white lights will turn on, indicating the product is in waiting mode.

**b.** To switch the settings, gently touch the ON icon again to toggle between the following settings:

Low → High → Low → High

**c.** When the product is in waiting mode, if you gently touch the ON icon for 2 seconds, it will switch to the Pulse setting.

**d.** To switch the product off, gently touch the OFF icon once.

**6.** Battery Indicator:

**a.** If the battery is below 30%, the first red light will turn on for 3 seconds, then the product will turn off.

**b.** If the battery is between 30% and 60%, the first and second red lights will turn on for 3 seconds, then the product will turn off.

**c.** If the battery is above 60%, all three red lights will turn on for 3 seconds, and the product will automatically switch off once the cycle is completed.

**Note:** Do not place blades, metal spoons, forks, chopsticks, or similar items into the mixing bowl.

**7.** Recommended Usage:


It is recommended to allow an interval of one minute between each working cycle, and a 30-minute break after three consecutive working cycles.

Working Cycle Times:

Low Setting: 120 seconds, 900rpm  $\pm$ 10 %



High Setting: 120 seconds, 1300rpm  $\pm$ 10 %

Pulse Setting: 30 seconds, 1300rpm  $\pm$ 10 %

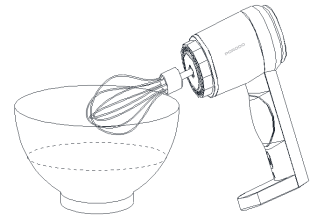


# Chopping Function


1. For the first use, fully charge the product until all the lights turn off. Clean the chopping jug, blade assembly, and lid before use. Note: The blades are sharp, so do not touch them.

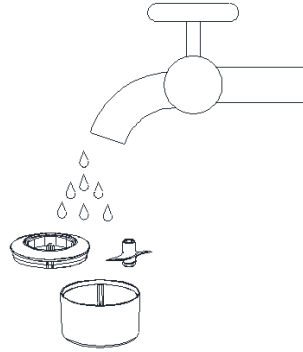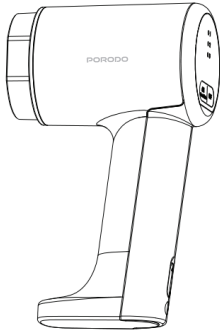

2. Insert the blade assembly into the blade shaft of the jug. Then, add the clean food into the jug. Ensure the food is evenly distributed within the jug. Do not overload the jug with too much food.

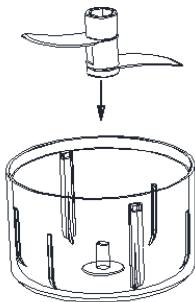


Install blade assembly

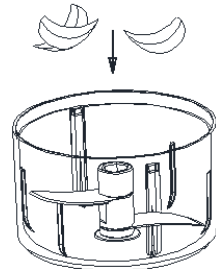

put food in jug

### 3. Attaching the Lid:


Place the lid onto the jug, making sure the transmission shaft aligns with the limit slot on the cover. The two slots on the edge of the cover must match the two pillars on the wall of the blending jug.

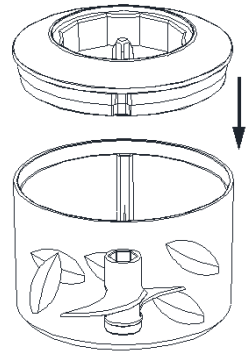


Lid of jug

### 4. Installing the Motor Unit:

- a. Place the motor unit into the lid. Ensure that the cross groove on the motor unit is securely inserted into the transmission shaft on the lid.
- b. Double-click the power-on icon to power on the product.

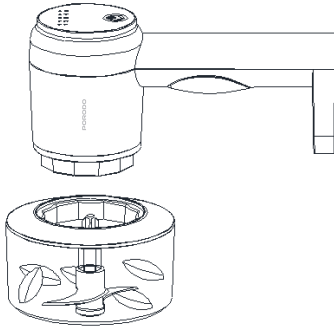

Install motor unit

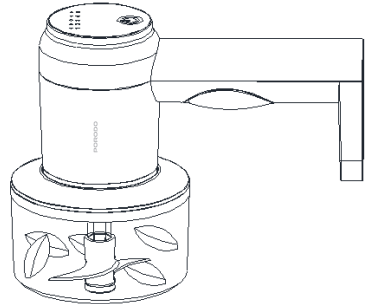

double-click the power-on icon

### 5. Touch Control:

- a. Gently touch the ON icon for 1.5 seconds to turn the product on, and the three white lights will illuminate.
- b. Then gently touch the ON icon again to toggle between the settings: Low → High → Low → High
- c. If you gently touch the ON icon for 2 seconds, it will switch to the Pulse setting.
- d. To turn the product off, gently touch the OFF icon once.

## **6. Recommended Usage Intervals:**

After one working cycle: Allow a 1-minute interval before starting the next cycle.  
After three consecutive working cycles, allow a 30-minute interval for the product to cool down.

Working Cycle Times:

Low Setting: 120 seconds, 900rpm  $\pm 10\%$

High Setting: 120 seconds, 1300rpm  $\pm 10\%$

Pulse Setting: 30 seconds, 1300rpm  $\pm 10\%$

## **Usage Instructions**

- 1.** Frozen foods such as cream and eggs should be thawed in advance and left at room temperature for a period before mixing.
- 2.** To prevent eggshells or rotten eggs from interfering with your cooking, crack eggs into a separate container before transferring them to the mixing bowl.
- 3.** Start with a low whisk setting and gradually increase to a higher setting to prevent the mixture from spilling.
- 4.** The amount of food to be chopped should not exceed the maximum limit. Cut food into 15x15x15 cm chunks, and ensure that the meat does not contain gluten, skin, or fat.
- 5.** This product is not intended for use with fruit juices or for chopping dry, hard, or pitted objects.

## **Cleaning and Maintenance**

- 1.** Clean the main unit, blade assembly, and chopping jug immediately after use.
- 2.** The blade is very sharp and should never be touched by hand. To avoid injury, ensure that the water used for cleaning is clear so you can see where the blade is placed.
- 3.** Do not sterilize any parts of the product at high temperatures.
- 4.** Avoid using abrasive or corrosive cleaners during cleaning.
- 5.** After cleaning the product, dry or wipe each part, then reassemble and store it. If the product will not be used for an extended period, charge it at least once every three months to maintain the battery.

6. The main unit is NOT dishwasher safe. However, the cover, jug, blades, and whisks can be washed safely in a dishwasher.

## FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference; and

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for assistance.

RF warning statement:

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

## Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
<https://www.porodo.net/warranty>

## Contact Us

If you have any questions about this Privacy Policy, please contact us at:

**info@porodo.net**

Website: <https://www.porodo.net/>

Service Support: **support@porodo.net**

Instagram: **porodo**