

PORODO
LIFESTYLE



Porodo Lifestyle

GrillJet

Electric Rotisserie Kebab Grill

SKU: PDLFSTL20BK

Table of Contents

Product Overview	2
Specifications	2
Important Safeguards	3
Product Diagram	4
Components Included	5
Initial Setup Guide	5
Assembly Instructions	5
Operating Instructions	6
Cleaning and Maintenance	6
Disposal	7
Warranty	8
Contact Us	8

Product Overview

The GrillJet Electric Rotisserie Kebab Grill is designed to provide a simple and efficient way to prepare delicious kebabs with ease. Featuring a high power 900W motor, this grill ensures quick and consistent cooking. The rotating skewers, combined with a 360-degree individual rotation system, allow for even grilling, resulting in juicy and tender kebabs. It also includes a Teflon-coated tray to reduce fat and ensure a healthier cooking experience. The grill is equipped with an auto shut-off function for safety and convenience, while the tempered glass cover ensures durability and easy monitoring of your cooking. The anti-slip feet provide stability during use, making this grill an ideal choice for both beginner and experienced grillers.

Specifications

Material	Material - Stainless Steel + Tempered Glass, Teflon + PA66 Plastic, 25% Glass Fiber + Quartz
Rated Power	900W
Rated Voltage	220-240V
Rated Frequency	50/60Hz
Timer Setting	60 Minutes Max
Number of Skewers	10
Power Plug	UK 3-Pin Plug
Product Weight	2.6kg
Product Size	245 x 250 x 280mm
Model Number	PDLFSTL20

Important Safeguards

When using electrical appliances, it is essential to follow basic safety precautions, including the following:

1. Always read all instructions before use.
2. Before plugging in the appliance, ensure that the voltage on the appliance's rating plate matches your household electricity supply.
3. The appliance must be connected to a plug with an earthing connection.
4. All repairs should be performed only by a qualified technician. Incorrect repairs may pose a risk of harm.
5. Danger: Risk of electrocution! Do not immerse the appliance or its cable in water or any other liquid.
6. The appliance should be placed on a flat, dry surface.
7. Do not place the grill on or near hot gas or electric burners.
8. For safety reasons, always use only genuine accessories.
9. This appliance is intended for household use only. Do not use it outdoors.
10. Do not place the appliance near hot surfaces or areas.


Attention: Accessible surfaces may become very hot during operation. Avoid touching hot surfaces to prevent injury.

11. The outer glass panels can become very hot during operation. Avoid touching them. Always use the handles with gloves and the control knob.
12. Ensure that the power cord is not damaged by sharp edges or hot surfaces. Keep the appliance out of reach of children to prevent them from pulling it off the work surface.
13. Allow at least 10 to 15 cm of space around the appliance to ensure proper air circulation.
14. Always unplug the appliance after use and before cleaning. Wait for it to cool down completely before cleaning.
15. The appliance is disconnected when the timer is in the OFF position. To unplug, turn the timer to the OFF position and then unplug the appliance. Never unplug the appliance by pulling the power cord.
16. Do not move the appliance when hot oil or other hot liquids are present.
17. Never cover the appliance while in use.

18. Exercise extreme caution when disposing of hot grease or liquids.
19. Always wear oven gloves or pot holders when inserting or removing skewers.
20. Do not use the appliance for any purpose other than its intended use.
21. Do not operate the appliance if it has been dropped or damaged in any way.
22. Do not touch the appliance with wet hands.
23. Never leave the appliance unattended when connected to the power supply.
24. This appliance should not be connected to an external timer or remote control system.
25. For cleaning instructions for surfaces in contact with food, please refer to the "Cleaning and Maintenance" section in this manual.

Warning: This is an electric appliance and is not intended for use as a toy. To reduce the risk of fire, burns, personal injury, or electric shock, keep the appliance out of reach of children and do not allow them to play with it.

Product Diagram

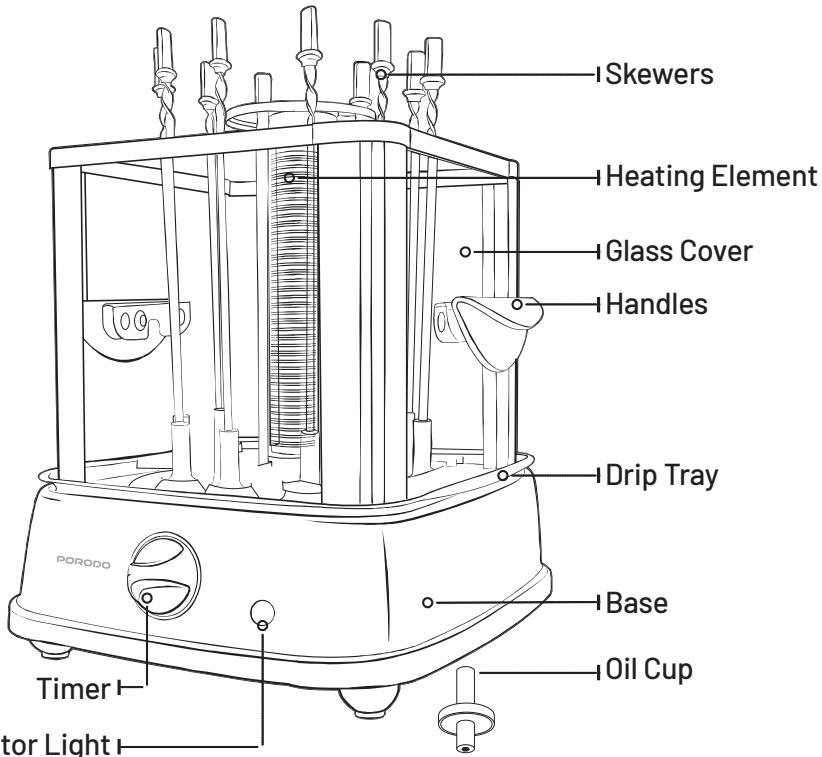

Components Included

- a. Motor Unit** ×1
- b. Glass Cover** ×1
- c. Oil Cups** ×10
- d. Skewers** ×10
- e. Drip Tray** ×1

Initial Setup Guide

Remove any stickers from the appliance. Clean the accessories using lukewarm soapy water or in the dishwasher. Place the appliance on a flat, stable surface. Ensure that the sides, back, and top of the appliance are at least 10 cm (4 inches) away from any walls, furniture, or objects on the counter or table.

Important Note: Do not plug in the appliance until it is fully assembled.

Assembly Instructions

- 1.** Place the drip tray over the heating element on the base (Figure A). Ensure that the hole on the drip tray aligns with the hole on the base.
- 2.** Insert the oil cups into the designated holes from step 1 (Figure B). Make sure the oil cups are placed in the correct direction, as shown in Figure B.
- 3.** Insert the pointed ends of each skewer into the holes of the oil cups (Figure C).
- 4.** Place the glass cover onto the grill base (Figure D).

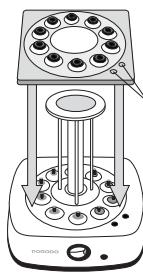


Figure A

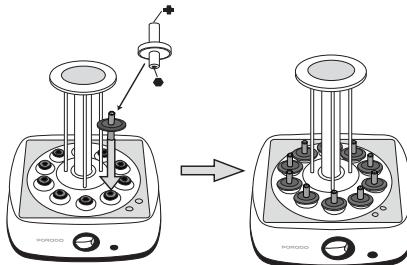


Figure B

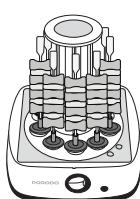
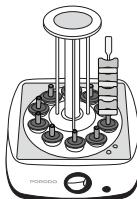


Figure C

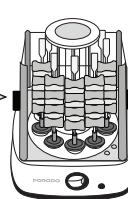
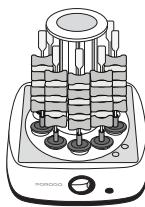


Figure D

Operating Instructions

1. Carefully thread the food onto the skewers. It is recommended to arrange the food on a plate or cutting board rather than holding it by hand.
2. Insert the skewers with the food into the oil cups.
3. Set the timer to your desired cooking time. The LED light will illuminate, indicating that the kebab grill is powered on.
4. Once the cooking time has elapsed, the grill will turn off automatically.
5. Carefully remove the kebabs using oven mitts.
6. Allow the grill to cool completely before disassembling and cleaning.

Recommended Cooking Time	
Chicken	15 - 20 minutes
Beef	15 - 30 minutes
Vegetables	15 - 20 minutes

Cleaning and Maintenance

1. Once cooking is complete, turn the Timer to the OFF position and unplug the grill. Allow the grill and all its components to cool down completely before cleaning.
2. Remove the glass cover and any remaining skewers.
3. Remove the 10 oil cups.
4. Remove the drip tray and dispose of any grease.

5. Wash the glass cover, skewers, oil cups, and drip tray in warm, soapy water. Rinse and dry thoroughly.
6. Clean the base of the grill with a damp cloth.
7. Reassemble the grill by following the assembly instructions on page 5.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: <https://www.porodo.net/>

Service Support: support@porodo.net

Instagram: [porodo](#)