

**PORODO**  
LIFESTYLE



# **Porodo Lifestyle**

## **CONCORD Vintage Aroma Diffuser & Speaker**

SKU: PDLFSTV98BR

# Table of Contents

Product Overview	2
Specifications	2
Schematic View	3
Operation Instructions	3
Button Functions	4
Precautions	5
Safety Instructions	5
FCC Statement	6
Disposal	7
Warranty	7
Contact Us	7


## Product Overview

The Porodo Concord Vintage Aroma Diffuser & Speaker combines a Bluetooth speaker with an aroma diffuser, featuring built-in white noise and colorful lighting. It simulates raindrops with a rotating design, offering delicate moisture and a soothing atmosphere. With a 250ml capacity and easy control via a volume dial and remote, it provides both functionality and style to enhance your space.

## Specifications


Rated Power	10.7W
Rated Current	500mA
Light Current	92mA
Spray Volume	10-30mL/H
Water Tank Capacity	250mL
Light Setting	3 Modes
Timer Setting	2 Modes
Power Plug	UK 3-Pin Plug
Product Weight	531g
Product Size	159 x 180 x 182mm
Model Number	PDLFSTV98

## Schematic View

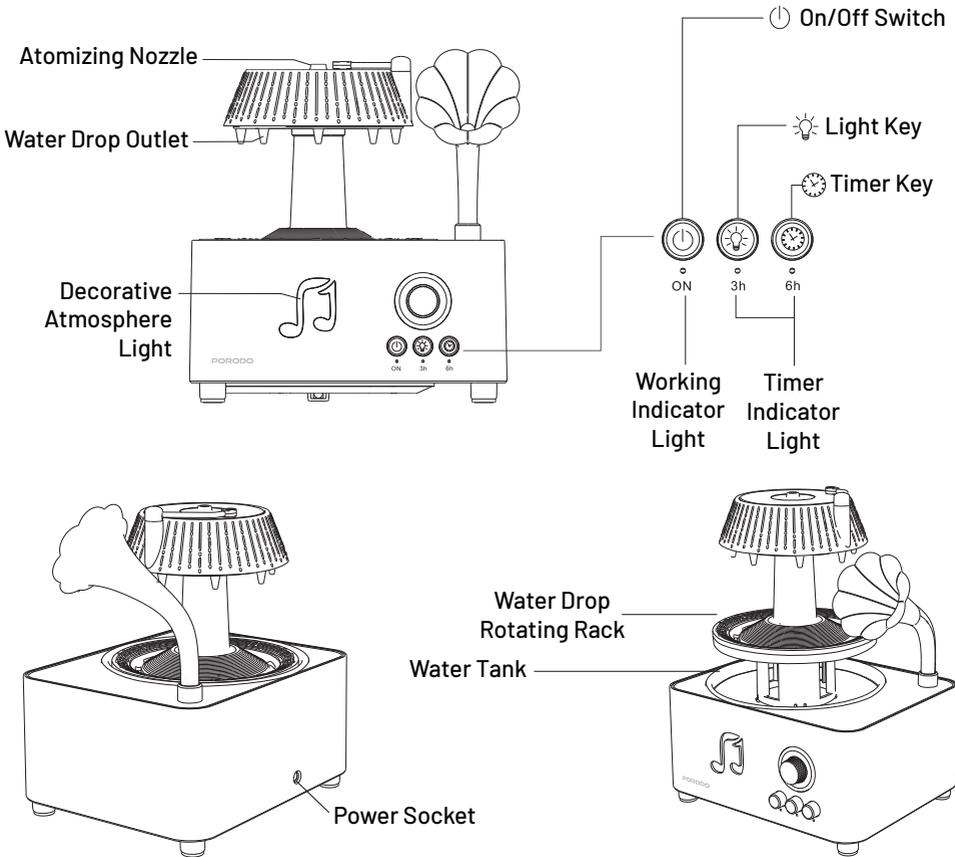

## Operation Instructions

1. Place the product on a safe and stable surface. Remove the water drop rotating rack, clean the water tank, and add water until the water level line. Do not overfill, and replace it back into the rotating rack after adding water.
2. Connect the product to power using the provided adapter.
3. Press the power button to turn on the device. The colorful breathing light and power indicator light will turn on.

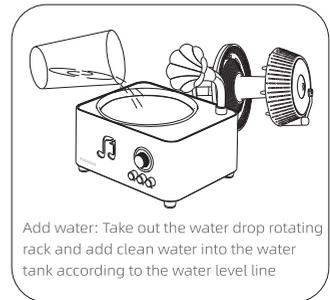

4. When no water is detected, the machine will automatically enter shutdown mode.
5. If the product is not used for a long period, empty the water from the tank, clean it, dry it, and store it in a cool, dry place.

## **Button Functions**

 Power Button:

1. Short press to turn on the machine. By default, the colorful breathing light and power indicator light will be on.
2. Short press again to activate the raindrop cover rotation.
3. Short press a third time to turn off the machine. The power indicator light will go out, and the cycle will repeat.
4. Long press for 1.5 seconds to set the timer for 3 hours; the 3H timer light will turn on.
5. Long press again for 1.5 seconds to set the timer for 6 hours; the 6H timer light will turn on.

 Light Button:

Short press to change the lighting effects. The default is colorful breathing light. Press once to switch to warm light, press again for blue light, press for third time to turn off the light, and so on.

 Timer Button:

1. When powered on, there is no timer by default.
2. The first short press sets the timer for 2 hours (2H timer indicator lights up).
3. The second short press sets the timer for 4 hours (4H timer indicator lights up).
4. The third short press sets the timer for 8 hours (8H timer indicator lights up).
5. The fourth short press cancels the timer, and the indicator light will turn off.

 White Noise:


1. Long press for 1.5 seconds to turn on white noise (e.g., ocean waves, flowing water, bird sounds).
2. Long press again for 1.5 seconds to turn off white noise.

Dial Key:

1. Turn the left knob to decrease the volume.
2. Turn the right knob to increase the volume.


### Warning Sign:

If the water droplets do not start dripping from some holes after 10 seconds, gently tap the top cover. It is normal for certain holes not to drip continuously during use.

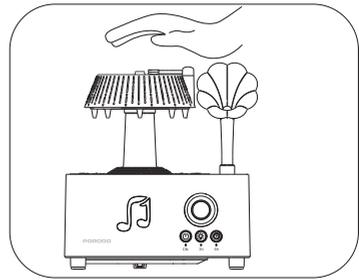

### Warm Tips:

Use clean tap water to avoid dirt buildup on the atomizer sheet, which may reduce mist output or block the water drop holes. If this occurs, use a cotton swab to gently clean the surface of the atomizer sheet.

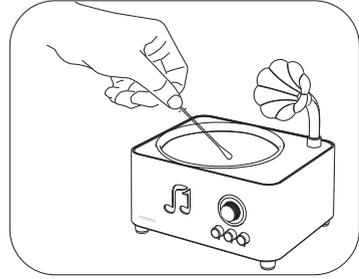

## Precautions

1. Always keep the water level within the indicated line; overfilling may cause leakage.
2. Add enough water to the tank, but do not exceed the maximum water level line.
3. The water outlet holes are small, and water tension may prevent dripping if the device has not been used for a long time. This is normal and may resolve after restarting.
4. If dripping is slow, gently shake the machine or use a small brush to help water pass through the holes. Do not shake the device excessively.
5. Place the machine on a stable, level surface during use.
6. You may add 2–3 drops of essential oil. Do not add too much oil, as it may block the atomization holes.

## Safety Instructions

1. Children and individuals without relevant experience should use the product under supervision.
2. Do not connect or disconnect the power adapter with wet hands to avoid

electric shock.

3. Ensure the power interface and adapter cable are dry before use to prevent short circuits.
4. If not in use for a long time, unplug the power adapter and empty the water tank to prevent bacteria growth.
5. Always unplug the device when filling water or cleaning.

## FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference; and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for assistance.

RF warning statement:

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

## Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
<https://www.porodo.net/warranty>

## Contact Us

If you have any questions about this Privacy Policy, please contact us at:

**info@porodo.net**

Website: <https://www.porodo.net/>

Service Support: **support@porodo.net**

Instagram: **porodo**