



# **Porodo Soundtec**

## **Gala Portable Speaker Dual Mic**

SKU: PDSTWLEP029BK

# Table of Contents

Product Overview	2
Specifications	2
Package Contents	3
Schematic View	3
Product Features	4
Operation Instructions	5
Charging Guidelines	6
Disposal	7
Warranty	8
Contact Us	8

## Product Overview

The Gala Portable Speaker Dual Mic by Soundtec offers high-quality 2.0-channel stereo sound with deep bass and a wireless microphone system, perfect for parties and presentations. It features an RGB light for visual appeal, a carrying strap for portability, and up to six hours of playtime. With USB playback support, the speaker ensures a versatile and immersive audio experience wherever you go.

## Specifications

Battery Capacity	3600mAh, 3.7V
Charging Time	5H
Playtime	6.5H (50% Volume)
Playtime	2.5H (100% Volume)
Bluetooth Range	10m
Bluetooth Version	5.3
Frequency Response	80HZ-16KHZ
Speaker Size	2.5inch x 2
RMS Power Output	6W x 2 = 12W, 4Ω
Peak Power Output	12W x 2 = 24W, 3Ω
Product Size	99 (W) x 129 (H) x 305 (L)MM

## Package Contents



Portable Bluetooth Speaker ×1

Type-C Charging cable ×1

Battey for microphone ×1

Wireless Microphone ×2

## Schematic View

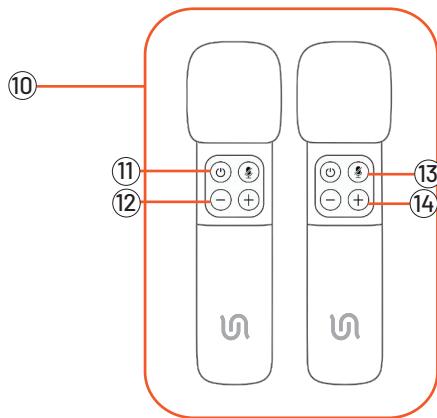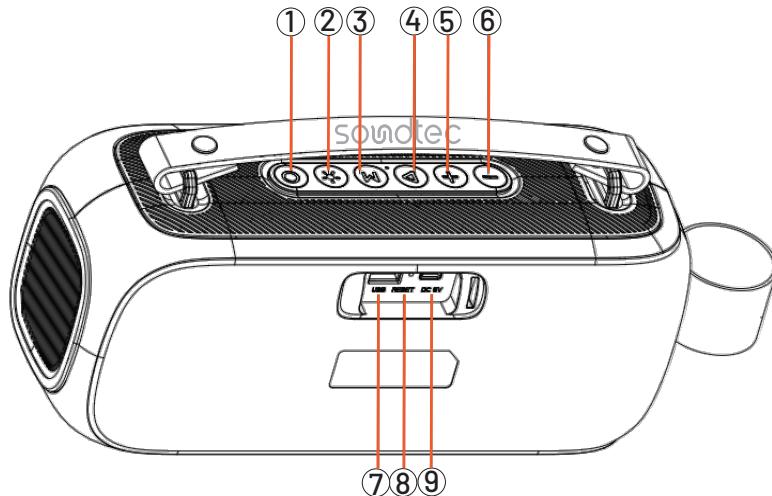

1. Power Button
2. Light Button
3. Mode Button
4. Play/Pause Button
5. Forward/Volume Up
6. Backward /Volume Down
7. USB port
8. Reset Port
9. Type-C Charging Jack
10. Dual Microphone
11. Microphone Power Button
12. Microphone Volume Down Button
13. Microphone Mute Button
14. Microphone Volume Up Button

## Product Features

- a. 2.0-channel stereo sound: The speaker provides high-quality stereo sound, ensuring clear and immersive audio for an enhanced listening experience.
- b. Deep bass technology: The deep bass feature delivers a richer, fuller sound with powerful low-frequency tones for a more dynamic audio experience.
- c. Wireless microphone system: The wireless microphone system allows for easy and convenient use, perfect for events, presentations, or karaoke.
- d. RGB light: The speaker is equipped with RGB lighting, creating a visually appealing display that adds excitement to your listening environment.
- e. Up to 6 hours of playtime: With a long-lasting battery, the speaker offers up to six hours of continuous playtime, providing entertainment for extended periods.
- f. USB playback support: The speaker supports USB playback, allowing you to connect and play music directly from USB devices for added convenience.
- g. Carrying strap: The built-in carrying strap makes it easy to transport the speaker, providing convenience for on-the-go use.

# Operation Instructions

## 1. Bluetooth Mode Instructions

Bluetooth Name (Gala): The Bluetooth name for this speaker is "Gala" When pairing with your device, search for "Gala" in the Bluetooth settings.

**1-1. Power Button (○):** Press and hold to turn the speaker on or off.

**1-2. Mode Button (ℳ):** Press briefly to switch between different playing modes.

**1-3. Play/Pause Button (▷):** Press briefly to play or pause music. Press and hold to pair or disconnect Bluetooth.

**1-4. Backward/Volume Down Button (←):** Press briefly to decrease the volume. Press and hold to skip to the previous track.

**1-5. Forward/Volume Up Button (⊕):** Press briefly to increase the volume. Press and hold to skip to the next track.

**1-6. Light Button (💡):** Press briefly to switch between different light modes. Press and hold to turn the lights on or off.

## 2. FM Mode Instructions:

**2-1. Power Button (○):** Press and hold to turn the speaker on or off.

**2-2. Mode Button (ℳ):** Press briefly to switch between different playing modes.

**2-3. Play/Pause Button (▷):** Press briefly to mute the sound. Press and hold to automatically search for and store FM channels.

**2-4. Backward/Volume Down Button (←):** Press briefly to decrease the volume. Press and hold to go to the previous FM channel.

**2-5. Forward/Volume Up Button (⊕):** Press briefly to increase the volume. Press and hold to go to the next FM channel.

## 3. USB Mode Instructions:

**3-1. Power Button (○):** Press and hold to turn the speaker on or off.

**3-2. Mode Button (ℳ):** Press briefly to switch between different playing modes.

**3-3. Play/Pause Button (▷):** Press briefly to play or pause the music.

**3-4. Backward/Volume Down Button (←):** Press briefly to decrease the volume. Press and hold to go to the previous song.

**3-5. Forward/Volume Up Button (⊕):** Press briefly to increase the volume. Press and hold to go to the next song.

**3-6. Light Button (💡):** Press briefly to switch between different light modes. Press and hold to turn the lights on or off.

**Notes:** When a USB disk is inserted, the speaker will automatically switch to USB mode and begin playing the content from the USB disk, regardless of the current playing mode.

#### 4. Wireless Microphone Use:

**4-1.** When the speaker is powered on in Bluetooth mode and the wireless microphone is turned on, they will automatically connect if within range.

**4-2.** Once the connection is established, the blue light on the microphone will remain on, indicating that it is ready for use.

#### 5. Wireless Microphone Operation:

**5-1.** Ensure the speaker is powered on in Bluetooth mode and the wireless microphone is also turned on.

**5-2.** The microphone will automatically connect to the speaker when within range.

**5-3.** After a successful connection, the blue light on the microphone will stay on, indicating it is ready for use.

#### 6. Reset Function

**6-1.** If the speaker is not responding, use a small round pin to press the "RESET button" to turn off the device.

**6-2.** To reset the speaker to factory settings, press and hold the "Volume Down button (—)" for 5 seconds. This will power off the device, clear Bluetooth memory, and restore default settings.

## Charging Guidelines

**1.** The charger is not included in the package. Please charge the speaker with a rated 5V/1A charger or through a PC.

**2.** Charging time is approximately 5 hours.

**3.** This unit does not have a power bank function. Do not charge other devices or connect them via the USB port.

**4.** To protect the battery, avoid using the speaker while it is charging.

## Warning

- a.** Please store and use this product in an environment of normal temperature.
- b.** Please do not expose this product to rain or moisture environment.

- c.** Please do not disassemble, repair or modify this product by yourself without authorization.
- d.** When cleaning this product, please use a soft cloth or with little water if needed, please do not use chemicals for cleaning.
- e.** In order to have an extended product life and protect your hearing, please avoid listening to songs on maximum volume for long time.
- f.** The product is with built-in lithium battery, to avoid dangers, please do not discard or put it in the fire.

## **Disposal**

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



## **Warranty**

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:

[info@porodo.net](mailto:info@porodo.net)

Website: <https://www.porodo.net/>

Service Support: [support@porodo.net](mailto:support@porodo.net)

Instagram: [porodo](#)