

PORODO
LIFESTYLE



Porodo Lifestyle

AUTOMATIC CAMPING TENT

SKU: PDLF4PACTLTBR

Table of Contents

Product Overview	2
Specifications	2
Setup Guide	3
Disposal	4
Warranty	5
Contact Us	5

Product Overview

The Porodo Automatic Camping Tent is designed for 2-4 people, offering a spacious interior with excellent ventilation through mesh windows. It features a quick and hassle-free setup, ideal for those who prefer an easy camping experience. Made with high-quality 190T polyester fabric and 200D Oxford fabric for durability, this tent is built to withstand harsh weather conditions. With a waterproof rating of 2000MM, it provides superior protection against rain and ground moisture, making it a reliable choice for outdoor adventures.

Specifications


Material	190T Polyester Fabrics PU2000MM+B3 Grenadine
Floor Fabric	210 D OXFORD PU2000MM
Waterproof Grade	2000MM
Waterproof Fabric	190T Polyester Fabrics
Tent Size	150*255*300cm
Net Weight	4.2KG
Gross Weight	4.75KG
Accessories	Ground Nail *12, Wind Rope *6, Top Cap, Storage Bag
Model Number	LF4PACTLT

Setup Guide

A. Opening the Tent


STEP 1:

1. Take the tent out of the storage bag and untie the ropes.
2. Open the tent and spread out the six legs.

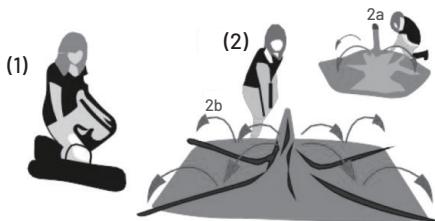


STEP 2:

3. Lift the tent by hand and it will open automatically, press down on the top of the tent until you hear a locking sound.

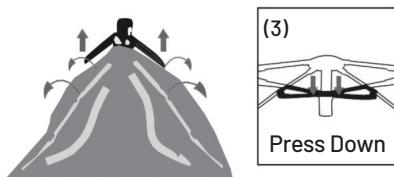

STEP 3:


4. Once the tent is open, make sure all the poles are securely locked.
5. Insert pegs into the six legs of the tent and make sure the tent is fully extended.

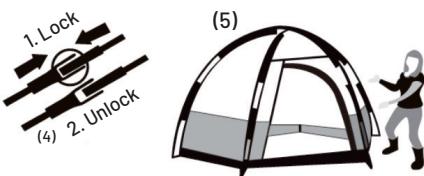

B. Closing the Tent

STEP 4:

1. Press down on B until the poles retract automatically.
2. Make sure that the joints of the poles are not locked

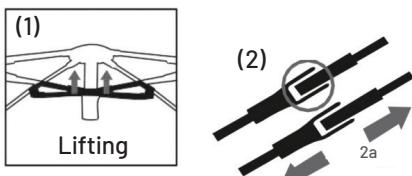


Single layer hexagonal tent does not need to be locked/unlocked

STEP 5:

3. Remove the pegs and fold the hexagonal corners towards the center, making sure that the joints of the poles are not locked and that the center is upright.

4. Try to keep the tent as flat as possible to increase the service life and facilitate storage. To unlock the tent, gently pull the joints of the poles outwards, and then fold it inwards.

5. In order to store the tent as neatly as possible, the air inside the tent must be exhausted as much as possible.

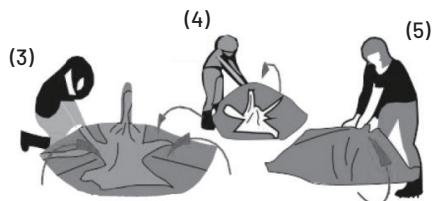


STEP 6:

6. Fold all the poles with the tent to the center.

7. After removing the air from the tent, wrap the tent up neatly.

8. Tie up the tent, put it into a storage bag, and store it in a dry environment.

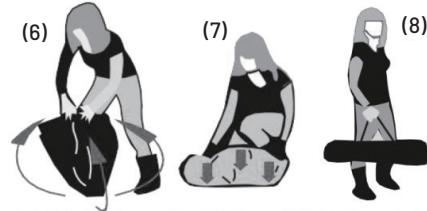

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: <https://www.porodo.net/>

Service Support: support@porodo.net

Instagram: [porodo](#)