

PORODO
LIFESTYLE



Porodo Lifestyle
CAMPING
RECHARGEABLE CEILING FAN

SKU: PDRSF12KGY

Table of Contents

Product Overview	2
Specifications	2
Safety Precautions	3
USB Cable Safety	3
Battery Removal Instructions	4
User Interface Functions	5
Schematic View	6
FCC Statement	6
Disposal	7
Warranty	8
Contact Us	8

Product Overview

The Porodo Camping Rechargeable Ceiling Fan is designed for convenience and comfort during outdoor activities. It features a detachable design with soft ambient lighting, making it perfect for camping trips and easy to carry on trips. Equipped with a smart display panel, it offers four adjustable speed levels and multi-mode night light options to suit various needs. The fan operates quietly, ensuring a peaceful environment, while the included remote controller allows easy operation from a distance. With a built-in timer and low-noise operation, the fan is an ideal companion for camping, providing a cooling breeze and gentle illumination when needed.

Specifications

Input	DC 5V/2A
Rated Power	9W
Battery Capacity	12000mAh
Recharge Time	12H
Working Time	8-30H
Charging Interface	Type-C
Net Weight	700g

Product Size	144 x 450 x 450mm
Model Number	PDRSF12K

Safety Precautions

1. Ensure the ceiling fan is installed at a height of more than 2.3 meters above the ground in a stable position to avoid damage or personal injury.
2. Do not use the fan when there is an electrical problem with the device.
3. Avoid touching the fan blades directly with your fingers, eyes, or any objects, as this may cause damage or personal injury.
4. Ensure the ceiling fan is not subjected to intensive impacts, as this could cause damage or personal injury. Avoid using cloth or rope to move the blades.
5. Avoid Hazardous Environments: To prevent electric shock and fire, avoid using the fan near:
 - a. Heating systems like a brazier
 - b. High-temperature areas with direct sunlight or in a car under the sun
 - c. Equipment with flammable organic solvents, such as paint thinners or gas
 - d. Humid areas like bathrooms, washing machines, or kitchens
 - e. Any location accessible to children

USB Cable Safety

1. Always unplug the USB cable when cleaning or when not in use.
2. Pulling the USB cable may damage the line. Always pull or insert the plug by holding the plug part.
3. Ensure cables do not trip you up during wiring.

4. Do not play with the USB cable, make it fall, or impact it intensively.
5. Ensure the USB cable is not pressed or crimped in any way and avoid cutting the cable.


Battery Removal Instructions

1. Disassembly:


- a. Loosen the screws securing the upper shell.
- b. Remove the upper shell and the middle shell.
- c. Unplug the battery terminal.
- d. Once disconnected, carefully remove the internal battery.

2. Battery Disposal Precautions

- a. Before disposing of the appliance, ensure the battery is removed.
- b. The appliance must be powered off before removing the battery.
- c. Dispose of the battery safely, following local regulations.

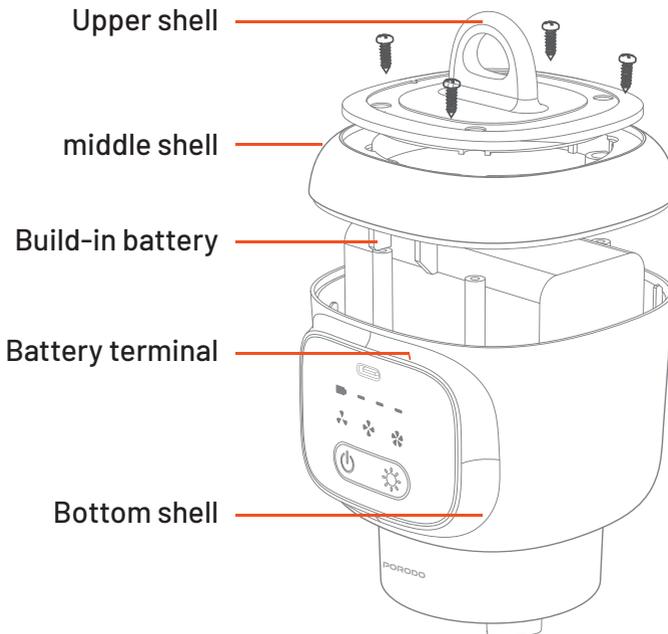

User Interface Functions

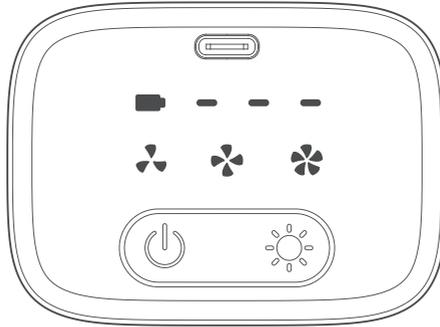

1. Display Panel

a. During charging, the battery indicator flashes in sequence.



b. When fully charged, all battery indicator lights stay constantly lit.

c. Speed levels 1,2,3



2. Operation functions

 a. press and hold the power button to turn the device ON and OFF

b. Tap the power button to adjust speed.

 c. press the light button to turn ON/OFF the lights.

3. Remote Control

a. Turn ON/OFF the fan to default speed 1 mode.


setting speed 1,2,3, Natural wind mode

b. turn ON/OFF the lights.

c. Setting 2,4,8 hours timers



Schematic View

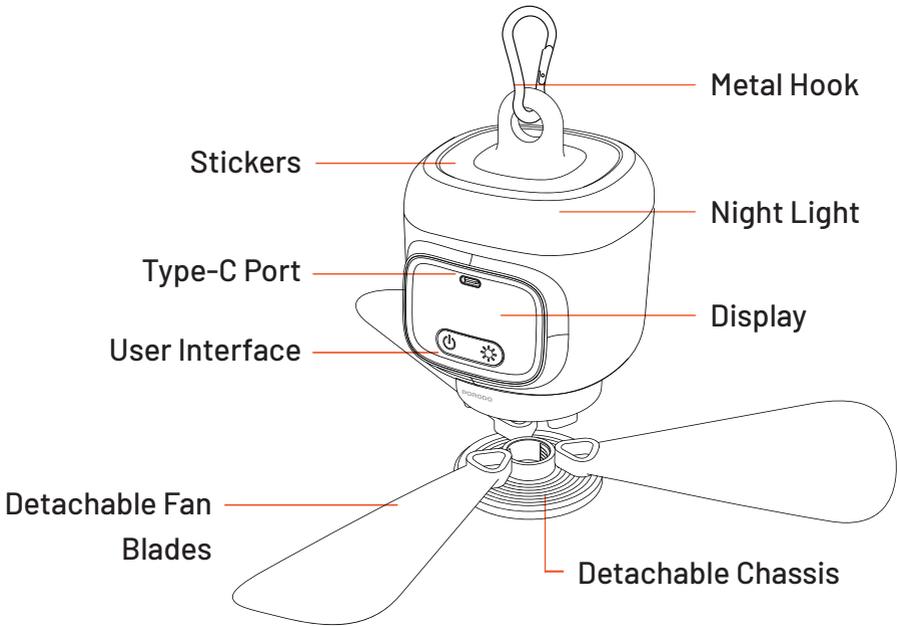

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference; and

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for assistance.

RF warning statement:

The device has been evaluated to meet general RF exposure requirements.

The device can be used in portable exposure conditions without restriction.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://www.porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **<https://www.porodo.net/>**

Service Support: **support@porodo.net**

Instagram: **porodo**