

LèPRESSO



# LePresso

**Frosty Whip Milk Shake Maker  
with Dual Gear Speed Contro**

SKU: LPCFFFM0075SL

# Table of Contents

|                                 |          |
|---------------------------------|----------|
| <b>Preface</b>                  | <b>2</b> |
| <b>Product Overview</b>         | <b>2</b> |
| <b>Installation Notes</b>       | <b>3</b> |
| <b>Instructions for Use</b>     | <b>3</b> |
| <b>Precautions</b>              | <b>3</b> |
| <b>Cleaning and Maintenance</b> | <b>4</b> |
| <b>Troubleshooting</b>          | <b>4</b> |
| <b>Specifications</b>           | <b>5</b> |
| <b>Disposal</b>                 | <b>5</b> |
| <b>Warranty</b>                 | <b>6</b> |
| <b>Contact Us</b>               | <b>6</b> |


# Preface

Thank you for purchasing our milkshake machine. Please read this manual carefully before use and keep it for future reference. If the product undergoes any updates or improvements, no further notices will be issued.

Implementation Standards for This Product: GB/T4706.1-2005, GB/T4706.30-2008

This machine is equipped with a safety mechanism. Once the milkshake cup is installed correctly, the machine will operate as intended.

# Product Overview

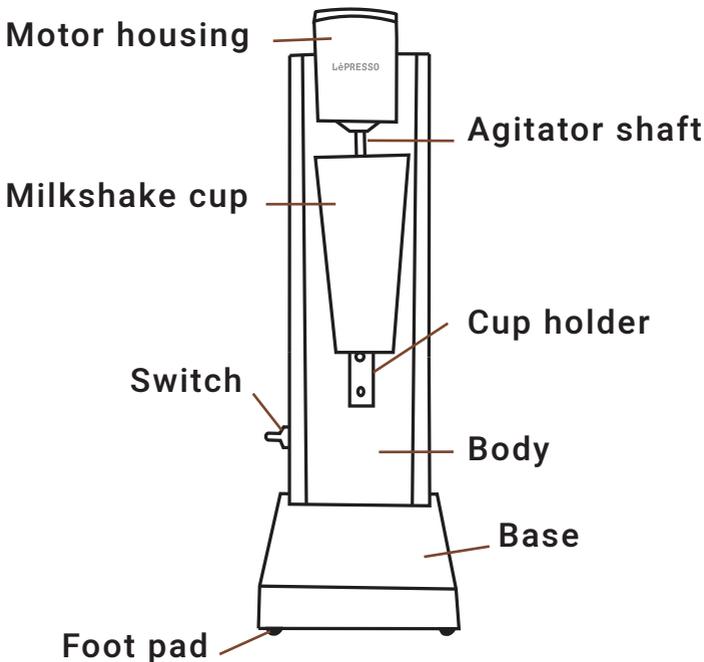

## **Installation Notes**

- 1.**Unpack the machine and place it on a stable workbench. The workbench height should be 60-80 cm.
- 2.**This machine must be plugged into a dedicated socket with proper grounding and insulation. The grounding resistance should not exceed 0.1 ohm.

## **Instructions for Use**

- 1.**This machine is equipped with a safety device. Once the milkshake cup is installed correctly, the machine will operate.
- 2.**Fill the cup with the drink, ensuring it does not exceed two-thirds of the cup's capacity.
- 3.**Select the speed setting (high speed/low speed).

## **Precautions**

- 1.**Unplug the machine before cleaning, moving, or performing any maintenance.
- 2.**Do not touch the switch or power supply with wet hands.
- 3.**Do not wash or immerse the machine in water. Avoid allowing water to enter the switch area to prevent electric shock.
- 4.**If any abnormality or damage is detected, stop using the machine immediately and contact maintenance personnel.
- 5.**Do not touch the rotating parts while the machine is in operation.
- 6.**Do not allow minors to operate or approach the machine.
- 7.**The machine should not be used continuously for more than 5 minutes. After 5 minutes of use, it must rest for at least 2 minutes before

being used again.

**8.** Do not agitate hard objects or apply lateral force. If severe vibration occurs, please contact the supplier.

## **Cleaning and Maintenance**

- 1.** Clean all food contact parts after each use.
- 2.** When not in use, store the appliance in a ventilated, dry place.

## **Troubleshooting**

**1.** Machine not working:

**A.** Check whether the power cord is properly connected to the socket.

**B.** Ensure the micro switch is functioning correctly.

**C.** If the machine has been operating for a long period, it may have overheated. Allow the machine to cool down before resuming normal operation.

**2.** The machine makes noise:

**A.** Check if the installation is secure and reinstall the parts if necessary.

**B.** Check if the mixing shaft is deformed. If so, please contact the supplier for a replacement.

**3.** The machine is connected to power supply but is not functioning.

**A.** Unplug the machine immediately and contact a qualified electrical technician for assistance.

# Specifications

|                 |                     |
|-----------------|---------------------|
| Rated Voltage   | 220-240V            |
| Rated Frequency | 50Hz                |
| Rated Power     | 280W                |
| Speed           | 7000~15000RPM       |
| Cup Capacity    | 750ml               |
| Power Cord      | UK 3-Pin Plug       |
| Material        | 201 Stainless Steel |
| Product Size    | 190*190*510 mm      |
| Product Weight  | 2.3kg               |

# Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



## Warranty

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website <https://www.lepresso.com/warranty> and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

<https://www.lepresso.com/warranty>

## Contact Us

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: [info@lepresso.com](mailto:info@lepresso.com)

Website: <https://www.lepresso.com/>

Instagram: [lepresso\\_official](#)