



Porodo Soundtec
Sonify
Portable Wireless Speaker

SKU: PDSTBTSH9BK

Table of Contents

Product Overview	2
Specifications	2
Package Contents	3
Schematic View and Description	3
Usage Instructions	4
Trouble Shooting	6
Safety Precautions	6
Disposal	7
Warranty	8
Contact Us	8

Product Overview

The Porodo Soundtec Sonify Portable Wireless Speaker delivers powerful, high-fidelity sound in a compact, stylish design that's built for music on the move. With its convenient grip handle, dynamic RGB lighting, and multiple playback options including Bluetooth, AUX, TF card, and USB flash, it offers flexibility for any occasion. The IPX5 water-resistant build ensures durability for outdoor use, while the modern Type-C rechargeable battery provides fast and efficient charging. Combining portability, performance, and style, the Sonify is the perfect companion for parties, travel, or everyday listening.

Specifications


Battery Capacity	4000mAh (7.4V)
Bluetooth Version	5.3
Transmission Range	≤10m
Charging Time	Around 3 Hours
Working Time	Up to 5.5H (50 % Volume)
Input	5V/2A
Output Power	60W
Product Size	111 x 167 x 281mm
Model Number	PDSTBTSH9

Package Contents

1. Charging Cable X 1
2. Speaker X 1

Schematic View and Description

1. Plastic Shell

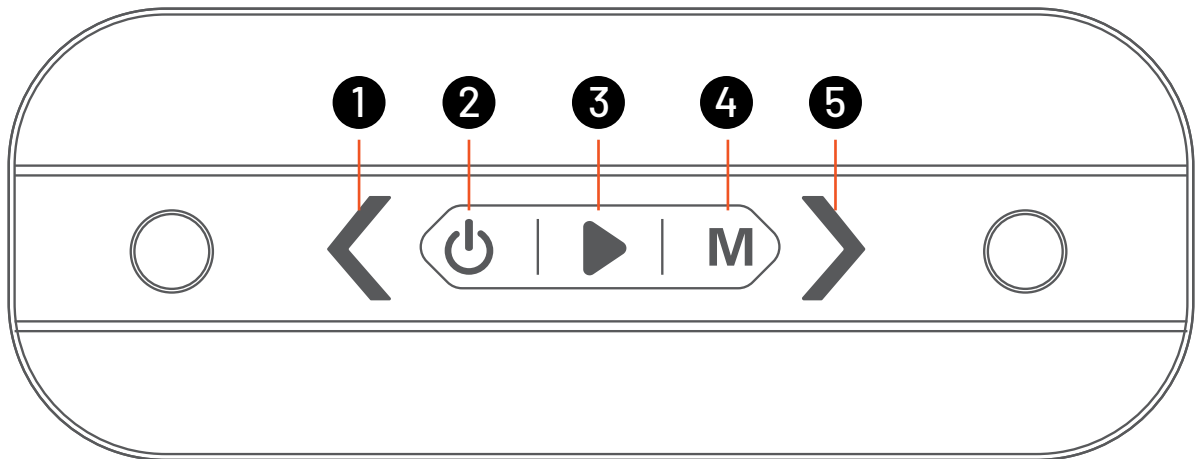

1. Volume Down:
 - 1.1 Short press: Decrease the volume.
 - 1.2 Long press: Skip to the previous song.
2. Lighting Mode Shift:
 - 2.1 Short press: Change lighting mode (6 types available).
 - 2.2 Long press: Power the speaker on or off.
 - 2.3 Double-press: Toggle lighting on or off.
3. Play/Pause and Bluetooth Functions:
 - 3.1 Short press: Play or pause the current track.
 - 3.2 Bluetooth status:
 - a. Long press: Disconnect Bluetooth.
 - b. Double-press: Pair or unpair TWS (True Wireless Stereo).
 - 3.3 Calling status:
 - a. Short press: Answer or end a call.
 - b. Long press: Reject an incoming call.
4. Mode Shift:

4.1 Short press: Change sound mode (e.g., default, bass, treble).

4.2 Long press: Switch between different sound effects.

5. Volume Up:


5.1 Short press: Increase the volume.

5.2 Long press: Skip to the next song.

6. Reset Bluetooth Pairing

Press both buttons (Up and Down) simultaneously: Delete the Bluetooth pairing record and reset the device.

2. Interface Functions

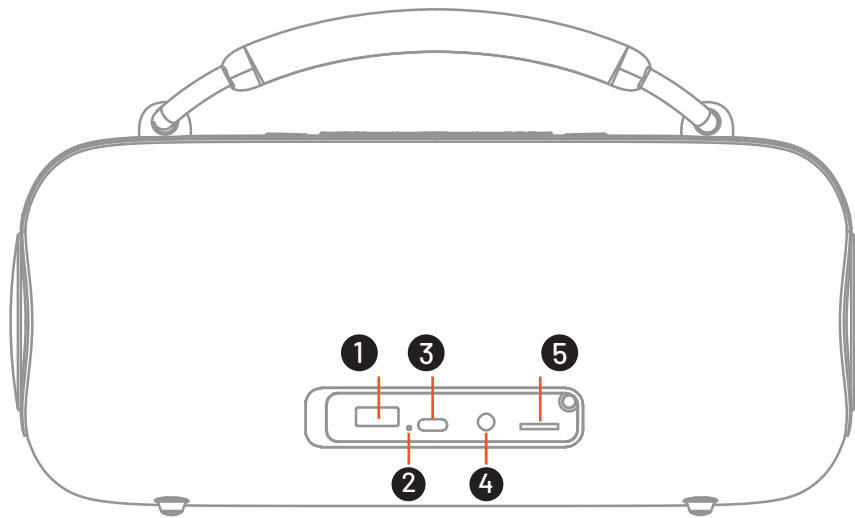

1. USB Port

2. Bluetooth Indicator LED

3. Type-C Charging Port

4. Aux Input

5. MicroSD Card Slot

Usage Instructions

1. On/Off Operation:

1.1 To turn the device on, press and hold (⏻) for 3 seconds.

1.2 To turn the device off, press and hold the same key again.

2. Bluetooth Mode:

2.1 Power on the Bluetooth speaker. The blue indicator light will flash rapidly, signaling that the device is in Bluetooth pairing mode.

2.2 On your mobile phone, activate Bluetooth, search for available devices, and select the speaker to pair. Once paired, the indicator light will remain steady. If another mobile device is already connected to the speaker, long-press (▶) to disconnect the current connection and reconnect with your desired device.

3. AUX Cable Connection:

This speaker is equipped with an AUX input, allowing you to connect external audio sources such as mobile phones, tablets, MP3 players, cassette players, CD players, radios, and more.

3.1 Plug one end of the 3.5mm AUX cable into the AUX input jack on the speaker.

3.2 Connect the other end of the cable to the headphone jack of your mobile device, tablet, or computer.

Note: The 3.5mm audio cable is not included and must be purchased separately.

4. USB/TF Card Flash Disk:

To play music via the speaker, simply insert a USB flash drive containing music files, and the speaker will automatically begin playing. The speaker supports the following audio formats:

- MP3
- WAV
- WMA

Note: Maximum capacity is 32 GB.

5. Energy-saving features:

5.1 The speaker will automatically power off if no phone connection is detected after half an hour in Bluetooth mode.

5.2 If the speaker is in TF card or Aux mode and no input is detected for 15 minutes, it will automatically shut down.

6. Battery Charging

The speaker requires a 5V charger. Please ensure that the charger is 3C certified to avoid damaging the internal chip. Using a charger with a voltage higher than 5V can cause permanent damage to the speaker.

6.1 When the built-in battery is low, the speaker will emit a low battery tone.

Please connect the speaker to power immediately. You can charge the speaker using the USB port of your computer or a certified 5V-2A mobile phone charger.

6.2 While charging, the red light will be on, and once the speaker is fully charged, the red light will turn off.

6.3 Charging time is approximately 3 hours.

6.4 Playing time is approximately 5.5 hours at 50 % volume.

Trouble Shooting

1. Multiple Pairing Failures:

Solution: Restart your device to initiate pairing again.

Cause: If there are too many Bluetooth devices nearby, the connection might be hindered. Turn off other Bluetooth devices to avoid interference.

2. Sound Too Low or Distorted:

Possible Causes:

a. Low Battery: Ensure that your device has sufficient battery power.

b. Volume Setting: Adjust the volume to an appropriate level for optimal sound quality.

3. Bluetooth Music Playback Issues:

Possible Causes:

a. The music may not play properly if the speaker is beyond its effective connection range. Ensure the phone and speaker are within the recommended distance for a stable connection.

b. Obstruction: Any physical barrier between the speaker and phone may disrupt the connection. Ensure there is no obstruction.

Safety Precautions

Please read the instructions thoroughly before using the speaker to ensure safe and correct operation.

1. Keep for Reference: Retain this manual for future guidance and troubleshooting.

2. Follow Warnings: Pay close attention to all warnings and safety notes to prevent damage or injury.

- 3. Stable Placement:** Always place the speaker on a flat and stable surface to avoid accidental falls or damage.
- 4. Keep Away from Flames:** Do not position the speaker near open flames, lit candles, or other heat sources.
- 5. Avoid Extreme Conditions:** Do not expose the speaker to direct sunlight, high temperatures, high humidity, or rain for extended periods, as this may shorten its lifespan or cause malfunction.
- 6. No Unauthorized Repairs:** Do not attempt to disassemble, repair, puncture, or modify the speaker yourself. Doing so may damage the unit and void the warranty.
- 7. Battery Safety:** The product contains a built-in lithium battery. Please do not dispose of it in fire or subject it to extreme heat, as this may cause an explosion or serious hazards.
- 8. Charging Precautions:** Use only the recommended 5V charger. Exceeding this voltage may damage the internal circuitry, rendering the speaker unusable.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**