



**Porodo Soundtec**  
**Rush Pro Portable Party Speaker**

SKU: PDSTES31BK

# Table of Contents

Features	2
Specifications	3
Product Diagram	4
Power On/Off	4
Auto Power Off	4
Bluetooth Mode	5
Playing Music from USB Disk	5
AUX-IN Function	6
Multiple Link Function	6
EQ Sound Effects	7
RGB Light Settings	8
Activating Voice Assistant	8
Hands-Free Calling	8
Reset Functionality	8
Additional Remarks	8
Charging Instructions	9
Safety Warnings	9
Disposal	9
Warranty	10
Contact Us	10

## Features


- 1.** This speaker is designed for portability with an integrated handle, offering a sleek and sophisticated look that enhances both its functionality and brand recognition.
- 2.** The speaker is crafted with dual-color silicone branding and premium fabric, giving it a modern, stylish appearance that elevates its visual appeal.
- 3.** The dynamic RGB lighting is synchronized with the music, instantly transforming any space and enhancing your enjoyment of outdoor activities.
- 4.** With the multi-link function, you can connect over 100 speakers of the same model, creating an expansive and immersive music experience for large gatherings.
- 5.** This speaker also serves as a power bank, allowing you to recharge your devices in emergencies.
- 6.** It is rated IPX6 for water resistance, making it perfect for use at the beach, poolside, on a boat, or in other outdoor settings.
- 7.** The speaker is compatible with Google Assistant and Siri, enabling voice-activated control for hands-free operation.
- 8.** Equipped with a built-in hands-free microphone, the speaker allows for easy call handling without interrupting music playback.
- 9.** You can enjoy versatile listening options with multiple play modes, including Bluetooth, Aux, and USB connectivity.
- 10.** The speaker is powered by a built-in lithium rechargeable battery (11.1V, 7000mAh), providing long-lasting performance for extended music enjoyment.

## Specifications

Connectivity Technology	Bluetooth
Battery Capacity	7000mAh
Frequency Response	60hz-20khz
Impedance	4Ω
Transmission Distance	10m
Bluetooth Version	5.3
Connector Type	USB-A & USB-C
Input	5V/2A, 9V/2A, 18W Max
Output	5V/2A,10W
SNR	≥80dB
Working Time	5H (50 % Volume, Lights OFF), 3H (100 % Volume)
Charging Time	10H (5V/2A), 6.5H(9V/2A)
Product Weigh	5.67kg
Product Size	255 x 192 x 484mm
Model Number	PDSTES31

## Product Diagram

1. AUX Input
2. USB Port / Power Bank Output
3. Type-C Charging Port
4. Backward / Volume Down
5. Forward / Volume Up
6. Play / Pause
7. EQ Button
8. RGB Light
9. Mode Button (Bluetooth, USB Disk, AUX-IN)
10. Power On/Off

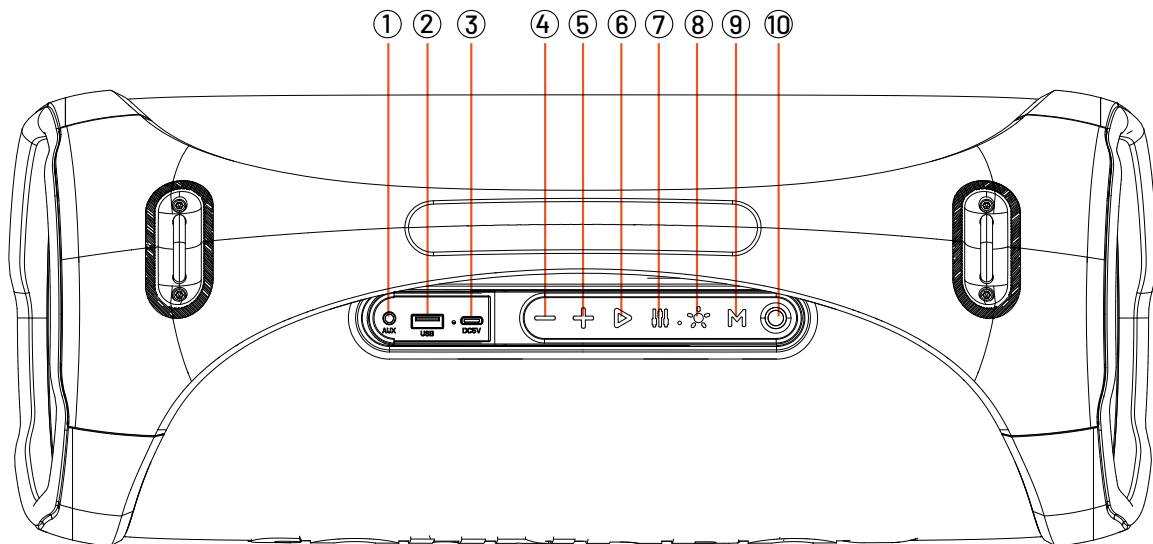

## Power On/Off

To turn the speaker on or off, press and hold the Power button.

## Auto Power Off

To save power and prevent the battery from depleting, the speaker will automatically turn off under the following conditions:

1. In Bluetooth mode, if the speaker is not connected to a smartphone within 10 minutes.
2. In Bluetooth mode, if the speaker is connected to a smartphone but no music is played for 10 minutes.

3. In USB mode, if the music is paused for 10 minutes.
4. In AUX mode, if the music is paused for 10 minutes.

## **Bluetooth Mode**

1. To activate Bluetooth mode, turn the Power button to the "ON" position. The speaker will automatically enter Bluetooth mode.
2. Enable Bluetooth on your smartphone, search for the device named "ES31," and select it to connect.
3. Play music from your smartphone and enjoy high-quality sound.
4. Long-press the Forward or Backward buttons to skip tracks; short-press to adjust the volume.
5. Short-press the Play/Pause button to play or pause the music. Long-press the Play/Pause button for 2 seconds to disconnect the Bluetooth connection when not on a call.
6. Double-press the Play/Pause button to activate the voice assistant.
7. Short-press the Mode button to toggle between Bluetooth, USB, and AUX modes. Long-press for 2 seconds to activate the Multiple Link Function, allowing you to link multiple speakers together.
8. Short-press the EQ button to cycle through available sound effects.
9. Short-press the RGB Light button to change the light modes, creating a dynamic visual experience that syncs with the music.

## **Playing Music from USB Disk**

1. Turn the Power button to the "ON" position.
2. Insert a USB flash drive into the USB port, and the speaker will automatically begin playing the music stored on the drive.
3. Long-press the Forward or Backward buttons to skip tracks; short-press to adjust the volume.
4. Short-press the Mode button to switch between different playing modes. Long-press for 2 seconds to activate the Multiple Link Function.
5. Short-press the Play/Pause button to play or pause the music.
6. Short-press the EQ button to cycle through different sound effects.

**7.** Short-press the RGB Light button to change the light modes, adding ambiance to your music experience.

**Notes:** When a USB flash drive is inserted, the speaker will automatically switch to USB mode and begin playing music from the drive, regardless of the current playing mode.

## **AUX-IN Function**

**1.** Connecting External Devices: To connect other compatible music devices, use an audio cable to connect the device's "Line Out" to the "Aux In" port of this speaker, then enjoy the music.

**2.** Auto-Switch to AUX Mode: When an audio cable is inserted, the speaker will automatically switch to AUX mode, regardless of the current playing mode.

**3.** Control via External Device: When using an external device, all playback functions (such as volume, track selection, and playback) can be controlled directly from the external device.

**4.** Track Selection: Long-press the Forward or Backward buttons to skip tracks. Short-press these buttons to adjust the volume.

**5.** Mode Switching: Short-press the Mode button to switch between different playback modes. Long-press for 2 seconds to activate the Multiple Link Function.

**6.** Mute Function: Short-press the Play/Pause button to mute or unmute the music.

**7.** Sound Effects: Short-press the EQ button to toggle between available sound effects.

**8.** RGB Lighting: Short-press the RGB Light button to cycle through different light modes or turn off the RGB lighting.

## **Multiple Link Function**

The Multiple Link Function allows you to connect identical speakers to create a stronger and more immersive sound experience.

**a.** Host Speaker (Only One)

1. Power on the first speaker and start playing music from a connected device, smartphone, USB, or AUX-in.
  2. Long-press the Mode button for 2 seconds to activate the Multiple Link Function. This speaker will become the Host Speaker.
  3. Long-press the Mode button for another 2 seconds to pair additional speakers with the Host Speaker.
  4. Once successfully connected, the indicator lights on both the Host and Sub-speakers will turn solid white.
  5. All operations (volume adjustment, mode switching, pause, etc.) can be performed through the Host Speaker only.
  6. To exit Multiple Link mode, long-press the Mode button for 2 seconds. The Host Speaker will disconnect from all Sub-speakers.
- b. Sub-speakers (Up to 99+ Speakers)**
1. Power on the additional speakers (they must have the same Bluetooth pairing name). Ensure they are in Bluetooth pairing mode.
  2. Power on the Host Speaker and play music in USB or AUX-in mode.
  3. Long-press the Mode button to activate the Multiple Link Function. The speaker will automatically become a Sub-speaker.
  4. Long-press the Mode button for 2 seconds, and the Sub-speakers will automatically pair with the Host Speaker.
  5. After successful pairing, the indicator lights on both the Host and all Sub-speakers will turn solid white.
  6. Once connected, the Sub-speakers will be unable to make adjustments. To exit Multiple Link mode, long-press the Mode button for 2 seconds.
  7. To disconnect the Sub-speakers from the Host Speaker, long-press the Mode button for 2 seconds. The Host Speaker will remain in Multiple Link mode.

## EQ Sound Effects

This speaker offers two sound effect modes. Press the EQ button to toggle between the different modes and customize your listening experience.

## RGB Light Settings

The RGB Light is activated when the speaker is powered on. Short-press the RGB Light button to switch between three different light modes or turn the lights off.

## Activating Voice Assistant

1. Ensure the speaker is connected to your smartphone via Bluetooth.
2. Double-press the Play/Pause button to activate the voice assistant.

## Hands-Free Calling

1. When connected to Bluetooth, if an incoming call is received, short-press the Play/Pause button to accept the call or long-press the button to reject it.
2. During a call, long-press the Play/Pause button to switch to the phone's built-in speaker.
3. To end the call, short-press the Play/Pause button or hang up directly from your smartphone.
4. Power Bank Function for Emergency Recharging
5. Power on the speaker.
6. Connect your external device to the 5V 2A output port using a charging cable to begin recharging.

## Reset Functionality

Long-press the Volume Down button for more than 5 seconds to turn off the speaker. This will also erase all Bluetooth connection history and restore the speaker to its factory settings.

## Additional Remarks

1. The speaker's default volume is set to 50 % of the maximum level.
2. Playtime will vary depending on the volume level and the type of music played.

## Charging Instructions

1. The charger is not included. Please charge the speaker using a 5V/2A or 9V/2A charger.
2. Charging time is approximately 6.5 hours with a 9V/2A charger or 10 hours with a 5V/2A charger. During charging, the indicator light will be red. Once fully charged, the red light will turn off.
3. When the battery is low, the speaker will prompt you to recharge.
4. To preserve the battery, it is recommended not to use the speaker while it is charging.

## Safety Warnings

1. Store and use the speaker in an environment with a stable temperature.
2. Avoid exposure to rain, moisture, or extreme weather conditions.
3. Do not disassemble, repair, or modify the speaker without proper authorization.
4. Clean the speaker using a soft cloth. If necessary, lightly dampen the cloth with water. Do not use harsh chemicals.
5. To extend the speaker's lifespan and protect your hearing, avoid prolonged listening at maximum volume.
6. The speaker contains a built-in lithium battery. To prevent safety hazards, do not discard or incinerate the battery.

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



## **Warranty**

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
**porodo.net/warranty**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:

**info@porodo.net**

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**