



Porodo Soundtec

**TIESTO
Portable Karaoke Speaker**

SKU: PDSTGW62BK

Table of Contents

Features	2
Specifications	2
Package Contents	3
Product Diagram	4
Power On/Off	5
Bluetooth Connection	5
TWS Function	5
Playing Music from USB Disk	6
AUX-IN Function	6
Remarks	7
Reset Functionality	7
Charging Instructions	8
Warnings	8
Disposal	9
Warranty	9
Contact Us	9

Features

1. The 4.1CH Portable Karaoke Speaker comes with a fixed handle, making it easy to carry and perfect for on-the-go parties.
2. Enjoy a truly immersive music experience with the 360-degree surround sound, filling the room with rich, balanced audio from every angle.
3. The dynamic RGB lighting enhances the party atmosphere by syncing with the music, creating a lively and vibrant environment.
4. With its minimalist fabric design, this speaker embodies youthful, stylish, and energetic vibes, making it a perfect fit for any modern space.
5. The 100W RMS output delivers clear vocals and powerful bass, providing a full and dynamic audio experience.
6. You can easily connect an external wired microphone or guitar for an interactive and personalized karaoke or music session.
7. The EQ and ECHO modes allow you to adjust the sound to your preference, ensuring an enjoyable and customized karaoke experience.
8. With TWS functionality, you can pair two speakers together for a more expansive sound and enhanced party atmosphere.
9. The IPX5 waterproof rating makes this speaker weather-resistant, so you can take it to the pool, beach, or any outdoor event without worry.
10. The combined USB port supports media playback and a 5V, 2A power bank output, allowing you to charge your devices while enjoying the music.

Specifications


Battery Capacity	7000mAh
Connectivity Technology	Bluetooth
Bluetooth Version	5.3

Transmission Range	10m
Charging Time	10H (5V/2A), 6.5H (9V/2A), 4H (20V/1.5A)
Working Time	10H (50% Volume), 2.5H (100% Volume)
Input	5V/2A, 9V/2A, 20V/1.5A, 30W Max
Output	5V/2A,10W
SNR	80dB
Impedance	8Ω (Tweeter), 4Ω (Woofer)
Connector Type	UBA-A & USB-C
Frequency	40Hz-20KHz
Product Weight	4.75Kg
Product Size	206 x 206 x 385mm
Model Number	PDSTGW62

Package Contents

1. Portable Speaker
2. Charging Cable
3. Audio Cable
4. Microphone

Product Diagram

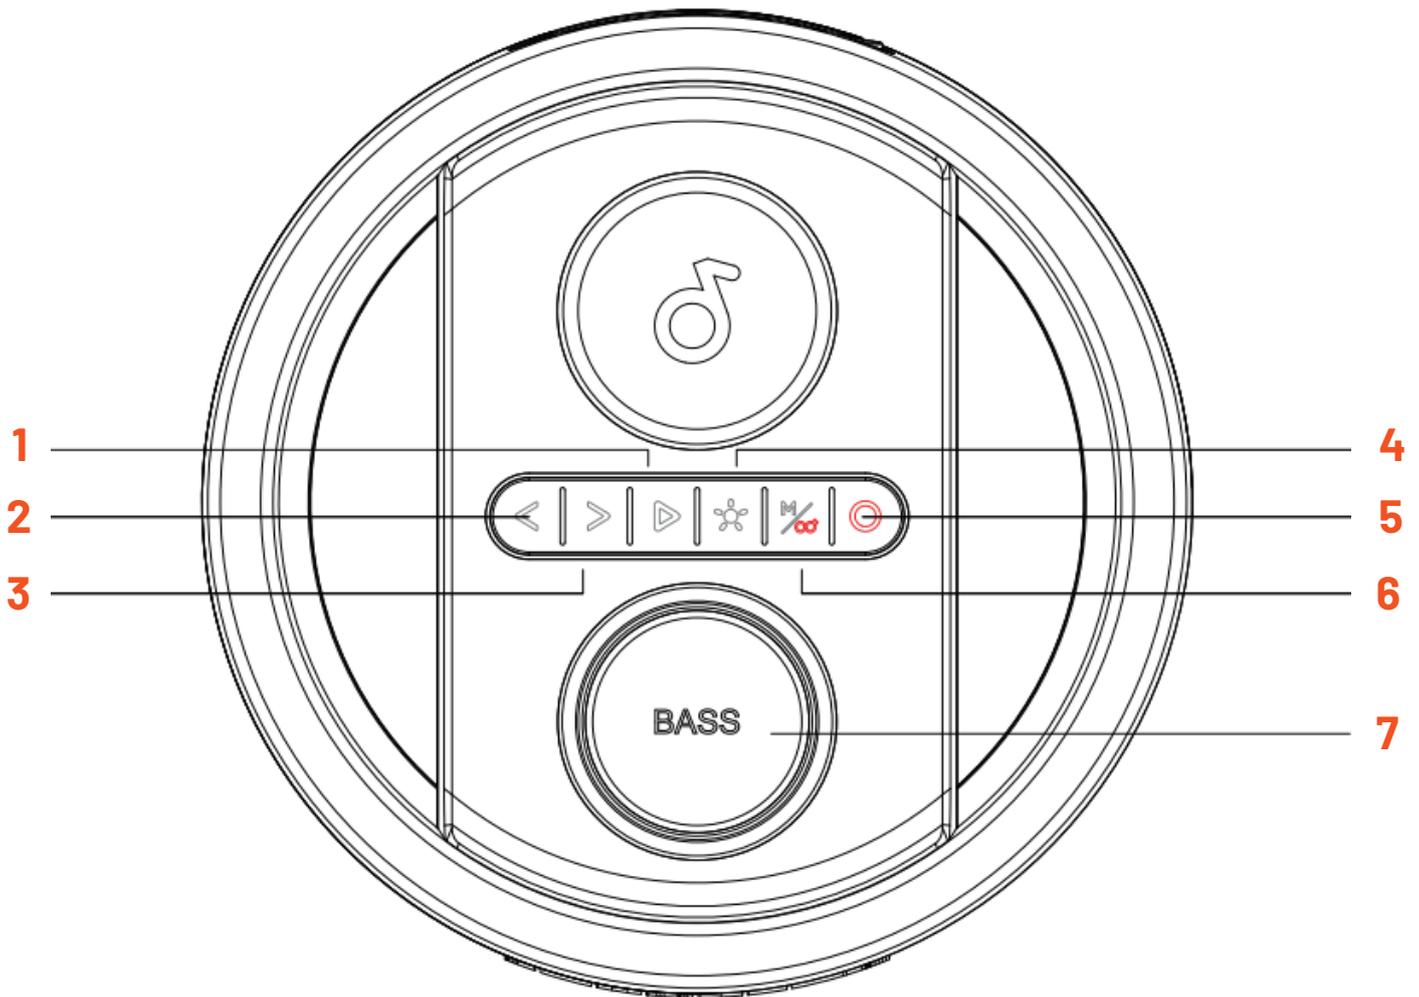

1. Previous Track
2. Next Track
3. Play/Pause
4. RGB Lighting (3 Modes)
5. TWS Button (Long Press) / Mode Button (BT/USB/AUX)
6. Power On/Off
7. Volume Down / Volume Up / EQ (Outdoor/Indoor Mode)

Power On/Off

Press and hold the Power button to turn the speaker on or off.

Bluetooth Connection

1. Turn the Power button to the "ON" position to activate Bluetooth mode.
2. Enable Bluetooth on your mobile device, search for the device name "GW62," and connect. Once connected, the blue LED will remain solid; it will flash slowly when disconnected.
3. Play music from your mobile device and enjoy the sound.
4. Press the Forward or Backward button on the speaker or your mobile device to skip to the next or previous track.
5. Press the Play/Pause button to start or pause the music. To disconnect Bluetooth, press and hold the Play/Pause button for 2 seconds.
6. Press the BASS button to switch between EQ modes. The default EQ mode is Outdoor. Press the BASS button once to switch to Indoor EQ, and press again to return to Outdoor EQ.
7. Turn the volume knob clockwise to increase the volume and counterclockwise to decrease it.
8. Press the Light button to cycle through RGB modes. Hold for 2 seconds to turn the RGB lights on or off.

TWS Function

1. Power on two identical speakers you wish to pair. Only one speaker needs to be set up for pairing.
2. Press and hold the TWS button for 2 seconds to initiate pairing. You will hear a tone, and the TWS indicator will flash slowly.

3. If pairing is unsuccessful within 1 minute, the lights will turn off, and pairing will exit. Once connected, the TWS indicator will remain on, and a confirmation tone will sound.
4. Press and hold the TWS button for 2 seconds to exit TWS mode. The TWS indicator will turn off, and you will hear a disconnect tone.

Playing Music from USB Disk

1. Press the Forward or Backward button on the speaker or your mobile device to skip to the next or previous track.
2. Press the Play/Pause button to start or pause the music.
3. Press the BASS button to switch between EQ modes. The default EQ mode is Outdoor. Press the BASS button once to switch to Indoor EQ, and press again to return to Outdoor EQ.
4. Turn the volume knob clockwise to increase the volume and counterclockwise to decrease it.
5. Press the Light button to cycle through RGB modes. Hold for 2 seconds to turn the RGB lights on or off.
6. The speaker supports USB drives up to 64GB.
7. Supported music formats include MP3, WAV, WMA, FLAC, and APE.

AUX-IN Function

1. Press the Play/Pause button to mute or unmute the speaker.
2. Press the BASS button to switch between EQ modes. The default EQ mode is Outdoor. Press the BASS button once to switch to Indoor EQ, and press again to return to Outdoor EQ.
3. Turn the volume knob clockwise to increase the volume and counterclockwise to decrease it.

4. Press the Light button to cycle through RGB modes. Hold for 2 seconds to turn the RGB lights on or off.

Remarks

1. This speaker has a default volume set to %50 of the maximum volume.
2. This product's playtime may vary depending on the volume level and the type of music.
3. Press and hold the LED button for 2 seconds to adjust the microphone volume. Rotate the volume knob to increase or decrease the microphone volume. Press and hold the LED button again to exit this function.
4. Double-click the LED button to activate the reverb function. Rotate the volume knob to adjust the microphone volume. Double-click the LED button again to exit this function.
5. This speaker will automatically turn off after 10 minutes of inactivity if:
No Bluetooth connection is established.
No music or function is being used.
The USB playback is paused.
The AUX mode is paused.

Reset Functionality

1. If this speaker is unresponsive or fails to turn off, use a small round pin to press the reset button inside the AUX port to reset the speaker.
2. To clear all Bluetooth connection memory, press and hold the Backward (" \leftarrow ") button for 5 seconds to restart the speaker and turn it off.

Charging Instructions

- 1.** This product does not include a charger. Please use a rated charger (5V/2-1A, 9V/2A, or 20V/1.5A) to charge the device. The standard charging cable supports 5V/2A only.
- 2.** The charging time for this speaker varies between 4 to 10 hours depending on the charger used.
- 3.** When the battery voltage is low, this speaker will prompt you at 20% and 10%, and the indicator will turn red and flash. After two prompts, the speaker will automatically turn off to protect the battery.
- 4.** To protect the battery, do not use this speaker while it is charging.

Warnings

- 1.** This product should be stored and used in a temperature-controlled environment.
- 2.** This speaker should not be exposed to rain, moisture, or extreme weather conditions.
- 3.** This speaker should not be dropped or subjected to impact or force.
- 4.** This product should be kept away from water to prevent damage.
- 5.** This speaker is not intended for use by children.
- 6.** Do not disassemble, repair, or modify this product without authorization.
- 7.** To clean this speaker, use a soft cloth. If needed, lightly dampen the cloth with water. Do not use chemical cleaning agents.
- 8.** To extend the lifespan of this product and protect your hearing, avoid listening at maximum volume for extended periods.
- 9.** This speaker contains a built-in lithium battery. To avoid safety hazards, do not dispose of it in fire.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**