



Powerology

DUOMIX PORTABLE BLENDER

SKU: PWPB27BL-PWPB27BK

Table of Contents

Product Overview	2
Specifications	2
Product Design	3
Fault Resolution	3
Working Mode	4
Use Instruction	4
Safety Precautions	5
Cleaning Instructions	6
Use Instruction	7
Disposal	8
Warranty	8
Contact Us	8


Product Overview

The Powerology Duomix Portable Blender features a powerful 120W motor, dual-blade design, and a 600ml capacity, making it ideal for on-the-go blending. It efficiently crushes ice, cuts fruit, and blends ingredients with ease. The blender is designed with sharp steel blades, a leak-proof design, and USB-C fast charging for convenience. It is also easy to clean, offering a compact and portable solution for a variety of blending needs.

Specifications

Model	PWPB27
Input	5V/1A DC
Capacity	600mL
Motor Speed	14000RPM
Rated Power	120W
Battery Capacity	2 × 2000mAh
Charging Interface	Type-C
Product Size	88 × 88 × 300mm
Product Weight	660g

Product Design

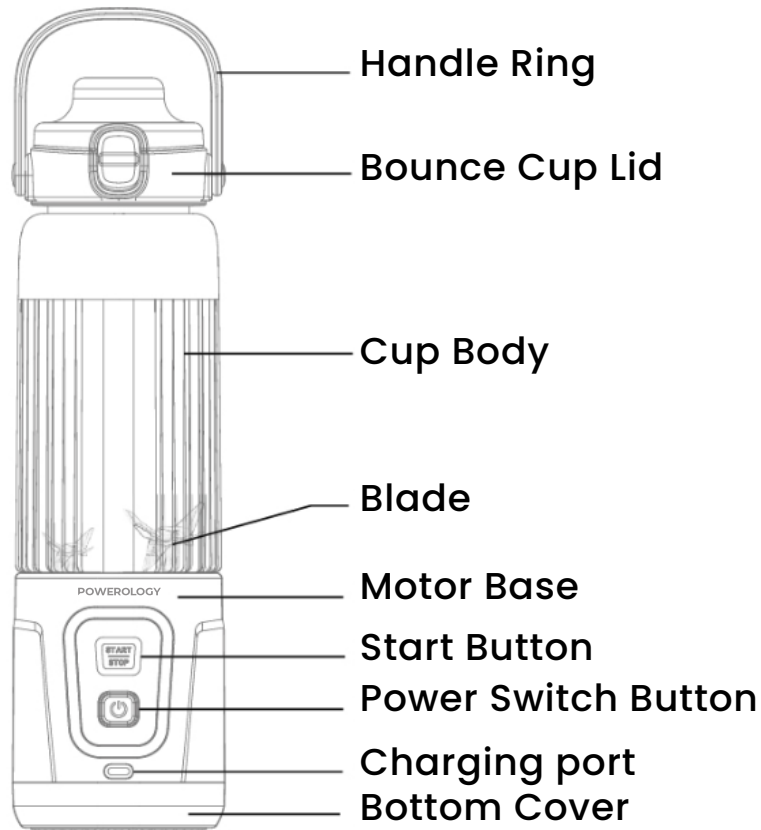

Fault Resolution

1. Blue LED not lighting up and machine won't turn on:

Ensure the power switch is turned on, and the fruit juice cup is securely attached to the main machine. If the issue persists, try turning the cup body tightly and pressing the power switch.

2. Red LED lights up and machine won't turn on:

This indicates low battery voltage. Please charge the device.

3. Red LED flashes after startup and stops:

If the fruit or vegetable quantity is too low, or the liquid surface is too high, try adding more ingredients to restore normal levels.

4. Red/blue LED flashes while charging:

This suggests a problem with the battery pack. Consider replacing it or contact the seller for maintenance.

5. Cup body leakage:

If the silicone ring is not properly installed, or if there is foreign matter, clean the silicone ring or reinstall it carefully.

Working Mode

- 1.** A single click turns the machine on; a second click turns it off.
- 2.** After the main machine and cup body are tightened, the blue LED flashes 5 times (in a full circle), indicating that the machine can be turned on normally.
- 3.** The LEDs rotate clockwise when the machine is turned on, and the timing lasts 12 seconds.
- 4.** If the single click doesn't start the machine and the red/blue display is replaced, it indicates that the safety switch is not detected in the safety protection mode.
- 5.** If clicking doesn't start the machine and the red LED is on, it indicates that the voltage is too low, and the bottom voltage protection mode is activated.
- 6.** After starting, the red LED flashes for 5 seconds, indicating an object is stuck or a blade is jammed, or the overloading protection mode has been activated.
- 7.** The red LED stays on while charging, and the blue LED turns on when fully charged.
- 8.** While charging, the red and blue LEDs alternate to protect the battery temperature from becoming too high.

Use Instruction

1. Charging Method


To charge, first connect the power source switch (①). The red LED will light up (②). Next, insert the charging port (③) to begin charging. It is equipped with a Type-C charging cable.

2. Startup Method

First, connect the power switch (①). The blue LED will light up (②). After that, in standby mode, press the start/stop button (④) to start, and press it again to shut down.

3. Power Indicator

When charging, the red LED light will light up in sequence from low to high voltage. After charging, the blue LED light will turn on.

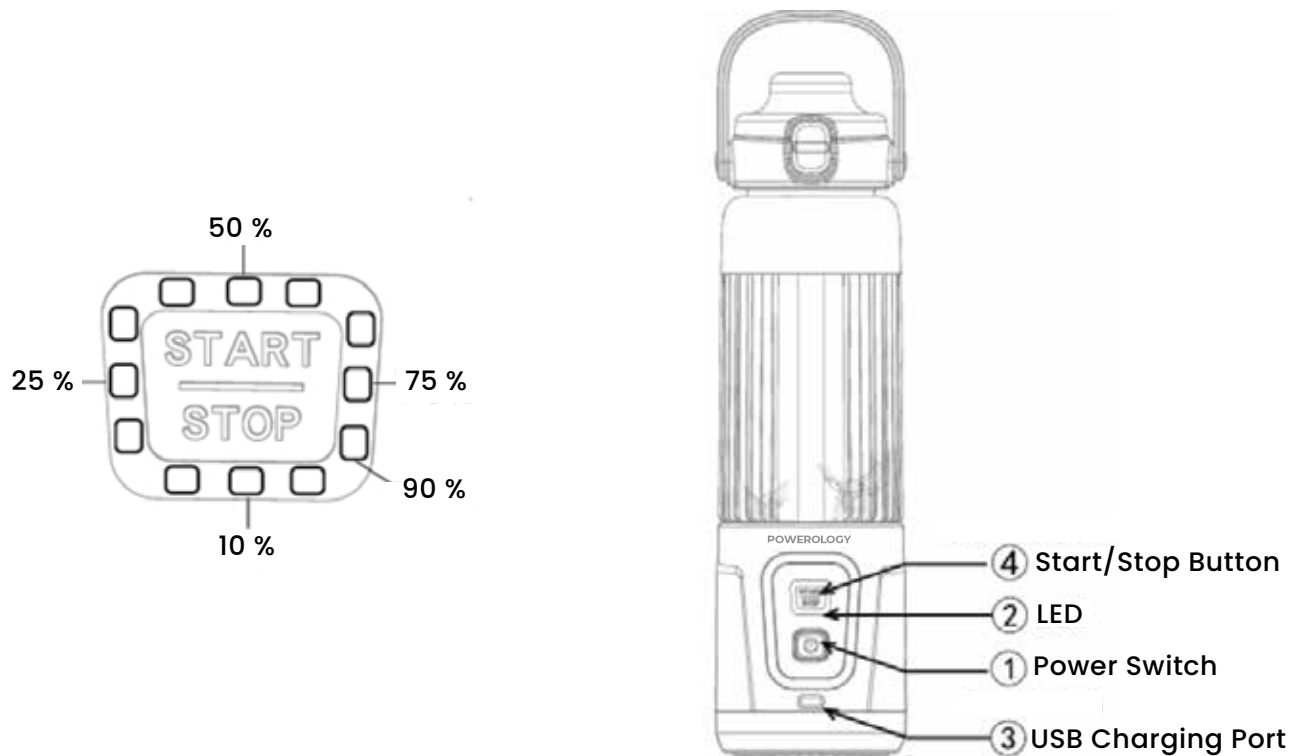

Safety Precautions

Please read the safety precautions carefully before use.

It is strictly forbidden to start the blender when the lid and base are not tightened firmly.

Do not open the blender while it's running; it is strictly forbidden to open the cup lid to avoid personal safety risks.

Do not touch the blades with fingers when cleaning.

It is strictly forbidden to wash the switch panel in water or soak the base in water.

Do not use the blender continuously when the blender feels hot.

The battery may burn or explode when exposed to high temperatures. If you find water leakage, do not use the blender. Send it for repair to avoid damage to internal components.

The battery must be charged every three months, or it will be permanently damaged, and the power switch will turn off. Please do not use it continuously. Rest for 1 minute after each working cycle. Do not overload it with fruits, vegetables, or water, as this can damage the machine.

After squeezing juice, it should be consumed soon. Clean the machine immediately.

Cleaning Instructions

1. Before cleaning, ensure the Blender Bravo is powered off and the blades have stopped moving.
2. Clean the mainframe base by wiping it with a dry or damp cloth. Avoid using sharp objects or corrosive liquids (e.g., alcohol, gasoline, acetone) to clean the product.
3. Clean the blades with the small brush provided.
4. Do not touch the blades with your fingers.

Correct Cleaning Method (Figure 11)

Incorrect Cleaning Method (Figure 12)



Use Instruction

1. Cut the fruits and vegetables into small pieces, about 2 cm in size (Figure 5).
2. Place the cut fruits and vegetables into the cup (Figure 6).
3. Adding liquid:
Add an appropriate amount of water or milk to the cup, ensuring the liquid height is controlled (Figure 7).
The distance between the cup's mouth and the liquid surface should be approximately three fingers' width.
4. Powering on and off
First, connect the power switch. The blue LED light will illuminate (Figure 8).
Enter standby mode by pressing the start/stop button to begin operation. Press the button again to shut down.



Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Powerology** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **Powerology** website or store. If **Powerology** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **powerology.me/warranty** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:
powerology.me/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at: **hey@powerology.me**

Website: **powerology.me**

Instagram: **[powerology_official](https://www.instagram.com/powerology_official)**

Facebook: **[powerology.ME](https://www.facebook.com/powerology.ME)**