

**PORODO**



**Porodo**

**Quad Base Gimbal Stabilizer**

SKU:PD-LFST148-BK


# **Table of Contents**


Overview	2
Setup Guide	3
Pairing Guide	4
Fill Light Function	5
Removing the Fill Light	6
Remote Control	7
Dreamspace Mode	8
Using the Gimbal	8
Charging the Gimbal	9
Specifications	10
Reminder	10
Disposal	11
Warranty	11
Contact Us	11

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

## Overview

1. Stabilizer Power Switch
2. Stabilizer Charging Port
3. Light Power/Adjust Button
4. Aluminum Alloy Tube
5. Wireless Remote
6. Tripod
7. Gimbal Unlock Key
8. Lamp
9. Lamp Charging Port
10. Manually Tighten Screws

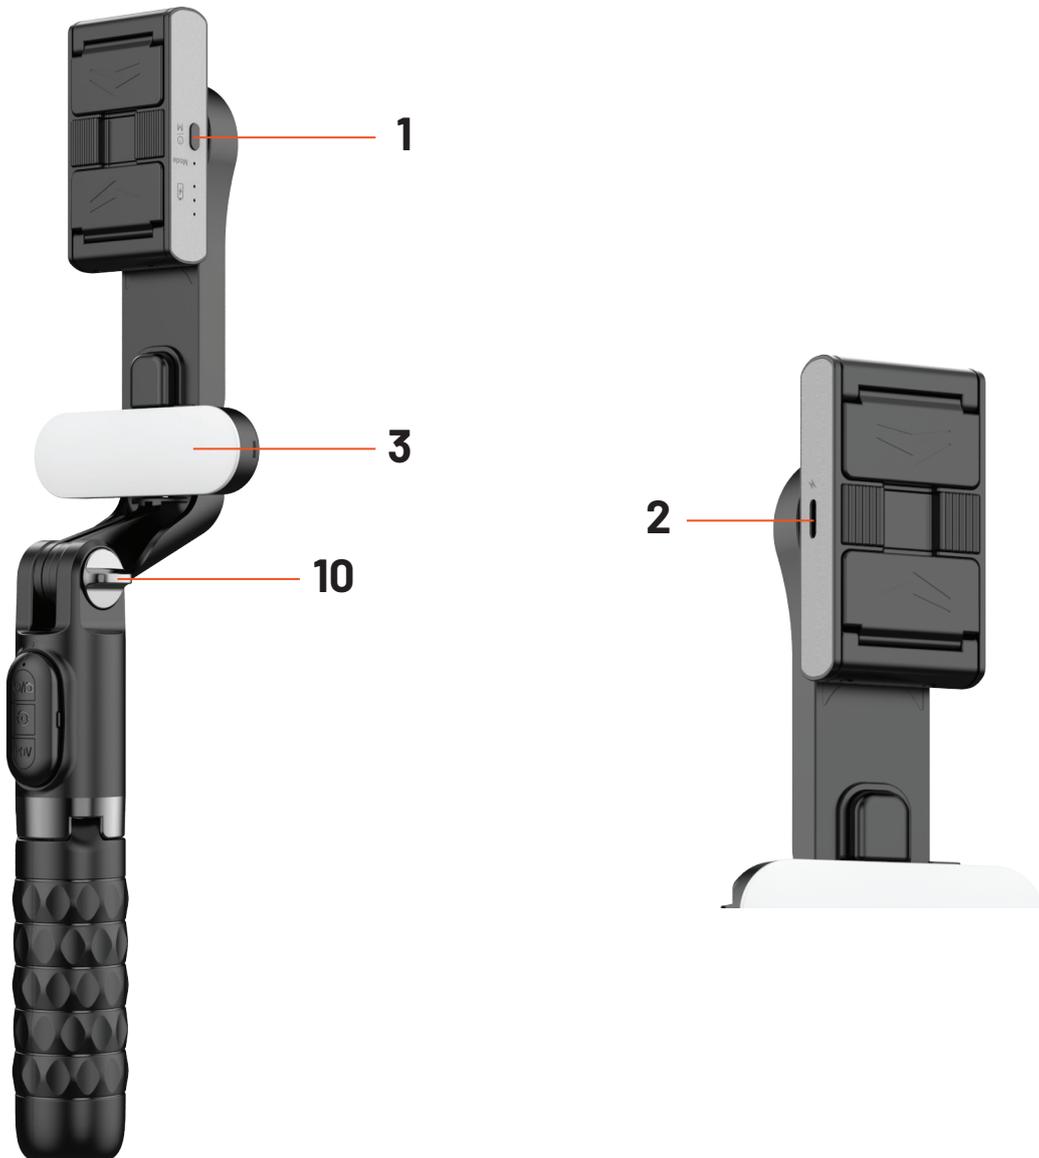

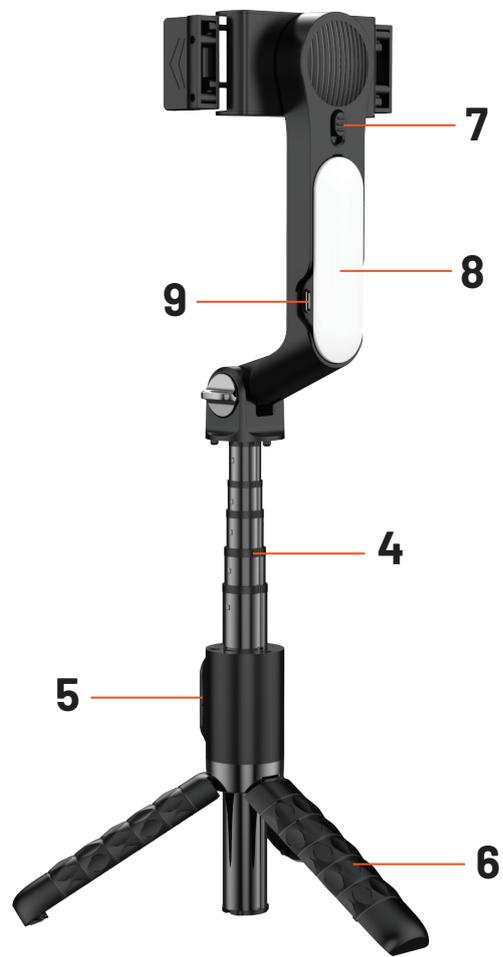

## Setup Guide

1. Detach the remote control from the tripod as shown.



**2.** Slide the battery cover up. Replace the battery.



**3.** Close the cover. Open the tripod outwards at the bottom of the handle.



## **Pairing Guide**

- 1.** Switch On and Off: Press and hold the camera button for 2 seconds to power the device on or off.
- 2.** Wireless Pairing: Long press the photo button to enter pairing mode. The pairing state indicator will flash once per second. Use the hand device to search for "Gimbal" and match it. When pairing is successful, the green light will turn off. Each button press triggers an immediate green light flash.
- 3.** Camera Button: Long press to switch the machine on or off. Click to take pictures or videos (start/stop).
- 4.** No Pairing: After startup, if the device remains unpaired and inactive for 10

minutes, it will automatically shut down.

**5. Pairing:** After turning the device on, when the selfie device is connected to the phone, 10 minutes of inactivity without operation will enter dormancy mode.

**6. Power Off:** In the power-on or sleep state, press and hold the camera button for 2 seconds to power down the device. The indicator light will flash and then turn off.

**7. Battery:** When the button battery is below 2.6V (low battery), the light will flash for 0.5 seconds.

## **Fill Light Function**

**1. Long press:** Power on/off

**2. Single click:** Set lighting mode and adjust brightness, or turn off flash mode

**3. Double-click:** Activate flash mode

**4. Lighting Modes:**

**White Light:** Soft light, medium light, strong light

**Warm Light:** Soft light, medium light, strong light

**Mixed Light:** Soft light, medium light, strong light



## **Backlight Charging Method**

The Type-C interface charging is used. The red light will be on during the charging process, and will turn off once charging is complete.

Number of White Lights: 12


Warm Lights: 12

White Light	Warm Light	Mixed Light
Color Temperature: 11,000K Lumen: 83LM Power: 0.6W	Color Temperature: 3,000K Lumen: 90LM Power: 0.6W	Color Temperature: 7,000K Lumen: 87LM Power: 0.6W
Battery Capacity: 400mAh Operating Voltage/Output Voltage: 3.7V Operating Current/Output Current: 0.16A Charging Voltage/Input Voltage: 5V Charging Current/Input Current: 450mA		



## **Removing the Fill Light**

- 1.** Remove the backlight from the selfie stick.
- 2.** Rotate the backlight 180° horizontally.
- 3.** Rotate 180° vertically and move it to the front of the selfie stick.
- 4.** Align the hollow concave and convex grooves on the selfie stick with the backlight and install it.
- 5.** Once aligned, move the backlight down and fix it into position.

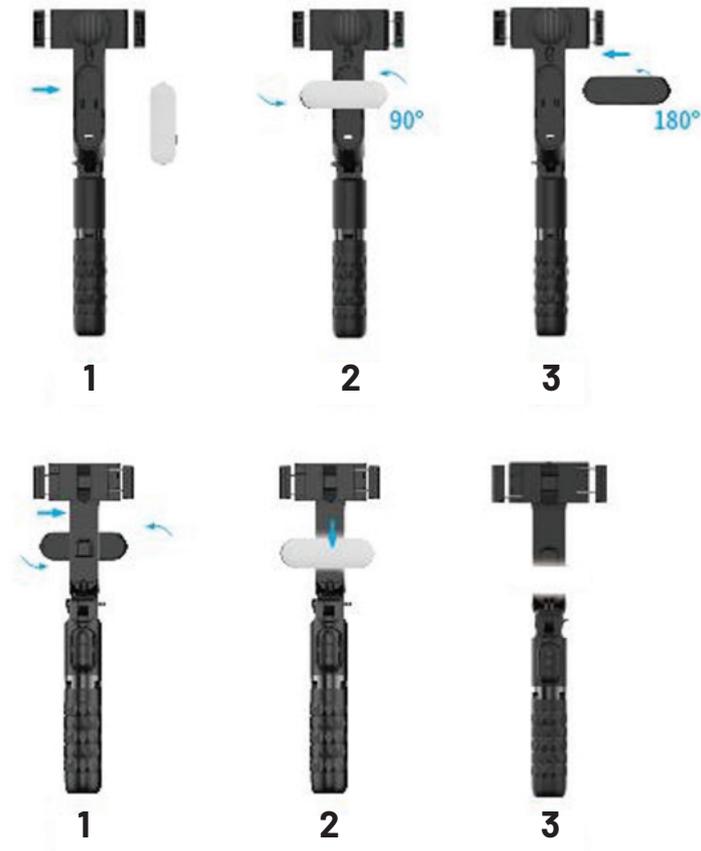

## Remote Control

**Note:** Ensure the phone's camera is on the same side as the power button to prevent interference with the shooting.

	1	<p><b>Long Press:</b> Press and hold the power button for 2 seconds to switch the machine on or off.</p> <p><b>Click:</b> To start or stop photo or video recording.</p>
	2	<p><b>Click (90°):</b> Rotate the screen 90° to switch between horizontal and vertical screen modes, activating Portrait Mode.</p> <p><b>Three Strikes:</b> Counterclockwise to enter dream space.</p> <p><b>Double-Click:</b> Clockwise to enter dream space.</p>
	3	<p><b>Click:</b> Activate POV half-following mode.</p> <p><b>Click Again:</b> Deactivate POV mode.</p>

**Note:** Please refer to the Bluetooth connection section for detailed instructions on pairing your device.

## **Dreamspace Mode**

**1.** When the phone is in landscape mode:

**1.1** Rotate left by  $40^\circ$

**1.2** Rotate right by  $230^\circ$

**1.3** Rotate left again by  $230^\circ$

**1.4** Return to the original position by rotating right by  $40^\circ$

**2.** When the phone is in portrait mode:

**2.1** Rotate right by  $125^\circ$

**2.2** Rotate left by  $125^\circ$  and  $145^\circ$

**2.3** Rotate right by  $145^\circ$  to return to the original position

## **Using the Gimbal**

Place the phone in the clamp to maintain its natural balance. Press and hold the power button for 3 seconds to turn the device on, and press and hold for 3 seconds to turn it off.

**1.** Click: Rotate  $90^\circ$ , and the horizontal and vertical screen will switch to Portrait Mode.

**2.** Three Strikes: Rotate counterclockwise to enter Dream Space.

**3.** Double-click: Rotate clockwise to enter Inception Mode.



Slide the locking ring upward to lock the head in self-timer mode. Slide the locking ring downward to unlock the head for steady-cam use.



## **Charging the Gimbal**

When the gimbal's battery is too low, the three white lights will flash together, indicating a low power state. At this point, use the Type-C port for charging. During the charging process, the white lights will gradually flash and eventually remain on, indicating that the gimbal is fully charged.



## Specifications

Material	ABS + Aluminum
Mount Holder Range	108.7 - 150.4mm
Folded Length	180mm
Extended Length	790mm
Pan Tilt Battery	400mAh
Remote Control Battery	CR1632
Charging Port	Type-C
Modes	Selfie Mode, Sports Mode, Dreamspace Mode
Bluetooth Version	5.2
Working Time	3-4 Hours
Product Dimensions	70.5 x 40.9 x 180mm
Product Weight	235g
Model Number	LFS148

## Reminder

- 1.** The selfie stick is compatible with Android 4.4 and above, and iOS 5.1 and above. If you modify the system's "volume button function" under your phone's camera settings, make sure to reset it to default or select "take a picture" to ensure proper functionality of the selfie stick.
- 2.** The clip must be held tightly when the phone is clamped.

### 3. Usage Modes:

**Gimbal Stabilizer Mode:** Best used with 3 rods.

**Selfie Stick Mode:** 5 rods are recommended for optimal performance.

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

## Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
**porodo.net/warranty**

## Contact Us

If you have any questions about this Privacy Policy, please contact us at:  
**info@porodo.net**

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**