



Green Lion

**Mini Wash
12L Portable Washing Machine**

SKU: GNWM14PORWH

Model No: GL-WM14

Table of Contents

Product Overview	2
Specifications	2
Safety Precautions	3
Product Components	5
Washing Guidelines	5
Electrical Schematic Diagram	6
Clothing Preparation	6
Drain Basket Installation	7
Detergent Usage	7
Program Settings & Operation	7
Water Drainage Procedure	8
Adapter Connection Guide	9
Product Operations	9
Cleaning and Maintenance	10
Questions and Answers	11
Material Contents	13
Environmental Protection Use	14
Disposal	14
Warranty	15
Contact Us	15

Product Overview

The Green Lion Mini Wash 12L Portable Washing Machine is a compact and efficient solution for washing small loads of laundry. It features a 12-liter wash capacity and a transparent wash bucket, allowing you to monitor the washing process with ease. The gentle pulsator wash system ensures a smooth water flow, protecting delicate garments while providing a thorough clean. Designed for convenience and ease of use, this portable washing machine is ideal for small spaces and quick laundry tasks, making it a smart choice for everyday use.

Specifications

Model No.	GL-WM14
Material	PP + PET
Rated Power	36W
Rated Voltage	110-260V
Rated Frequency	50/60Hz
Wash Capacity	12L
Wash Cycle	10 minutes
Noise Level	60 dB
Product Weight	1.5 kg
Product Dimensions	27.5 × 27.5 × 33 cm

Safety Precautions

Dear users,

Thank you for choosing the portable washing machine. To ensure better use and prevent personal injury or damage to the product, please read and follow the instructions carefully:

() Prohibited Actions: Must be avoided to ensure safe and proper use of the product.

() Actions to Observe: Must be followed to ensure correct usage.

() Improper handling or operations may cause damage to the product or property.

() Work Scenario: Do not clean clothes contaminated with gasoline, paint, corrosive agents, or acid and alkali chemicals.

() When Installing:

- a. Use rated voltage 220V single-phase two-hole socket.
- b. Only use the recommended adapter; do not use other substitutes to avoid damaging the machine.
- c. Insert the adapter plug into the power socket and make sure it is securely placed.
- d. Ensure the adapter plug is at the bottom of the machine, and the plug should be easily accessible when the machine is placed.

() Humidity and Environment:

- a. When installing the washing machine, do not place it in excessively humid environments, such as bathrooms.
- b. Do not install or use the washing machine in an environment where the temperature is lower than 5°C.

(ⓘ) Cleaning and Maintenance:

- a.** Please use the appropriate detergent for cleaning. When using detergent, ensure it does not gradually enter the eyes. If detergent comes into contact with the eyes, rinse immediately with water.
- b.** Regularly wipe the head with a dry cloth to remove dust or moisture, as it may affect performance.
- c.** Children should stay away from the washing machine when using powder detergent.
- d.** Do not tilt or move the machine during operation, as this may cause water leakage.

(Ⓢ) Fuel and Flammable Liquids:

- a.** Do not touch the adapter plug with wet hands. Avoid pulling the wire to disconnect the adapter.
- b.** Do not store gasoline or other flammable gases and liquids near the washing machine to prevent fire hazards.
- c.** Do not pour water into the lower body of the washing machine, as it can damage the machine and make it electrically defective.
- d.** Do not pour water hotter than 60°C directly into the washing machine, as it may cause the product to deform due to high temperatures, resulting in damage to the machine.

(ⓘ) Handling the Adapter:

Do not touch the adapter plug with wet hands.

Do not pull out the adapter while the machine is running.

(ⓘ) Failure or Damage:

- a.** If the machine is malfunctioning or abnormal, stop using it immediately. Unplug the adapter and turn off the power.
- b.** Do not attempt to repair or replace any parts of the washing machine unless specifically stated in this manual.
- c.** If repairs are needed, contact after-sales service or refer to the

"Answers" section for more information.

d. If the adapter cord is damaged, it must be replaced by a professional from the manufacturer, its maintenance department, or a similar service provider.

(⚠) **Note:** Always insert the adapter into the connector of the machine before pulling it out to avoid damage.

Product Components




Washing Guidelines

1. The detergent helps to break the bond between stains and clothes, improving the washing performance. It is recommended to use low-foam or no-foam soap powder available in the market.

2. When using detergent, apply it directly into the washing tub.
3. The laundry load should be less than the rated capacity of the washing machine.
4. As the washing machine is a single-use machine, after the washing cycle is complete, manually remove the clothes and place them in a drain basket or dehydration unit for drying.

Electrical Schematic Diagram

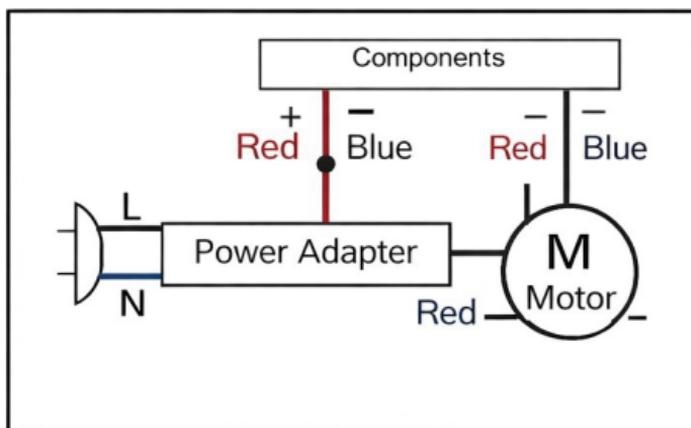

Clothing Preparation

1. Pretreatment of Clothes:

To ensure the washing machine performs effectively, remove any visible dirt and fibers from both the inside and outside of the clothes before washing. After this, place the clothes into the washing machine.


2. Placement of Clothing:

For better washing results, spread the clothes out evenly and place them into the washing bucket. This will help prevent any knots or clumps that could affect the washing process.

Drain Basket Installation



Draining Basket

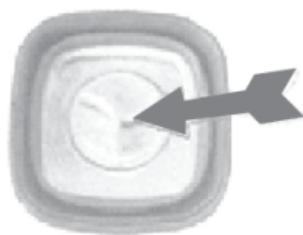

Place the draining basket into the designated slot as shown in the image. Ensure it is securely installed for proper water drainage during use.

Detergent Usage

Add detergent directly into the washing tub. Use an appropriate amount of detergent based on the amount of clothes being washed.

Important Notes:

- a. Do not use strong acidic or highly alkaline detergents as they can damage the machine. Choose detergents that are easily soluble in water to avoid blocking the drain pipe.
- b. Use low foam or no foam detergent to prevent excessive foam build-up during washing, which could overflow and affect washing performance.

Program Settings & Operation

The washing machine is equipped with three washing programs:

F1 Model: The three settings, 10 ,4, and 5, represent washing times of 4 minutes, 10 minutes, and 5 minutes, respectively. Please choose the appropriate program based on the amount of laundry and its dirt level.

Procedure Setting Steps:

1. Press the key once, and the first "5" program will start. Press it again, and the second "10" program will be activated, with the program switching cyclically.

2. After selecting the required program, wait for 3 seconds. The chosen program will be automatically set.

3. Once the program is complete, the light for the selected program will blink for 5 seconds, the buzzer will sound three times, and the light will turn off, indicating the program has ended.

Note: Ensure that the intake, discharge, and electrical connections meet the standards outlined in the instructions.

Select Installation Location:

Install the washing machine away from heat sources and direct sunlight to protect the outer coating from damage.

Unfold the washing machine first and place it on a stable, level surface.

Attention:

a. Place the washing machine in an open space with good airflow.

b. Do not place the washing machine in an area where it may freeze during winter.

Water Drainage Procedure

Upper Drainage Method:

If you need to empty the water from the washing machine immediately, follow these steps for manual upper drainage:

1. Turn off the washing machine and disconnect it from the adapter.

2. Hold the machine by the handle with one hand and secure it into the base's hand hole with the other hand.

3. Tilt the top of the machine downward and allow the water to gradually drain out.

Note: For concealed drains, ensure that the drainage is pulled out when performing this procedure.

Installing the Drain Basket:

1. Take out the drain basket.
2. Hold the handles on both sides of the basket and close them toward the middle. Ensure that the bayonet is securely fastened.
3. Place the drain basket onto the pulsator of the washing machine to ensure it fits properly.

Water Usage:

Fill the washing tub with clean water. Ensure that the water level does not exceed 80% of the tub's capacity.

Attention: Do not pour water hotter than 60°C into the washing machine to avoid damaging the product.

Adapter Connection Guide

Ensure that the power supply voltage and frequency match the specifications indicated on the machine's nameplate.

Disconnecting the Washing Machine:

1. Unplug the adapter from the socket.
2. Disconnect the adapter from the washing machine.
3. Drain the water from the washing tub.

Product Operations

a. Loading Clothes and Detergent:

1. Place the clothes to be washed into the washing tub.
2. Add the right amount of water, enough to completely cover the clothes (approximately 3-5 cm above the clothes).

3. Add the correct amount of detergent.

b. Program Selection:

1. Press the "washing time" button for 1 second until you hear a "drop" sound. This indicates that the program has been switched.

2. After selecting the desired program, wait for 3 seconds without making further selections. The machine will automatically start the washing program.

c. Program Completion:

1. After the program finishes, the signal light will flash for 5 seconds.

2. The buzzer will sound three times.

3. After 5 seconds, the signal light will turn off, indicating the program is complete.

d. Removing the Laundry:

1. Disconnect the adapter from the washing machine and socket.

2. Select the appropriate drainage method to drain the water from the washing machine.

3. Wipe down the washing machine.

Cleaning and Maintenance

a. After Washing:

Once the laundry process is complete, discharge the wastewater from the washing machine to prevent any long-term water quality issues.

b. When You Need to Store the Machine:

1. Clean the entire machine thoroughly.

2. Place the cover on top according to the washing machine's method.

3. Put the machine in the provided cloth bag and store the matching adapter with it.

Attention: Before cleaning the machine, ensure that the adapter has been disconnected from both the socket and the machine.

Questions and Answers

If you have any questions or suspect that the washing machine is not working properly, please refer to the following list for possible issues and their solutions. If the problem persists after trying the suggested solutions, please contact customer service for further assistance.

Important: Do not attempt to repair or disassemble the washing machine yourself.

Phenomenon: 3 Signal lights flash at the same time

Possible reasons: Too much clothing, Serious entanglement of clothes

How to solve: Reduce the number of laundry and wait for a while before re-selecting the program for washing.

Scatter the clothes manually and wait for a while before reselecting the program for washing.

Phenomenon: Touch button no response

Possible reasons: Insensitive to touch

How to solve: Disconnect the connection with the saddle board, then power on again, and touch the key to select the desired program.

Phenomenon: There is still residual water after the whole machine is drained.

Possible reasons: Drainage not exhausted

How to solve: Drain the water again in the way of upper drainage. When there is no obvious water drop, wipe it dry with a dry cloth.

Phenomenon: During the washing process, the whole machine

Possible reasons: No, there are water droplets on the edge, The water level is too high

How to solve: Reduce the amount of water and lower the water level to

ensure that the water does not come from the edge of the top during the washing process.

Gap overflow water drops.

Phenomenon: Sudden power failure during washing

Possible reasons: Adapter and machine mother, Poor contact of the seat

How to solve: Use an eraser to wipe the plug that matches the adapter with the whole machine, and then reinsert the whole.

In the base of the machine, re-power on the test.

Phenomenon: Loud noise during washing

Possible reasons: Sound inside the machine

How to solve: Because there is a reduction motor inside the machine, in the work project, the rotation of the reduction motor gear.

There will be the sound of clothes during the movement, which is a normal phenomenon.

Phenomenon: Draining basket out

How to solve: Put the drain basket back in place and restart the drain procedure.

Phenomenon: Too many clothes

Possible reasons: Less amount of draining clothes

How to solve: Please place the draining clothes flat and evenly and restart the draining procedure.

Phenomenon: Clothes not placed flat

How to solve: Please place the draining clothes flat and evenly and restart the draining procedure.

Material Contents

Component Name	Toxic and Hazardous Substances or Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (CR6+)	PBBs (PBB)	Polybrominated Diphenyl ethers (PBDE)
Materials	○	○	○	○	○	○
Barrel Body	○	○	○	○	○	○
Upper Cover	○	○	○	○	○	○
Handle	○	○	○	○	○	○
Base	○	○	○	○	○	○
Connection Line	○	○	○	○	○	○
Screw	○	○	×	○	○	○
Motor	○	○	○	○	○	○
Circuit Board	○	○	○	○	○	○
Sealing Ring	○	○	○	○	○	○
Silicone	○	○	○	○	○	○
Power Cord	×	○	○	○	○	○

This table is prepared according to SJ/T11364.

(○): indicates that the content of the hazardous substance in all homogeneous materials of the component is below the limit specified in GB/T26372 (IEC62321).

(x): indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit

specified in GB/T26572. However, the table above explains that the content of parts marked with "x" exceeds the limit because no mature alternative technology is available in the industry.

Environmental Protection Use

The mark on the product indicates that the environmental protection service life is 10 years.

The environmental protection service life of electronic and electrical products refers to the period during which the toxic and harmful substances or elements contained in the products will not leak or suddenly change, ensuring that users will not cause serious pollution to the environment or damage to the human body and property when using the product.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.greenlion.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.greenlion.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: <https://www.greenlion.net/>

Sales: sales@greenlion.net

Service Support: Support@greenlion.net

Telegram: [@greenlion_global](https://www.instagram.com/greenlion_global)

Instagram: [@greenlion_global](https://www.instagram.com/greenlion_global)