

PORODO
LIFESTYLE



Porodo Lifestyle
Dual Design Air Fryer and Grill

PD-LFST022-BK

Table of Contents

Features	2
Safety Instructions	2
Before First Use	4
Instructions for Use	5
Product Overview	5
Specifications	6
Warnings	6
Accessory Guide	6
A. Description	6
B. Usage	7
Control Panel	8
Cooking Guide	8
Operation Instructions	9
Suggested Settings	9
Adjusting the Time and Temperature	10
DIY Cooking Guide	10
Grilling Instructions	11
Pause	11
Cooking Table	11
Cleaning and Maintenance	12
Cleaning Precautions	12
Storage Notes	13
Warranty	14
Contact Us	14

Features

1. Features high-temperature heating rods and cyclic air flow, supporting a variety of cooking methods from air frying to char grilling.
2. Crafted from durable, heat-resistant material, the glass container offers optimal cooking conditions, withstands high temperatures, and provides 360-degree visibility.
3. Effortlessly transition from air frying to grilling in seconds with the air fryer's easy-flip 180-degree design and versatile cooking settings.

Safety Instructions

1. Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.
2. This appliance may be used by children aged 8 years and older.
3. This appliance should not be operated by any person, including children, who has reduced physical, sensory, or mental capabilities, or lacks the necessary experience and knowledge, unless they are under supervision or have received adequate instruction.
4. Children must not play with the appliance.
5. Only individuals over 16 years old who are under supervision are permitted to perform maintenance and cleaning of the appliance.
6. Keep the appliance out of reach of children younger than 16 years.
7. This appliance is appropriate for use in a household environment and in similar settings such as:
 - * Kitchens in shops, offices, or other professional environments.
 - * Agricultural properties.
 - * Hotel or motel rooms and other residential-type settings.
 - * Guest rooms or equivalent spaces.

Attention: This appliance must not be operated with an external timer or a separate remote control.

8. Before use, verify that the voltage indicated on the appliance's rating label corresponds with your local network's voltage before connecting to the mains power supply.

- 9.** Ensure the cord does not rest on hot surfaces or hang over the edge of a table or countertop.
- 10.** If the supply cord is damaged, have it replaced by a qualified engineer to avoid any hazards, or send the appliance to an authorized service center for repair.
- 11.** Supervise closely when the appliance is used near or by children.
- 12.** Avoid using accessories not recommended or sold by the manufacturer as they may cause fires, electrical shocks, or injuries.
- 13.** Unplug the appliance when not in use, before assembling or disassembling any parts, and prior to cleaning. Ensure all buttons and knobs are in the 'Off' position and unplug the appliance by grasping the plug. Do not pull on the cord to unplug.
- 14.** Do not leave the appliance unattended while it is operating.
- 15.** Never place the appliance near a gas or electric stove, or in locations where it might come into contact with a warm appliance.
- 16.** Use the appliance only with the stand provided.
- 17.** Do not use the appliance outdoors.
- 18.** Operate the appliance solely for its intended purpose.
- 19.** Always place the appliance on a stable, dry, and level surface.
- 20.** This appliance is designed for domestic use only.
- 21.** Any necessary repairs should be performed by the authorized service professionals.
- 22.** Never submerge the appliance, its cord, or plug in water or any other liquid.
- 23.** Ensure that children are kept away from the cord and the appliance.
- 24.** Keep the cord away from sharp edges, as well as from hot parts or other heat sources.
- 25.** Before first use, remove all packaging materials and any promotional stickers.
- 26.** Do not leave the appliance unattended while it is in operation.
- 27.** Avoid using or storing this appliance outdoors.
- 28.** Use the appliance only for its intended purposes.
- 29.** Ensure the voltage and frequency of your power source match the specifications on the appliance's rating label.
- 30.** The plug must be inserted into an appropriate outlet that conforms to all local electrical standards and requirements.

- 31.** Utilize only the utensils provided with the appliance.
- 32.** Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way. In such cases, contact an authorized service agent for inspection. +Do not attempt repairs yourself.
- 33.** To avoid electrical shocks or burns, never immerse the appliance, its cord, or plug in water or other liquids.
- 34.** Operate the appliance only with dry hands to prevent electric shock.
- 35.** Fully extend the cord to prevent it from overheating.
- 36.** Ensure the power cord does not hang over the edge of a counter or come into contact with hot surfaces.
- 37.** Avoid letting the power cord run underneath or around the appliance.
- 38.** Always remove the plug from the socket by holding the plug itself, not by pulling on the cord or the appliance.
- 39.** Do not use the appliance if there is any water in it or if parts are still wet after cleaning.
- 40.** Never operate the appliance without ingredients.
- 41.** Exercise caution when using sharp accessories like knives within the appliance; only touch these accessories when they have stopped moving.
- 42.** Maintaining the appliance in a clean condition is crucial to prevent a reduction in its lifespan and avoid hazardous situations.

Before First Use

Step 1: Carefully unpack the unit and remove all packaging materials. Place the unit on a flat, heat-resistant, non-flammable surface.

Note: Do not immerse the appliance in water or any other liquid.

Step 2: Clean the unit with a soft, damp cloth and dry it thoroughly.

Note: Upon first use, a slight odor may be noticed. This is not harmful and will dissipate after a few minutes. The odor is due to protective oil applied to components during manufacturing to prevent wear during transportation.

K Instructions for Use

Step 1: Ensure that the Air Fryer is switched off and unplugged from the mains power supply.

Step 2: Position the Air Fryer on a flat, stable, heat-resistant surface that is at a comfortable height for the user.

Step 3: Remove the glass container from the air fryer using the handle. Place the mesh rack into the glass container, then add the food onto the mesh rack.

Step 4: Reinsert the glass container into the air fryer.

Step 5: Connect the plug to the power socket. Then, select the desired cooking time and temperature.

Step 6: Once cooking is complete, turn off the Air Fryer at the mains power supply.

Warning: Ensure the unit is NOT turned ON without any food inside.

K Product Overview




1. Digital Control	5. Air Outlet
2. Head	6. Release Button
3. Detachable Glass Container	7. Mesh Rack
4. Handle	8. Grill Pan

Specifications

Rated Voltage	220-240V
Rated Frequency	50/60Hz
Rated Power	1200-1400W
Power Plug	UK 3-Pin Plug
Capacity	4.5L
Temperature	160-200C (Air Fry Mode), 40-200 (Grill Mode)
Preset Function	8 (Fries, Steak, Fish, Shrimp, Pizza, and Chicken.)
Timer	Up to 60 minutes

Warnings


⚠ The correct method for using the Air Fryer is as follows:

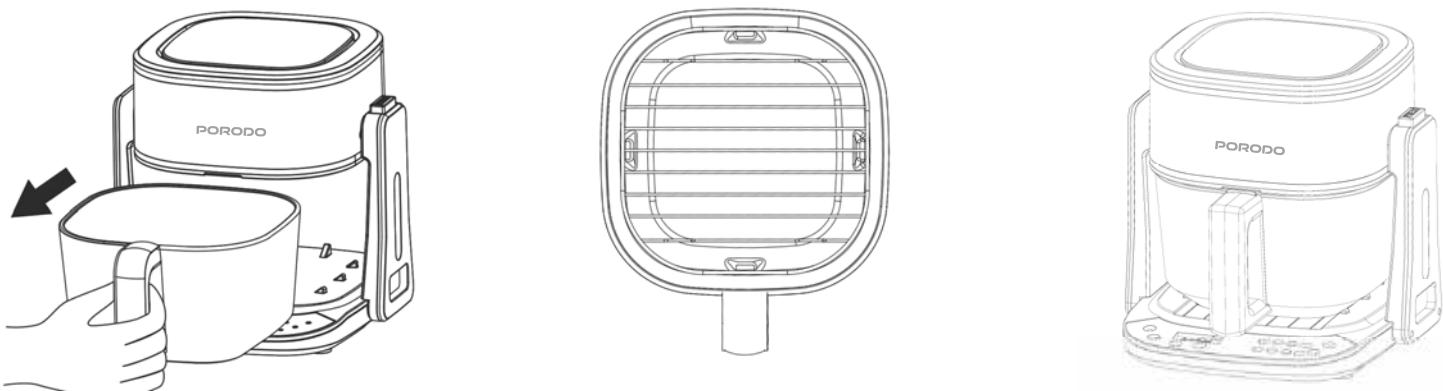

⚠ Before use, ensure that you remove the paper holder located inside the unit.

Accessory Guide

A. Description

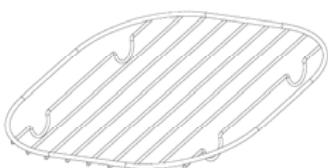

Mesh Rack




Grill Pan

Item	Description
Mesh Rack	Suitable for food such as fries, chicken wings.
Grill Pan	Suitable for steak and salmon.

B. Usage

B.1 Using the Mesh Rack

1. Remove the glass container from the air fryer.
2. Place the mesh rack into the glass container and add the food on top of it.
3. Reinsert the glass container back into the air fryer.

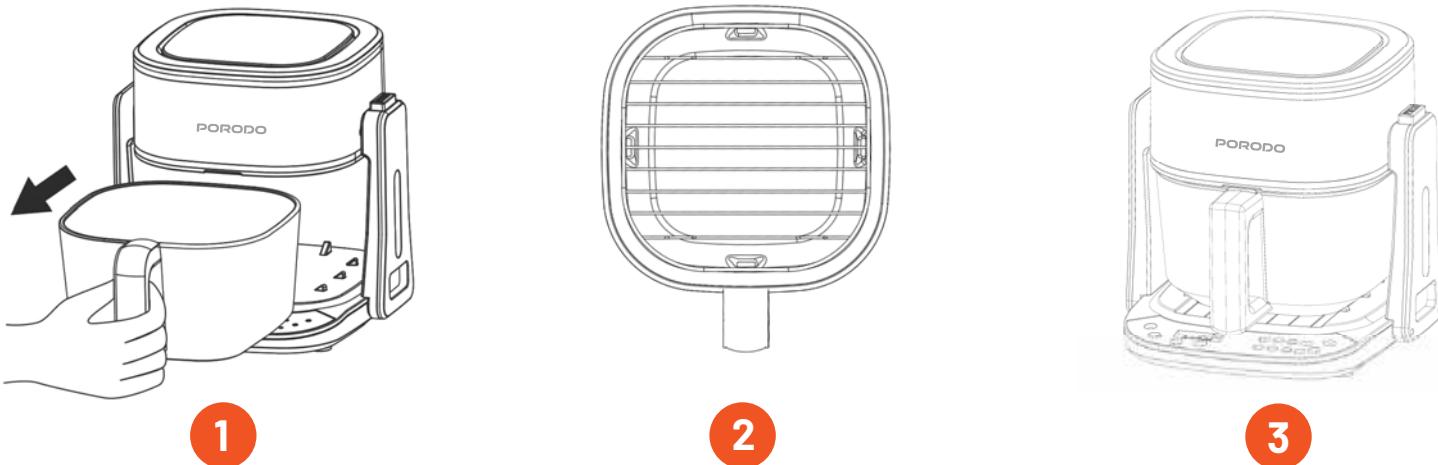

B.2 Use of Grill Pan for Steak:

1. Remove the glass container from the air fryer.
2. Press the button on the side panel and rotate the head upside down.
3. Place the grill pan on the device's head.



K Control Panel



Item	Function
1.	Turns the appliance on or off and to pause operation.
2.	Switches between different preset cooking modes.
3. DIY	Creates and save your own cooking recipe.
4. +	Adjusts the timer.
5. -	Adjusts the temperature.
6.	Sets the desired cooking temperature and time.

K Cooking Guide

1. Select your preferred method to cook your food, either using the included mesh rack or grill pan.
2. Add the food to the air fryer. If using the mesh rack, place the food on it before inserting it into the air fryer.
3. Plug the power cord firmly into a wall AC outlet.
4. If the glass container is pulled out during cooking, the air fryer will pause, and "E5" will appear on the display. The timer will continue, but the unit will not heat. Once the glass container is reinserted, the cooking process will resume.
5. When the timer reaches zero, the air fryer will emit a beep sound to indicate that the cooking process is complete, and the air fryer will stop operating.

Note: The fan will continue running for approximately one minute to release residual heat from the motor, even after the air fryer has stopped operating.

Operation Instructions

[A] Power Button:

1. Press the  button on the control panel to turn the appliance on.
2. There are two ways to operate the air fryer:
 - 2.1 Use the preset menu cooking times and temperatures.
 - 2.2 Manually set your desired cooking time and temperature.

[B] Present Menu:

1. Press the  button on the control panel to enter the preset menu.
2. Press the  button repeatedly to cycle through the different cooking options.
3. Once your desired option is selected and displayed, press the  button on the control panel to begin the cooking process.

Suggested Settings

Menu	Temperature	Time
French Fries	160°C	25min
Cake	180°C	30min
Pizza	180°C	15min
Chicken	200°C	25min
Chicken Wing	200°C	20min
Fish	180°C	10min
Shrimp	180°C	15min
Steak	200°C	20min

Adjusting the Time and Temperature

1. Press the  button on the control panel, then press the  button. The temperature will begin flashing on the screen, indicating it is ready to be adjusted.
2. While the temperature is flashing, use the (+) or (-) buttons on the control panel to set the desired temperature.
3. Once the desired temperature is displayed, press the  button on the control panel again. The time will then start flashing on the screen.
4. Use the (+) or (-) buttons to adjust the timer to your desired setting.
5. After setting the time, press the  button to start the cooking process.

6. Temperature and Time Limits:

- a. The maximum temperature that can be set is 200 Degrees Celsius.
- b. The minimum temperature that can be set is 40 Degrees Celsius.
- c. The maximum time that can be set is 1 hour.
- d. The minimum time that can be set is 1 minute.

DIY Cooking Guide

1. Press the  button on the control panel to turn the appliance on.
2. Press the DIY button on the control panel.
3. The temperature will flash on the screen, allowing you to adjust it. Use the (+) or (-) buttons on the control panel to set the desired temperature.
4. Once your desired temperature is displayed, press the  button again. The time will then flash on the screen. Use the (+) or (-) buttons to set the timer.
5. After setting the time, press the  button to start cooking.

6. Temperature and Time Specifications:

- a. Maximum temperature: 200 Degrees Celsius.
- b. Minimum temperature: 40 Degrees Celsius.
- c. Maximum time: 15 hours.
- d. Minimum time: 1 minute.
- e. Default time: 30 minutes.
- f. Default temperature: 40 Degrees Celsius.

Grilling Instructions

1. Press the  button on the control panel to turn the appliance on. The display will show "00:00".
2. Press the DIY button on the control panel, then press the  button.
3. The temperature will flash on the screen, allowing you to adjust it. Use the (+) or (-) buttons on the control panel to set the desired temperature.
4. Once your desired temperature is displayed, press the  button again. The timer will then flash on the screen. Use the (+) or (-) buttons to adjust the timer.
5. After setting the timer, press the  button to start the cooking process.
6. Temperature and Time Specifications:
 - a. Maximum temperature: 200 Degrees Celsius.
 - b. Minimum temperature: 40 Degrees Celsius.
 - c. Maximum time: 1 hour.
 - d. Minimum time: 1 minute.

Pause

1. During the cooking process, press the  button to pause the cooking. Press the button again, and the cooking will automatically resume.
2. To stop the appliance completely, hold the  button; the air fryer will cease operation.

Cooking Table

The cooking times provided are intended as a general guideline. Actual times may vary based on factors such as the quantity of food, cooking temperature, and the weight of the ingredients.

Note: When cooking frozen food, please allow additional time based on the weight of the food.

Food	Temperature	Time
Cashew Nuts	200°C	5 to 8 mins
Coffee Bean	200°C	20 to 25mins
Biscuits	180°C	10 to 15mins
Fish Sticks	180°C	6 to 10mins
Chicken nuggets	180°C	10 to 12mins
Chicken Breast	200°C	10 to 15mins
Drumsticks	200°C	15 to 20mins

Cleaning and Maintenance

1. Unplug the unit and allow it to cool down completely before beginning any cleaning or maintenance.
2. After each use, ensure all parts are completely clean and dry. Once the unit has cooled, clean the glass container with warm soapy water using a damp cloth. Avoid using hard objects like wire brushes to clean, which can scratch surfaces and lead to rust. Note that the glass container, mesh tray, and grill pan are dishwasher safe.
3. For self-cleaning, add a half-inch of water mixed with a mild liquid detergent to the unit. Set the temperature to 60°C and the timer for 15 minutes to soften and dissolve residue. After the cycle, unplug the unit and let it cool completely before final cleaning.

Cleaning Precautions

1. Never immerse the cord or plug in water or any other liquid.

- 2.** If scrubbing is required, opt for a nylon or polyester mesh pad. Avoid using abrasive materials.
- 3.** Do not use steel wool pads or abrasive materials that could damage the surfaces.
- 4.** Never use solvents or cleaning powders.
- 5.** Ensure no liquids enter the head or lid of the appliance.

Storage Notes

- 1.** Ensure the unit is completely cool before storing.
- 2.** Store the appliance in a dry location.
- 3.** Avoid placing any heavy items on top of the appliance during storage as this may cause damage.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**