
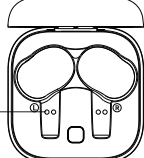

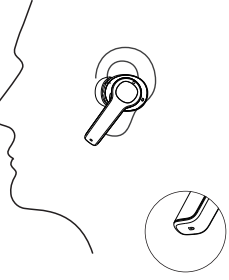
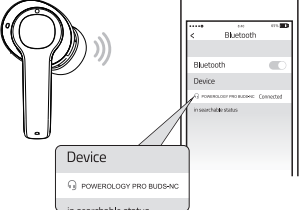

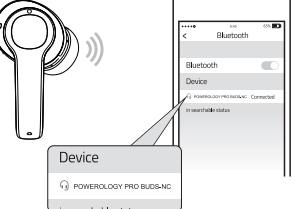
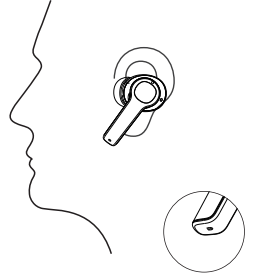
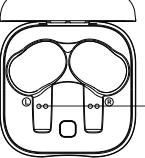







60 mm 90 mm POWEROLOGY  User Manual Powerology Buds Pro Model: PWLAU002 Made in China CE RoHS compliant	Dear customer Thanks for your preference! Please read this manual carefully before use. Please keep it for future reference. Product and accessories  Charging Case X1  Bluetooth Earbuds X2  UMX 1  Type-C Charging Cable X1 (Photos above for reference only)	Product structure description  Charging pogo pin  Microphone  Touch area  Multifunction Button (MFB)  Charging contacts point  Microphone  Charging port	Instructions on how to wear earbuds Insert the earphone into the cochlea and adjust them to suitable angles.  Power on Instruction 1: Open the upper lid of the charging case first, both earbuds will power on automatically and then connect to each other (Voice Prompt: Power On). Instruction 2: When both earbuds are out of the charging case first, both earbuds will power on automatically and then connect to each other (Voice Prompt: Power On).	Connecting to Bluetooth on mobile phone When using it for the first time, please refer to Instruction 1 or Instruction 2 to power on earbuds. Then, enable the Bluetooth function of a mobile phone to search nearby Bluetooth devices and select the Bluetooth device named "POWEROLOGY PRO BUDS-NC" for connection. If " Connected mark is displayed after the device name, it means that both earbuds are successfully connected to the mobile phone (Voice Prompt: "Connected"). For future use, please just follow instructions to power on the earbuds first. Then they will automatically connect back to the Bluetooth name on the mobile phone that was last connected. If the phone is not nearby or the Bluetooth function is not enabled, earbuds will enter into the searchable status (Voice Prompt: "Pairing"). 	Notes 1. The pairing mode only lasts for 3 minutes. If there is no pairing and no operation during this period, both earbuds will power off automatically. If re-connection is requested, please refer to instructions on "Power On" and "Connecting to Bluetooth on mobile phone". 2. If the earbuds are beyond the transmission distance, the connection will be interrupted. If they are replaced within the transmission distance in 3 minutes, they will be re-connected to the mobile phone again automatically. Power off 1. Earbuds power off in the charging case: replace earbuds in the charging case and close the upper lid (when the charging case has sufficient power) and the earbuds will automatically power off in 3 seconds. 2. Manual shutdown: Press and hold the MFB on either earbud for about 7 seconds, both earbuds will power off (Voice Prompt: Power off). 3. Earbuds power off in low battery: When the power of either earbud is lower than or equivalent to the low-battery shutdown voltage, the earbud will automatically power off (Voice Prompt: Power off). 4. Earbuds power off automatically: If earbuds are disconnected from a mobile phone without re-connection and any operation within 3 minutes, earbuds will automatically power off (Voice Prompt: Power Off).
Incoming calls Answer a call: When there is an incoming call, double-tap the MFB on either earbud to answer the call Hang up a call: During a call, double-tap the MFB on either earbud to hang up the call Reject a call: When there is an incoming call, press and hold the MFB on either earbud for 2 seconds to reject the call Music play Volume up: Under music/phone call mode, tap the MFB on the right earbud to increase the volume Volume down: Under music/phone call mode, tap the MFB on the left earbud to decrease the volume Previous track: Under music mode, triple-tap the MFB on the left earbud for previous track Next track: Under music mode, triple-tap the MFB on the right earbud for next track Play/Pause: Under music mode, double-tap the MFB on either earbud to play/pause music Notes 1. Music will be interrupted when you answer an incoming call. It will resume after hanging up. 2. If you activate Siri when playing music, music will be paused. After Siri is suspended, the music will resume automatically.	3. If only one earbud is used, triple-tap MFB on either earbud for next track. 4. Low-battery alarm: When the power of the earbud is less than 20%, it will alarm every 5 minutes. AMBIENT MODE and ANC MODE When both earbuds power on and they connect to each other, the ANC mode is off. Press and hold the MFB on the right earbud for 2 seconds to turn on AMBIENT MODE (Voice Prompt: AMBIENT MODE) Press and hold the MFB on the right earbud for 2 seconds again to shift to ANC MODE (Voice Prompt: ANC ON) Press and hold the MFB on the right earbud for 2 seconds one more time to turn off ANC MODE (Voice Prompt: ANC OFF) Activating Siri Under standby mode or music mode, press and hold the MFB on the left earbud to activate Siri (Voice Prompt: Dul). When only one earbud is used, press and hold the MFB on either earbud to activate Siri (Voice Prompt: Dul). Master-secondary switch When the master and the secondary are working, the secondary will switch to the master if the master is replaced into the charging case and powers off.	Charging the case 1. Low-battery alarm in charging case: If there is only one LED indicator light flashes when earbuds are charged in the case, it suggests the power is less than 20% and the case should be charged. 2. When a charging cable is used to charge the case, the white LED indicator lights on the case will flash. When the case is fully charged, the lights will be on for 60 seconds and then go out. Charging the earbuds Charging case is not being charged while earbuds are being charged in the case: Take both earbuds out, replace the left earbud in the case, the LED indicator on the left will be on for 1 second; Likewise, the LED indicator on the right will be on for 1 second as well. The two situations above indicate the power is not full. If you open the upper lid or close the lid and find 1 LED indicator light flashes for 10 seconds and then go out, this indicates the case is in low battery (less than 5% power)	 When earbuds are being charged If you replace the left earbud in the case, the LED indicator light on the left will be on for 1 second. If you replace the left earbud in the case, the LED indicator light on the right will be on for 1 second. LED indicators display under charging mode Fully charged: Three LED indicator lights are on Two lights are on and the third light flashes: over 70% power The first light is on and second light flashes: 40-70% power Only one light is on: 20-40% power Only one light flashes: less than 20% power Cancel pairing records Under "Paired" mode, replace the earbuds in the charging case and press and hold the button on the charging case for 10 seconds, then you will see the white light flashes quickly and then goes out. At this time, the pairing record is successfully cancelled. After 1 second, they will enter into "Pairing" mode again.	Specifications Model NO: PWLAU002 Bluetooth version: V5.2 Wireless range: 10m Rated power: 3mW Noise cancellation depth: -35db Battery capacity (Earbud): 3.7V/50mAh Battery capacity (Charging case): 3.7V/480mAh Playtime: 8H Charging time (charging case): 2H Charging port: Wireless charging / Type-C Headphone size: 34.4x21.3x23.5mm Charging case size: 52.2x52.2x27.5mm Safety Instructions 1. Please follow the instructions in this manual. Do not disassemble or reft the product for any reason. Otherwise it may cause earbuds to malfunction or to burn. 2. Do not immerse the product in any liquid for a long time or wash the product for a long time.	3. Do not use the charger whose rated current and voltage exceed that of the earbuds (5V/1A) to charge the earbuds. Otherwise it will easily cause damages to the earbuds batteries. 4. Do not block the openings of the earbuds, such as charging port, indicator lights and microphones, etc. 5. Please avoid using the earbuds at high volume or for a long time to prevent dizziness or damage to hearing. 6. Do not use the earbuds in thunderstorm, which can cause the earbuds to malfunction and signal to be interrupted. Trouble shooting If the earbuds do not pair with your mobile phone, try the following steps: 1. Make sure the earbuds have sufficient power 2. Make sure the earbuds power on 3. Make sure the earbuds are not connected to other devices 4. Make sure that the Bluetooth function is enabled on the mobile phone 5. Make sure that the earbuds and the mobile phone are placed within the transmission range

ملاحظات 1. وضع الشحن يستمر لمدة 3 دقائق فقط. إذا لم يكن هناك اقتران ولم يتم إجراء أي عملية خلال هذه الفترة، سيتم إيقاف تشغيل كلا سمعي الأذن تلقائيًا. في حالة طلب إعادة الاتصال، يرجى الرجوع إلى التعليمات حول "التشغيل" و "الاتصال بالبلوتوث على الهاتف المحمول". 2. إذا كانت سماعات الأذن بعيدة عن مسافة الإرسال، سيتم قطع الاتصال. إذا لم يستبدلها ضمن مسافة الإرسال خلال 3 دقائق، سيتم إعادة توصيلها بالهاتف المحمول مرة أخرى تلقائيًا. إيقاف التشغيل 1. إيقاف تشغيل سماعات الأذن في حالة الشحن: استبدل سماعات الأذن في حالة الشحن وأغلق الغطاء العلوي عندما تكون حاوية الشحن مملوءة بحالة كافية وسيتم إيقاف تشغيل سماعات الأذن تلقائيًا بعد 3 ثواني. 2. إيقاف التشغيل اليدوي: اضغط مع الاستمرار على مفتاح MFB على أي من سماعتي الأذن لمدة 7 ثوانٍ تقريبًا، وسيتم إيقاف تشغيل كلا سمعي الأذن (صوت: إيقاف التشغيل). 3. إيقاف تشغيل سماعات الأذن في حالة البطارية المنخفضة: عندما تكون طاقة أي من سماعات الأذن أقل من أو مكافئة لأحد إيقاف تشغيل البطارية المنخفض، سيتم إيقاف تشغيل سماعة الأذن تلقائيًا (صوت: صوت: إيقاف التشغيل). 4. لم يتم إيقاف تشغيل سماعات الأذن تلقائيًا: إذا لم تعمل سماعات الأذن من هاتف المحمول دون إعادة الاتصال وأي عملية في غضون 3 دقائق، سيتم إيقاف تشغيل سماعات الأذن تلقائيًا (صوت: صوت: إيقاف التشغيل).	الاتصال بالبلوتوث على الهاتف المحمول عند استخدامه لأول مرة، يرجى الرجوع إلى التعليمات 1 أو التعليمات 2 لتشغيل سماعات الأذن. لم قم بممكن وظيفة Bluetooth للهاتف المحمول للبحث عن تقنية البلوتوث القريبة الأخيرة وحده جهاز البلوتوث المسمى "POWEROLOGY PRO BUDS-NC" للاتصال. إذا لم تعرض علامة "متصل" بعد اسم الجهاز، فهذا يعني أن كلا سمعي الأذن قد تم توصيلهما بنجاح بالهاتف المحمول (صوت: صوت "متصل"). للاستخدام في المستقبل، يرجى اتباع مفتاح تعليمات تشغيل سماعات الأذن أولاً. ثم سيفعلون الاتصال تلقائيًا مرة أخرى باسم البلوتوث على الهاتف المحمول الذي تم توصيله مؤخرًا. إذا لم يكن الهاتف قريبًا أو لم يتم تمكين وظيفة البلوتوث، فسوف تدخل سماعات الأذن في حالة قابلة للتثبيت (صوت: الصوت "Pairing"). 	تعليمات حول كيفية ارتداء سماعات الأذن أدخل سماعة الأذن في الموضوعة واضبطها على الزوايا المناسبة.  تشغيل التعليمات 1: افتح الغطاء العلوي لعملية الشحن أولاً، سيتم تشغيل كلا سمعتي الأذن تلقائيًا ثم الاتصال ببعضهما البعض (صوت: صوت: تشغيل البطارية). 2: عندما تكون كلا سماعات الأذن خارج عملية الشحن و خارج الغطاء، أو أن عملية الشحن خارج الغطاء، اضغط مع الاستمرار على MFB على أي من سماعتي الأذن لمدة ثابثين تقريبًا لتشغيلهما. بعد ذلك، سيتمكنون بعضهم البعض تلقائيًا (صوت: صوت: "Power On").	وصف هيكل المنتج  حذرس شحن بوجو  ميكروفون  منطقة للمس  زر متعدد الوظائف (MFB)  شحن نقطة الاتصال  ميكروفون  ميناء الشحن	عنازي الزبون شكرا لتفضيلنا! يرجى قراءة هذا الدليل بعناية قبل الاستخدام. يرجى الاحتفاظ بها للرجوع إليها في المستقبل. المنتج والاكسسوارات  سماعة بلوتوث 2X  علبة الشحن 1X  كابل شحن تايپ سي 1X  UM X 1 (الصور أعلاه كمراجع فقط)	POWEROLOGY  دليل الاستخدام باورولوجي بودز برو Model: PWLAU002 Made in China CE RoHS compliant
3. لا تستخدم الشاحن الذي يتجاوز التيار والحدود المقرر بهما سماعات الأذن (5 فولت / 1 أمبير) لشحن سماعات الأذن. وإلا فإنه سيؤدي بسهولة إلى إلحاق بظاربات بسماعات الأذن. 4. لا تعد فترات شحن سماعات الأذن، مثل منفذ الشحن وأصوات المؤشر والميكروفونات وما إلى ذلك. 5. يرجى تجنب استخدام سماعات الأذن بمستوى صوت عالٍ أو لفترة طويلة لمنع الدوخة أو الإضرار بالسمع. 6. لا تستخدم سماعات الأذن أثناء العاصفة الرعدية، حيث يمكن أن يتسبب ذلك في حدوث خلل في سماعات الأذن واضطراب الإشارة. استكشاف الأخطاء وإصلاحها إذا لم تقترن وساعات الأذن هاتف المحمول، جرب الخطوات التالية: 1. تأكد من أن سماعات الأذن بها طاقة كافية 2. تأكد من تشغيل سماعات الأذن 3. تأكد من أن سماعات الأذن غير متصلة بجهازه أخرى 4. تأكد من تمكين وظيفة بلوتوث على الهاتف المحمول 5. تأكد من وضع سماعات الأذن والهاتف المحمول في نطاق الإرسال	المواصفات نموذج رقم: PWLAU002 إصدار بلوتوث: V5.2 النطاق اللاسلكي: 10m القوة المصنفة: 3mW عمق إلغاء الضوضاء: -35db سعة البطارية (سماعة الأذن): 3.7V/50mAh سعة البطارية (علبة الشحن): 3.7V/480mAh وقت الشحن: 8H وقت التشغيل (إعادة الشحن): 2H قاعدة الشحن: Wireless charging / Type-C حجم سماعة الرأس: 34.4x21.3x23.5mm حجم علبة الشحن: 52.2x52.2x27.5mm	 عندما يتم شحن سماعات الأذن إذا تمت باستبدال سماعة الأذن اليسرى في العلبة، فسيتكون ضوء مؤشر LED المودود على اليسار لمدة 1 ثانية. إذا تمت باستبدال سماعة الأذن اليسرى في العلبة، فسيتكون ضوء مؤشر LED المودود على اليمين لمدة 1 ثانية تظهر مؤشرات LED في وضع الشحن مشدود بالكامل: ثلاثة مصابيح مؤشر LED قيد التشغيل ممتلئة قيد التشغيل ومومي المصباح الثالث: أكثر من 70% من الطاقة المصباح الأول مضاء والثاني مومي: طاقة 40-70% ضوء واحد فقط قيد التشغيل: طاقة 20-40% مومي وضوء واحد فقط: طاقة أقل من 20% قم بإلغاء اقتران السجلات ضمن وضع "الاقتران"، استبدل سماعات الأذن في علبة الشحن واضبط مع الاستمرار على الزر المودود في علبة الشحن لمدة 10 ثواني. لم سترى وميضي الضوء الأبيض بسرعة لم ينطفئ في هذا الوقت. ثم افتح سجل الاقتران بنجاح بعد ثانية واحدة، سيدخلون في وضع "الاقتران" مرة أخرى.	شحن العلبة 1. إدخال البطارية البطارية في علبة الشحن: إذا كان هناك بومض مصباح مؤشر LED واحد فقط عند شحن سماعات الأذن في العلبة، فهذا يشير إلى أن الطاقة أقل من 20% ويتعين شحن العلبة. 2. عند استخدام كابل شحن شحن شحن العلبة، فإن مؤشر LED الأبيض سويضي أضواء المؤشر المودودة على العلبة. عندما تكون العلبة مشدودة بالكامل، سترى الأضواء لمدة 60 ثانية ثم تنطفئ. شحن سماعات الأذن لم يتم شحن حاوية الشحن أثناء شحن سماعات الأذن في العلبة: أخرج كل من وسادات الأذن واستبدل سماعة الأذن اليسرى في العلبة، وسيضيء مؤشر LED المودود على اليسار لمدة ثانية واحدة؛ وبالمثل، فإن مؤشر LED المودود على اليمين سوميض، لمدة ثانية واحدة أيضًا. يشير الحالتان أعلاه إلى أن الطاقة ليست ممتلئة. إذا فتحت الغطاء العلوي أو أغلق الغطاء ووجدت أن مصباح مؤشر LED موميض لمدة 10 ثواني لم خرج، فهذا يشير إلى أن البطارية منخفضة (أقل من 5% طاقة)	3. إذا تم استخدام سماعة أذن واحدة فقط، فاضغط ثلاث مرات على زر MFB على أي من سماعتي الأذن للتمسار التالي. 4. إدخال البطارية: عندما تكون طاقة سماعة الأذن أقل من 20%، سوب تنبئ كل 5 دقائق. الوضع المحيط ووضع ANC عند تشغيل كلا سمعتي الأذن والاتصال ببعضهما البعض، يتم إيقاف تشغيل وضع ANC. اضغط واضغط على MFB على سماعة الأذن اليمنى لمدة 2 ثانية لتشغيل الوضع المحيط (صوت: صوت: AMBIENT MODE) اضغط مع الاستمرار على MFB على سماعة الأذن اليمنى لمدة ثابثين مرة أخرى للتحول إلى وضع ANC (صوت: صوت: ANC ON) اضغط مع الاستمرار على MFB على سماعة الأذن اليمنى واضغط عليها لمدة ثابثين مرة أخرى لإيقاف تشغيل وضع ANC (صوت: صوت: إيقاف تشغيل ANC) تفعيل سيري تحت وضع الاستعداد أو وضع الموسيقى، اضغط مع الاستمرار على MFB على سماعة الأذن اليسرى لتنشيط سيري (صوت: صوت: Dul). عند استخدام سماعة واحدة فقط، اضغط مع الاستمرار على MFB على أي من سماعتي الأذن لتنشيط سيري (صوت: صوت: Dul).	المكالمات الواردة الرد على مكالمة عند وجود مكالمة واردة، انقر نقرًا مزدوجًا فوق MFB على أي من سماعتي الأذن لبدء المكالمة ثم بإبقاء مكالمه: أثناء المكالمة، انقر نقرًا مزدوجًا فوق MFB على أي من سماعتي الأذن لإبقاء المكالمة. رفض مكالمة عندما تكون هناك مكالمة واردة، اضغط مع الاستمرار على MFB على أي من سماعتي الأذن لمدة ثابثين لرفض المكالمة تشغيل الموسيقى رفع مستوى الصوت: ضمن وضع الموسيقى / المكالمة الهاتفية، انقر فوق MFB على سماعة الأذن اليمنى لزيادة مستوى الصوت خفض مستوى الصوت: ضمن وضع الموسيقى / مكالمة الهاتف، انقر فوق MFB على سماعة الأذن اليسرى لخفض مستوى الصوت المسار السابق: ضمن وضع الموسيقى، انقر ثلاث مرات على MFB على سماعة الأذن اليسرى للمسار السابق المسار التالي: ضمن وضع الموسيقى، انقر ثلاث مرات على MFB على سماعة الأذن اليمنى للمسار التالي تشغيل / إيقاف مؤقت: ضمن وضع الموسيقى، انقر نقرًا مزدوجًا على MFB على أي من سماعتي الأذن لتشغيل / إيقاف الموسيقى مؤقتًا. ملاحظات 1. ستتم مقاطعة الموسيقى عندما ترد على مكالمه واردة، هو - هي سوف تستأنف بعد دفع الغطاء لإصلاح. 2. إذا تمت بنشاط Siri أثناء تشغيل الموسيقى، فستتوقف الموسيقى مؤقتًا، بعد 5m، ستستأنف الموسيقى تلقائيًا.

مفتاح رئيسي تانوي

عندما يعمل المفتاح الرئيسي والتانوي، سوف يتحول التانوي إلى الرئيسي إذا تم استبدال الرئيسي في علبة الشحن وإيقاف التشغيل