

porodo
LIFESTYLE

800W Blender Grinder

Aluminum Housing
Glass Jug



Model: PD-LSBLGR-BK

Read this booklet carefully before using and keep for future reference


Important Safeguards

When using the electrical appliance, the below basic safety precautions should be followed:

1. Read all instructions.
2. Before using check that the voltage power corresponds to the one shown on the appliance nameplate.
4. Do not let cord hang over edge of table or counter.
5. Do not operate any appliance with a damage cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
6. Use by children not intended but foreseeable, but only allowed with supervision.
7. Avoid contacting moving parts.
8. Blades are sharp, so handle carefully.
9. The use of attachment, including Jar, lid, not recommended or sold by manufacture may cause fire, electric shock or injury.
10. The appliance cannot be used for blending hard and dry substance, otherwise the blade could be blunted.
11. Switch off the appliance before approaching parts which move in use.
12. Be sure to turn switch to 0 position after each use. Make sure the motor stop completely before disassembling. And the power supply cord plug is removed from outlet.
13. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
14. Children should be supervised to ensure that they do not play with the appliance.
15. Do not immerse the Motor Unit into water or other liquids.
16. Do not use outdoors.
17. Save these instructions

Household Use Only

Know your Blender

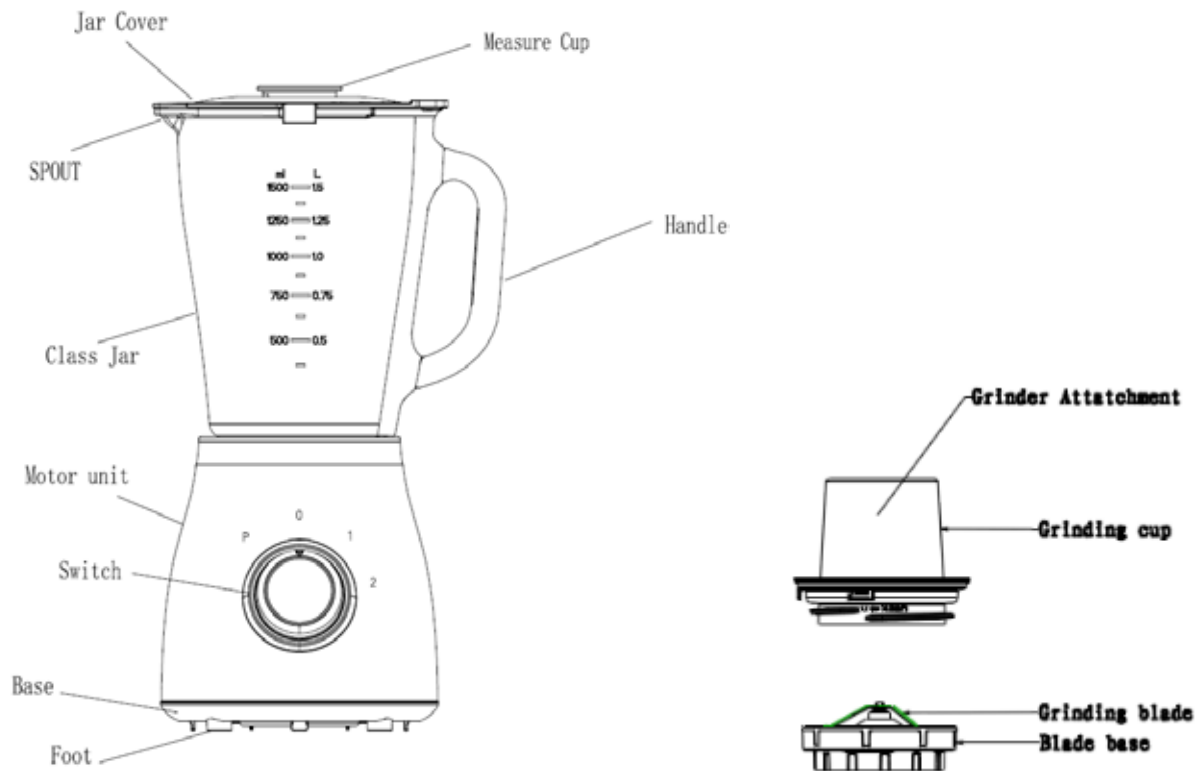

For the initial use

1. Unpack the appliance and place all parts on a horizontal surface.
2. Immerse jar, jar cover, in warm soapy water and rinse them and dry. Never immerse motor unit in water for cleaning to prevent the risk of electric shock.

Caution: the blade is very sharp, handle with great care.

3. The correct assembly way will be described in detail in below sections.

Before assembling the jar, be sure the power cord is unplugged from the power outlet and the Switch button is on the 0 position.

The jar is suitable for making mixture which the juice and pulp are mixed.

For attaching Jar, Place the Jar into the motor unit directly in place, (see fig.1).

Note: make sure the Jar is assembled into the motor unit properly, there is interlock switch on the position, if the Jar is not assembled properly, the blender will not operate.

Blending fruit and vegetable:

1. Before attaching the power cord into the outlet, make sure the Switch button is in the 0 position.

2. Peeled or cored the fruit or vegetables and then cut it into small dices, put the food piece into the Jar. Usually certain amount of purified water has to be added to facilitate the smooth running of appliance. The proportion of the food and water is 2:3. The amount of mixture should not exceed the max level as indicated on the Jar.

Note: never use boiling liquids or run the appliance empty. The Jar can be used for breaking up ice.


3. Replace the Jar cover on the Jar. Turn the Jar cover into the Jar.

4. Turn the Switch button to the desired setting, there are five settings: P, 0, 1, 2. Turn switch to P position and hold it to pulse actuate motor for delicate chopping. Release it to return the 0 position.

5. The consecutive operation time shall less than 2 minutes. Minimum 1 minutes rest period is required between two consecutive cycles.

7. Turn the Switch button to 0 Position once the mixture has been blended to your desired consistency.

8. Remove the Jar from the Motor Unit (remove it by directly upward), carefully take down the Jar cover, then pour and serve

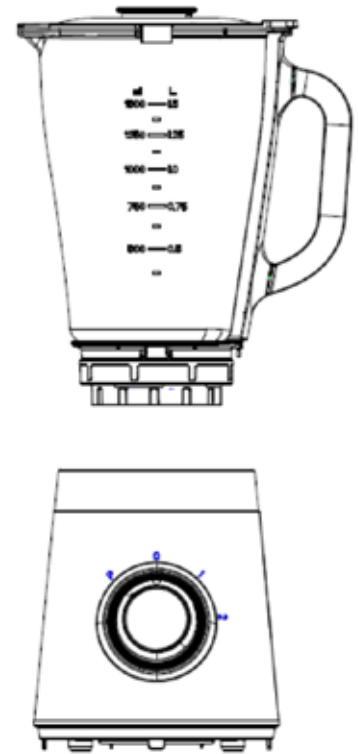

Grinder Operation

1. Lay the motor unit on the flat horizontal surface and make sure it is unplugged.

2. Fill the grinding bowl with proper coffee bean, then assemble the grinding blade assembly and grinding bowl together. Please see Fig.3

NOTE: The quantity of coffee bean the grinding bowl allows to grind is Max 60g.

3. Place the grinder attachment on the motor unit, Turn the bowl clockwise until a click will be heard when locked into position properly. Please see Fig. 4

NOTE: There is a safety interlock device at the bottom of bowl, if the bowl is not assembled in place, the chopper will not operate.

4. Ensure the Speed Selector to "0" Position, then plug into power outlet.

5. Select the desired speed setting, the appliance will start grinding. During grinding, you can press down the Pulse button without releasing it if want to accelerate the process of grinding.

6. Turn the Speed Selector to "0" Position once the coffee has been ground to your desired result.

7. Disconnect from power supply once finished. Disassemble the grinder attachment from the unit, keep the grinding bowl downward and turn it anticlockwise (see fig.5), then empty the bowl and serve.

8. Do not run the appliance for more than 30s per time, and only

wait until the unit is cooled to room temperature before performing next operation cycle.



Fig.3



Fig.4



Fig.5

Cleaning and Maintenance

The Auto Clean feature can clean the blender and blade assembly easily, rapidly in complete safety.

- Pour a little warm soapy water into the Jar and turn the Switch button to P position for a few seconds.

- Remove the Jar from the motor unit by directly taking it upward and rinse the Jar, Jar cover under running water.

- Wiping the outer surface of Motor Unit with a damp cloth, do not use abrasive cleansers. Never immerse in water for cleaning

- Dry all parts and then replace them

For complete cleaning, you can hold the blade assembly at the bottom of jar carefully, for it is sharp, take it out by turning coupling on the other side clockwise emphatically (see Fig.2), then put the detachable accessories into Dishwasher for clean, they are dishwasher safe components, but the temperature setting shall not exceed 70℉.

If any problem has been encountered during use never disassemble the Motor Base by yourself, no user serviceable parts inside. Contact only the authorized service facility for examination and repair.

For grinder

1. Detach the bowl base from the grinding blade assembly.

NOTE: While detaching, only grasp the unsharp part of grinding blade or wear glove to prevent any injuries.

2. Immerse the blade, bowl base and grinding bowl into warm soapy water for cleaning, and then rinse them under running water.

3. Wipe the outer surface with damp cloth.

NOTE: Never immerse the motor unit into water for cleaning.

4. Dry all parts thoroughly and assemble them in position.





Environment friendly disposal

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

For more information, please contact our support team:
support@porodo.net

www.porodo.net



porodo



myporodo



Made in China

porodo
LIFESTYLE

٨٠٠W خلاط مطحنة

قاعدة ألومنيوم
وعاء خلط زجاجي



Model: PD-LSBLGR-BK

اقرأ هذا الكتيب بعناية قبل استخدام المنتج واحتفظ به للرجوع إليه في المستقبل.

تحذيرات مهمة

عند استخدام الجهاز الكهربائي، يجب اتباع الاحتياطات الأمنية الأساسية التالية:

١. اقرأ جميع التعليمات.

٢. قبل الاستخدام، تحقق من أن جهد الطاقة يتطابق مع الجهد الموضح على لوحة الجهاز.

٣. لا تترك السلك معلقاً على حافة الطاولة أو السطح.

٤. لا تقم بتشغيل أي جهاز بعد تلف السلك أو القابس أو بعد حدوث عطل في الجهاز أو تضرره بأي شكل من الأشكال. قم بإرجاع الجهاز إلى أقرب مرفق خدمة معتمد لفحصه وإصلاحه أو ضبطه.

٥. يمنع استخدام الجهاز من قبل الأطفال من دون إشراف.

٦. تجنب ملامسة الأجزاء المتحركة.

٧. تعامل مع الشفرات الحادة بعناية.

٨. الشفرات حادة، لذا تعامل معها بعناية.

٩. لا يمكن استخدام الجهاز لخلط المواد الصلبة والجافة، وإلا فإن الشفرة قد تصبح غير حادة.

١٠. قم بإيقاف تشغيل الجهاز قبل الاقتراب من الأجزاء المتحركة أثناء الاستخدام.

١١. تأكد من تحويل المفتاح إلى وضع الإيقاف (٠) بعد كل استخدام. وتأكد من أن المحرك توقف تمامًا قبل أن تقوم بفك الخلاط. وتأكد من أنه تم فصل السلك عن المقبس.

١٢. يمنع استخدام هذا الجهاز من قبل الأشخاص (بما في ذلك الأطفال) ذوي القدرات الجسدية أو الحسية أو العقلية المحدودة، أو الذين يفتقرون إلى الخبرة والمعرفة، ما لم يتم تعليمهم كيفية استخدام الجهاز من قبل شخص مسؤول عن سلامتهم مع الحرص على الإشراف عليهم.

١٣. يجب أن يبقى الجهاز بعيداً عن متناول الأطفال لضمان عدم العبث به.


١٤. لا تغمر وحدة المحرك في الماء أو السوائل الأخرى.

١٥. لا تستخدم الجهاز في الهواء الطلق.

١٦. احتفظ بهذه التعليمات.

تحذيرات مهمة

تعرف على الخلاط الخاص بك

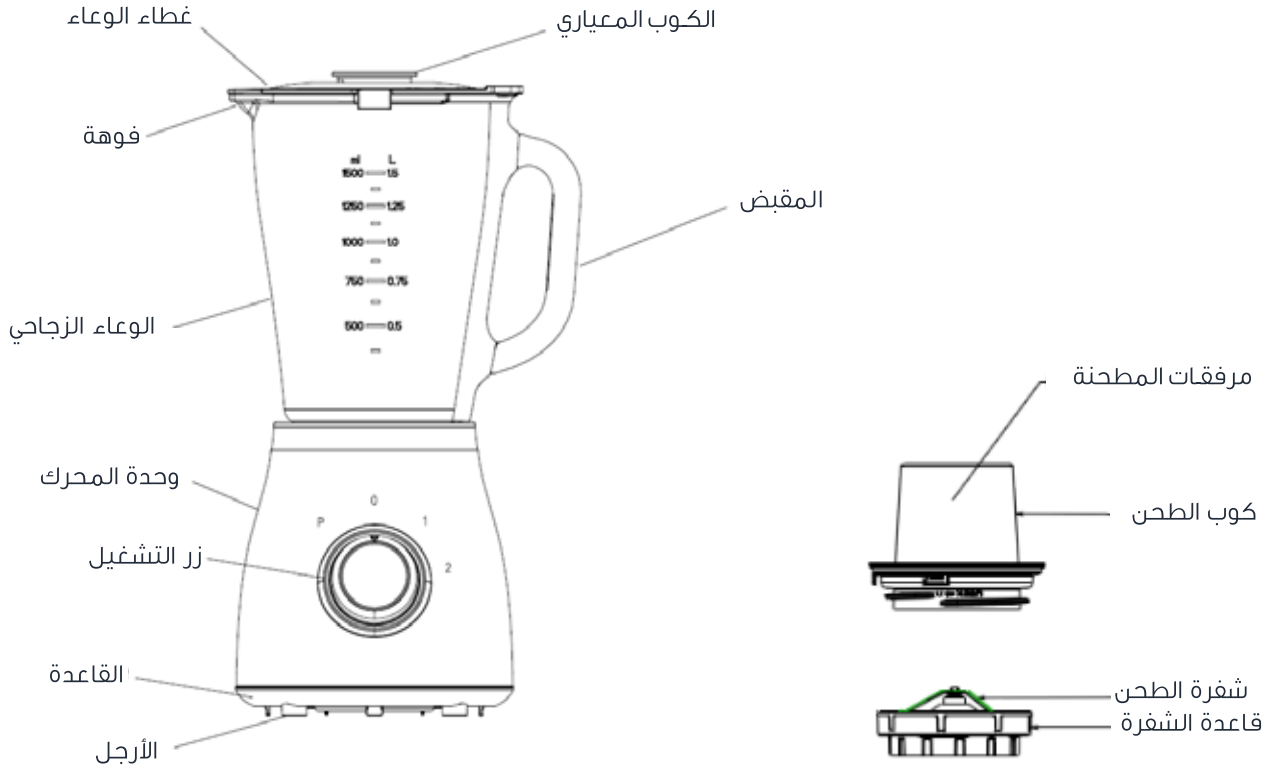

للاستخدام الأولي

١. قم بفتح علبة الجهاز وضع جميع الأجزاء المرفقة على سطح مستو.
٢. قم بإغمار الوعاء الزجاجي وغطاء الوعاء في ماء دافئ مع صابون من ثم قم بشطفهم وتجفيفهم. لا تقم بإغمار وحدة المحرك في الماء لتنظيفها لتجنب خطر الصدمة الكهربائية.
- تحذير: الشفرة حادة جدًا، تعامل بحذر كبير.
٣. سيتم وصف طريقة التجميع الصحيحة بالتفصيل في الأقسام التالية.
- قبل تجميع الخلاط، تأكد من أن سلك الطاقة غير موصول بمقبس الكهرباء وأن زر التشغيل في وضع الإيقاف (٠).
- الوعاء مناسبة لصنع الخلطات التي تحتوي على عصير ولب الفاكهة معًا.
- لتثبيت وعاء الخلط، قم بوضع الوعاء الزجاجي في وحدة المحرك في مكانها (انظر الشكل ١).

ملحوظة: تأكد من أن وعاء الخلط مثبت في وحدة المحرك بشكل صحيح، حيث يوجد مفتاح تأمين على المكان. إذا لم يكن الوعاء مثبت بشكل صحيح فلن يعمل الخلاط.

لخلط الفواكه والخضروات:

١. تأكد من أن زر التشغيل في وضع الإيقاف (٠) قبل توصيل سلك الطاقة بالمقبس.


٢. قشر الفواكه أو قم بإزالة النواة وقطعها إلى قطع صغيرة،

ثم ضع القطع في وعاء الخلط. عادةً ما يجب إضافة كمية


معينة من الماء المنقى لتشغيل الجهاز بسلاسة. نسبة

الطعام إلى الماء هي ٣: ٢. يجب ألا يتجاوز كمية الخليط الحد

الأقصى المشار إليه على وعاء الخلط.

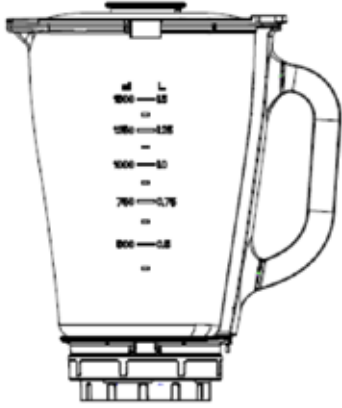

ملاحظة: لا تستخدم السوائل عالية السخونة أبدًا أو تقم بتشغيل الجهاز فارغًا. يمكن استخدام وعاء الخلط لطحن الثلج.

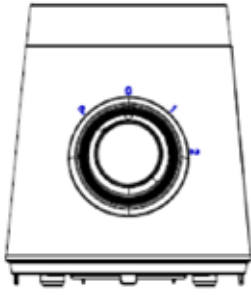

٣. قم بوضع غطاء الوعاء وإحكامه على وعاء الخلط.

٤. حول زر التشغيل إلى الإعداد المرغوب، هناك خمس

إعدادات: ١، ٢، ٣، ٤، ٥. لتفتيت الطعام برفق قم بتشغيل الجهاز

على وضع P واضغط باستمرار لتشغيل المحرك بشكل

متقطع. أفلته للعودة إلى وضع الإيقاف (٠).

٥. يجب أن يكون وقت التشغيل المتتالي أقل من دقيقتان.

يتطلب فترة راحة لا تقل عن دقيقة واحدة بين دورتين متتاليتين.

٧. حول زر التشغيل إلى وضع ٠ بمجرد أن يتم مزج الخليط إلى القوام المطلوب.

٨. أزل وعاء الخلط الزجاجي من وحدة المحرك (ارفعه بشكل عامودي للأعلى)، ثم أزل

غطاء الوعاء بعناية. أسكب وقدم.

عملية المطحنة

١. ضع وحدة المحرك على سطح أفقي مستو وتأكد من أنها غير موصولة بالكهرباء.

٢. املأ وعاء الطحن بالكمية المناسبة من حبوب القهوة، ثم اجمع وحدة شفرة الطحن ووعاء الطحن معًا. يرجى الرجوع إلى الشكل ٣.



Fig.3

ملاحظة: الكمية المسموح بها من حبوب القهوة لطحنها في وعاء الطحن هي كحد أقصى ٦٠ جرام.

٣. ضع ملحق المطحنة على وحدة المحرك، وأدر كوب الطحن باتجاه عقارب الساعة حتى يتم سماع صوت نقرة عند تأمينه في المكان بشكل صحيح. يرجى الرجوع إلى الشكل ٤.



Fig.4

ملاحظة: هناك جهاز أمان في أسفل كوب الطحن، إذا لم يتم تجميع الكوب في مكانه بشكل صحيح، فإن المطحنة لن تعمل.

٤. تأكد من وضع محدد السرعة في وضع "٠"، ثم قم بتوصيله بمقبس الكهرباء.

٥. حدد إعداد السرعة المطلوب، وسيبدأ الجهاز في الطحن. أثناء الطحن، يمكنك الضغط على زر النبضة دون الإفراج عنه إذا كنت ترغب في تسريع عملية الطحن.

٦. حول محدد السرعة إلى وضع "٠" بمجرد أن تتم عملية طحن القهوة بالقوام المرغوب.



Fig.5

٧. قم بفصل الجهاز عن مصدر الطاقة بمجرد الانتهاء. افصل المطحنة من القاعدة بإبقاء المطحنة إلى الأسفل وإدارتها بعكس اتجاه عقارب الساعة (انظر الشكل ٥)، ثم قم بتفريغ الوعاء. تشغيل الجهاز لأكثر من ٣٠ ثانية في كل مرة، وانتظر حتى يبرد الجهاز إلى درجة حرارة الغرفة قبل أداء دورة التشغيل التالية.

التنظيف والصيانة

يمكن لميزة التنظيف التلقائي تنظيف الخلاط ووحدة الشفرة بسهولة وسرعة بأمان تام.

- اسكب قليلاً من الماء الدافئ والصابون في الوعاء وحول زر التشغيل إلى وضع P لبضع ثوانٍ.
- افصل الوعاء عن وحدة المحرك برفعها مباشرة واشطف الوعاء وغطاء الوعاء تحت الماء الجاري.
- قم بمسح السطح الخارجي لوحدة المحرك بقطعة قماش مبللة، ولا تستخدم مواد تنظيف قاسية. لا تغمره في الماء للتنظيف.
- جفف جميع الأجزاء ثم أعد تركيبها.
- للتنظيف الكامل، يمكنك الإمساك بوحدة الشفرة في أسفل الوعاء بحذر حيث أنها حادة، وقم بإخراجها بتدوير الوصلة من الجانب الآخر باتجاه عقارب الساعة بدقة (انظر الشكل ٢)، ثم ضع الملحقات القابلة للإزالة في غسالة الصحون للتنظيف، حيث أنها مكونات آمنة لغسالة الصحون، ولكن يجب ألا يتجاوز إعداد درجة الحرارة ٧٠ درجة مئوية. إذا واجهت أي مشكلة أثناء الاستخدام، فلا تقم بفك وحدة المحرك بنفسك، حيث لا توجد أجزاء يمكن للمستخدم صيانتها داخلها. اتصل فقط بمرفق الخدمة المعتمد لإجراء الفحص والإصلاح.



التخلص الصديق للبيئة

يمكنك المساهمة في حماية البيئة!
يرجى مراعاة القوانين المحلية: قدم المعدات الكهربائية
الغير قابلة للعمل إلى مركز متخصص للتخلص من
النفايات.



للمزيد من المعلومات، يرجى التواصل مع فريق الدعم: support@porodo.net

www.porodo.net



porodo



myporodo



Made in China