



Porodo Soundtec

Wonder Semi In-Ear
ANC Earbuds with Touch Screen

SKU: PD-STWLEP29

Table of Contents

Features	2
Earbud's Touch Sensor Guide	2
Specifications	3
Operating Instructions	4
LCD Functions	4
Ear Protection Modes	5
Precautions	5
Warranty	8
Contact Us	8

Features

1. Equipped with a 13mm audio driver that delivers powerful, clear sound, enhancing your listening experience.
2. Features a remote camera shutter function that allows you to take photos wirelessly from your connected device, perfect for capturing group shots or selfies.
3. Comes with an integrated flashlight, adding functionality and convenience for use in low-light conditions.
4. The earbuds include touch controls for easy management of music, calls, and more, providing a seamless user interface.
5. Features a 1.47-inch screen that displays essential information clearly and is easy to read.
6. Supports 16 different display languages, making it versatile and accessible to a wide range of users.
7. Offers up to 4 hours of playtime on a single charge, allowing you to enjoy extended listening sessions.

Earbud's Touch Sensor Guide

Pause/Play Music	Press once on either the left (L) or right (R) earbud to pause or play music.
Previous Track	Double-tap the left earbud to skip to the previous track.
Next Track	Double-tap the right earbud to skip to the next track.
Volume Up	Swipe up on the touchpoint of either earbud to increase the volume.
Volume Down	Swipe down on the touchpoint of either earbud to decrease the volume.
Answer Phone Call	Press once on either the left or right earbud to answer an incoming phone call.
Reject Phone Call	Long press (for 2 seconds) on either the left or right earbud to reject an incoming phone call.
Activate Voice Assistant	Triple-click on either the left or right earbud to activate Siri or another voice assistant.



Specifications

Product Name	Porodo Soundtec Wonder Semi In-Ear ANC Earbuds with Touch Screen
SKU	PD-STWLEP29
Battery Capacity	Earbuds 30mAh, Charging Case: 350mAh
Bluetooth Version	V5.4
Bluetooth Name	ST-Wonder
Bluetooth Chip	JL 7003DB
Working Distance	10M
Driver Size	Ø 13mm
Standby Time	>60H
Music Playback Time	4H at 60 % Volume
Call Time	2H
Charging Time	1.5H
Speaker	32Ω
Working Frequency	2.402-2.48GHz
Frequency Response	20Hz-20kHz

Operating Instructions

A. Powering On

1. Remove the earphones from the charging Case to turn them on automatically, or manually press the power button on the back of the charging box.
2. To reset the earphones, press and hold the power button on the back of the charging case for 10 seconds.
3. Upon powering on, the earphones will automatically enter pairing mode, and the left/right earphones will prompt power on.

B. Powering Off

1. Place the earphones back into the charging case. Earbuds will automatically turn off when the cover is closed.
2. To restart the earphones, press and hold the power button on the back of the charging box for 5 seconds.

Note: The charging case will enter sleep mode automatically after being closed.

C. Single-Ear Use

1. Open the charging case and allow the earphones to power on and connect automatically.
2. After successful connection, remove only one earphone and close the charging box to continue using the single-ear function.


D. Automatic Reconnection

The earphones will automatically reconnect to the device if the phone retains the paired earphones' name in its memory, eliminating the need for manual reconnection each time.

LCD Functions

1. Audio Customization: Adjust sound settings according to your preferences.
2. Change Wallpaper: Customize the display background to suit your taste.
3. Remote Photography: Control camera functions remotely for easier photo taking.

4. **Screen Brightness Adjustment:** Modify the screen brightness to ensure optimal visibility.
5. **Flashlight Function:** Utilize the built-in flashlight for illumination.
6. **Volume Adjustment:** Regulate audio volume directly from the screen.
7. **Noise Reduction Control:** Manage noise reduction settings to enhance audio quality.
8. **Music Control:** Control music playback directly from your device.
9. **Alarm Setting:** Set and manage alarms as needed.
10. **Find Headphones:** Locate your headphones easily if misplaced.
11. **Language Settings:** Choose from settings for different languages.
12. **Time Setting:** Adjust the time display as necessary.

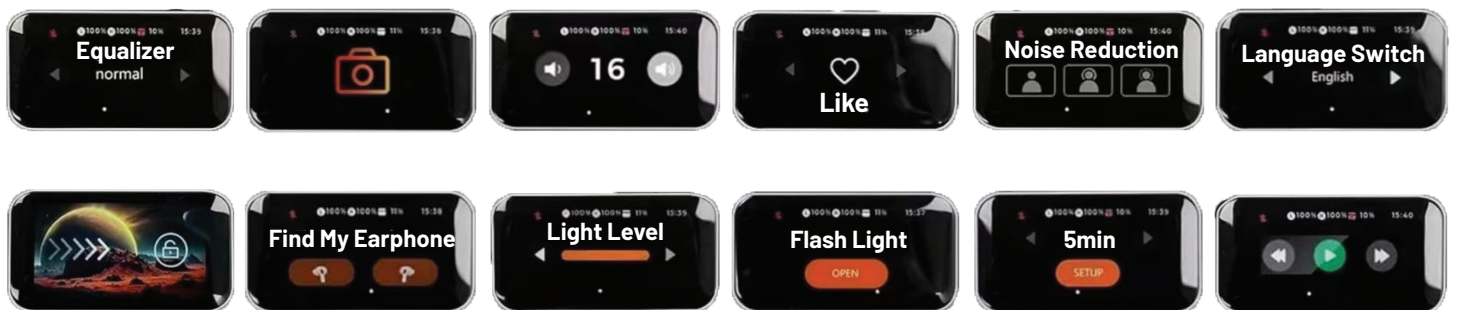

Ear Protection Modes

1. **Ear Protection Mode:** The maximum volume is capped at 85dB, adhering to the safe exposure levels recommended by the World Health Organization to prevent hearing damage.
2. **Standard Mode (Default):** The volume is limited to 100dB to ensure clarity of sound even in noisy environments, providing effective listening without compromising ear safety.

Precautions

1. Always disconnect the charger and power off the device before cleaning.
2. Disassembly of the device by non-professionals is prohibited to prevent damage and voiding of warranty.
3. Avoid placing the device in environments exposed to direct sunlight to prevent premature aging of electronic components.

4. Keep the device away from dusty or dirty environments as dust can lead to equipment failure.
5. Do not use the device in extreme temperature conditions (overly cold or overheated environments) to ensure proper operation.
6. The ambient temperature for operating the device should ideally be between -10°C and 40°C with a humidity range from 10 % to 95 %.
7. Never place objects inside the device to avoid risks of short circuits or damage to circuits.
8. Avoid exposing the device to liquids, which can cause damage.
9. Protect the device from friction and collisions that can cause surface scratches or hardware damage.
10. The device should not be exposed to extreme conditions such as sunlight, fire, or other potentially damaging high-temperature environments.
11. Tampering with the device by hitting, squeezing, or attempting to throw it into fire is strictly forbidden.
12. Do not continue to use the device if the battery fails seriously.
13. Retain this manual as it contains essential operational and safety information.
14. Avoid using this device in areas where wireless devices are prohibited, as it may interfere with the function of other electronic devices and pose safety risks.
15. In healthcare settings, adhere to the facility's regulations regarding wireless devices.
16. This device can disrupt the operation of medical implants such as pacemakers and cochlear implants.
17. Maintain a minimum distance of 15 cm from such devices.
18. Consult the manufacturer or a medical professional for specific restrictions related to the use of this device near medical equipment.
19. Use headphones at the minimum volume required for music or calls to avoid hearing damage.
20. Prolonged exposure to high volumes can lead to permanent hearing loss.
21. Using headphones at loud volumes while driving can be distracting.
- Warning:** Loud volumes while driving increase the risk of accidents.
22. Always comply with local regulations regarding the use of electronic devices while driving. Prioritize safety and avoid distractions.

- 23.** The use of this device may cause radio interference with vehicle electronics. If you experience issues, contact the manufacturer for guidance.
- 24.** Do not use this device on aircraft where wireless devices are prohibited. Follow airline regulations closely to avoid interference with flight systems.
- 25.** Keep this device and its accessories, which may contain small parts, out of reach of children to prevent inadvertent damage or risk of suffocation and other hazards.
- 26.** Individuals with skin allergies should exercise caution when using wearable devices like headphones. It's normal to experience slight redness in the auricles.
- 27.** Prolonged discomfort or misplacement of the headphones may exacerbate redness.
- 28.** If symptoms like swelling or itching occur, discontinue use immediately. Consult a physician if discomfort persists.
- 29.** Individuals with learning difficulties, physically or mentally challenged should be supervised when using this product.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**