

PORODO
LIFESTYLE



Porodo Lifestyle

VISTAX Intelligent Audio Eyewear

SKU: PDSGUVP103

Table of Contents

Statement	2
Overview	2
Specifications	2
Package Contents	3
Schematic View	3
Power On and Off	4
Pair Bluetooth and Connect	4
Play Music	4
Voice Assistant	4
Make a Phone Call	5
Charging Guide	5
Note	5
Matters Needing Attention	6
Important Safety Information	6
Warning	6
Disposal	7
Warranty	8
Contact Us	8

Statement

Thank you for choosing our product! Please read this instruction manual carefully before use to ensure proper handling.

Overview

These are Bluetooth smart glasses with a stereo function. They are easy to operate and convenient to carry.

Specifications

Battery Capacity	2 × 90 mAh
Bluetooth Version	5.2
Transmission Distance	10m
Control Mode	Button
Frequency Response	2.4GHz to 2.480 GHz
Play Time	4H at Max Volume
Recharge Time	1.5H
Standby Time	90H
Charging Interface	Magnetic Charging
Impedance	22Ω
Product Weight	42g
Model Number	PDSGUV P103

Compatible with major brands of mobile phones, tablets, and other Bluetooth devices.


Supports AAC audio decoding technology for high-quality, CD-level sound.

True Stereo Sound with distinct right and left speakers for an immersive audio experience.

Package Contents

1. Glasses
2. Glasses Bag
3. Wiping Cloth
4. Charging Cable

Schematic View

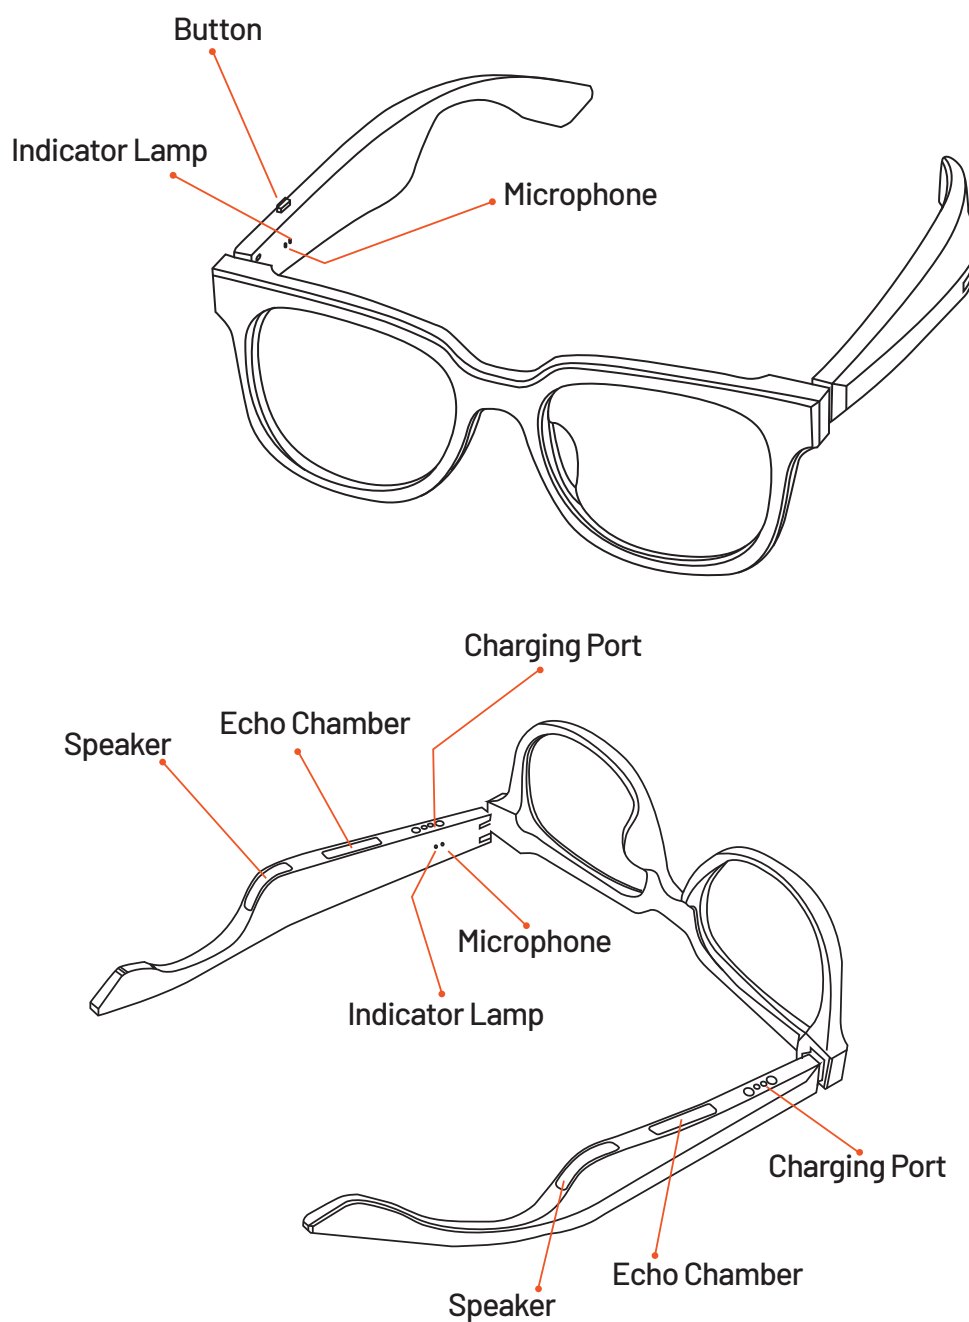

Power On and Off

Power On: To turn on the glasses, simply unplug the charger. The device will automatically power on, accompanied by the voice prompts "Power on" and "Pairing."

Power Off: To power off, plug in the charger, and the glasses will automatically turn off. Alternatively, press and hold the right leg of the glasses for 3 seconds while the device is powered on. You will hear the voice prompt "Power off."

Pair Bluetooth and Connect

1. When the glasses are powered on, the left and right temple arms will automatically pair, and the red light will flash. You will hear the voice prompt "Pairing."
 2. Open the Bluetooth settings on your device, such as your mobile phone, MP3 player, or computer.
 3. Find the device name "PAW103_VistaX," select it, and click "Connect." You will hear the prompt tone "Connected."
- Note:** If the glasses have not been paired before, they will automatically enter pairing mode after powering on. If a pairing record exists, the last used mobile phone will automatically reconnect when powered on.
4. **Connection Status:** After successful connection, you will hear the voice prompt "Connected." If you are disconnected from your phone, you will hear the voice prompt "Disconnected."

Play Music

To play or pause music, press the button on the right temple arm once.

Voice Assistant

Double-click the button on the right temple arm to activate the voice assistant.

Make a Phone Call

To answer the call, click the button once.

To hang up the phone, click the button once.

To reject a call, press and hold the button for 1.5 seconds.

Charging Guide

Low Battery Alert: The "Battery Low" tone will play every five minutes when the battery is low.

Power Off Due to Low Battery: When the battery is low, the glasses will power off, and you will hear the voice prompt "Power off."

Charging: During charging, the indicator light will remain red. Once charging is complete, the red light will turn off.

Note

- 1.** Please read the instructions carefully before using the product and keep them for future reference.
- 2.** Fully charge the product for the first time before use.
- 3.** If the product has not been charged for an extended period (more than two weeks), please charge it before use.
- 4.** Do not wipe a dirty lens directly. First, wet the lens and then dry it using a glasses cleaning cloth. Use a soft, absorbent cloth and gently wipe without applying too much pressure.
- 5.** When wiping, always move in the same direction, not back and forth or in circles.
- 6.** If the battery temperature exceeds -10°C to 50°C , the product will stop working.

Matters Needing Attention

1. Do not remove, repair, or modify the product for any reason, as it may cause fire, electronic malfunction, or even complete damage to the product.
2. Do not place the device in environments where the temperature is too low or too high (below -10°C or above 50°C).
3. Do not wet or soak the product in liquid.
4. Do not expose the glasses to direct sunlight for extended periods, as this may cause deformation, aging, or breakage.
5. Do not bring the magnetic end of the charging cable near a metal object to avoid short circuits caused by magnetic attraction.

Important Safety Information

1. The use of power supplies, chargers, or batteries not approved by the manufacturer may lead to fire, explosion, or other hazards.
2. Please use accessories that are approved by the manufacturer and compatible with this device.
3. The device features a built-in, non-removable battery. Do not attempt to replace the battery, as doing so may damage both the battery and the device.
4. Once charging is complete, disconnect the charger from the device and unplug it from the power socket. The charging duration should not exceed 12 hours.
5. Do not remove, crush, squeeze, or throw the battery into fire. If the battery is swollen, do not use it.
6. To prevent hearing damage, avoid using high volume levels for extended periods.

Warning

Please comply with relevant laws and regulations, and do not use the product in the following environments:

- 1.** Do not use the product in places where gasoline or chemicals are stored, such as gas stations, oil depots, and chemical warehouses, as it may cause fire, explosion, or other hazards.
- 2.** Do not use the device in hospital operating rooms, emergency rooms, intensive care units, or other medical areas. To avoid interference with medical devices, keep the device away from pacemakers, hearing aids, and cochlear implants, maintaining a distance of more than 15cm between the device and the pacemaker.
- 3.** When using this product near personal medical devices, consult your physician and device manufacturer for safety.
- 4.** Follow all safety warnings and regulations regarding the use of this product while driving.
- 5.** To avoid lightning strikes, do not use the product outdoors during thunderstorms.
- 6.** Do not use the charger in the bathroom or any other places with high humidity. Otherwise, electric shock, personal injury, fire, or charger damage may occur.
- 7.** Please comply with the relevant laws and regulations that explicitly prohibit the use of the product in any environment.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**