

PORODO



Porodo

VERGE Smart Watch

SKU: PD-VERGE

Table of Contents

Overview	2
Specifications	3
Charging Guide	3
Function Introduction	4
App Installation	6
Pairing Guide	7
App Operation Instructions	7
Attention	9
FAQ	9
Disposal	10
Warranty	10
Contact Us	10

Overview

Short Strap

Long Strap

Touch Area

(Supports sliding up, down, left, and right, with long press for selection)



Up Key Function

1. Short press to turn the screen on/off.
2. Short press to return to the previous function.

Button Function

1. Short press to turn the screen on/off.
2. Long press for one second to turn the screen on/off.
3. Short press to return to the main dial.



Charging Area

Green Light Sensor


Specifications

IC	Nordic 52832
Bluetooth	V4.0
Battery	180mAh Lithium
Screen	1.69" Touch
Working time	7 Days
Standby	25 Days


Charging Guide

Please follow the steps below to ensure proper charging:

- 1. Use the provided charging stand to connect to the charging contacts on the back of the bracelet.
- 2. Plug the USB cable into the USB adapter (not included in the packaging).
- 3. Do not use a battery adapter with a voltage exceeding 5V or an output current exceeding 1A for charging, as this may cause charging failure and damage the magnetic charging cable or equipment.

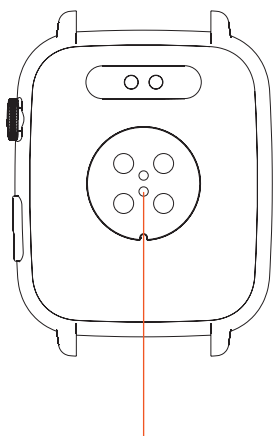

Charging Contacts

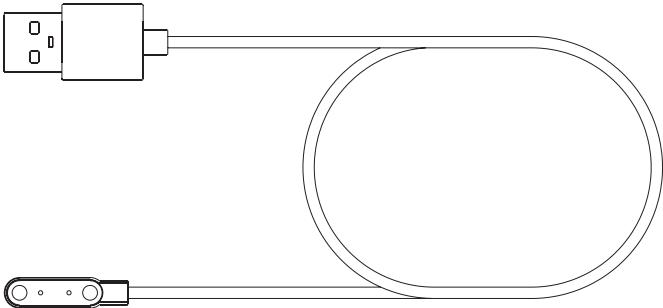


Magnetic Charging Cable

Function Introduction




Main Interface

Displays information such as the time on the smart watch, the number of steps, and more.

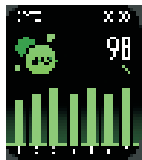

Blood Oxygen

On the blood oxygen measurement screen, simply touch the display to begin the measurement. After a brief vibration, the result will be shown. Detailed analysis and data recording can be synced with the app for further review.

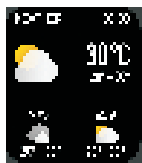

Weather Information

The weather page presents real-time weather updates, air quality, and forecasts for tomorrow. This feature requires the app to be connected, with GPS enabled on the phone, allowing the app to access your phone's location. If the phone's GPS is disconnected or turned off for an extended period, the weather information will not update.



Steps

Tracks the total number of steps, calories burned, and distance covered by the smartwatch.



Sleep

The smartwatch records and displays your total sleep duration, including deep sleep and light sleep phases. More detailed analysis and data can be synchronized and viewed in the app.



Notification


The smartwatch can receive phone calls, text messages, and other notifications and alerts from the phone. The corresponding notification switch can be activated in the app. This page stores the last 3 message records.

Please note that this function requires the smartwatch to be connected via the app, and settings must be completed according to the prompts. For Apple devices, when connected, you will need to select "Pair" in the pop-up match request.



Exercise

The smartwatch displays the latest exercise time, heart rate, and calorie information. Tap the exercise icon to enter the multi-function exercise mode. You can choose to enable the corresponding exercise mode for measurement.

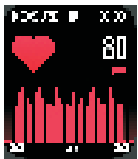

Heart Rate

On the heart rate measurement screen, touch the display to begin the measurement. After a brief vibration, the result will be shown. Detailed information analysis and data recording can be synchronized with the app for further review.




Settings

Tap the settings icon on this page to access the following options: mute, brightness adjustment, dial, restore factory settings, stopwatch, shutdown, and other functions.



Remote Camera Shutter

After connecting to the app, the smartwatch can be used as a remote control for the phone's camera. Open the camera on the phone, then long press the touch screen to take photos.

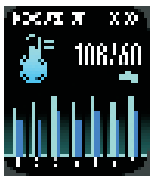

Blood Pressure

On the blood pressure measurement screen, touch the display to start the measurement. After a brief vibration, the result will be shown. More detailed analysis and data recording can be synchronized with the app for further review.



Breathing Exercise

After activating this function, the breathing training mode will automatically start. Breathing exercises are guided by animated graphics displayed on the smartwatch. Multiple vibrations will indicate when the training is complete.



Music Control

After connecting to the app, the smartwatch can control the music player on the mobile phone, including play, pause, and skip functions. This feature requires the mobile phone's music player to be open before it can be controlled via the smartwatch.

App Installation

This product is a wireless transmission device, and many features require connection to the supporting app before use. Only after connecting the smartwatch to the app can other functions be accessed, such as time synchronization, call reminders, information content push, weather display, remote camera, music control, and more.

For Android phones, scan the QR code below to download the app and connect. For Apple devices, you can search for "Hero Band III" in the App Store to download the app.




Pairing Guide

1. Connecting Smartwatch Instructions
2. Open the mobile client to set your personal information.
3. Navigate to the [device] page and click [bind device].
4. Select your device from the list of devices scanned (Verge).
5. Pairing is now complete.


Note: When connecting the phone to the smartwatch, ensure the phone's Bluetooth is turned on and that no other devices are connected to the phone's Bluetooth. Do not connect your Android phone directly to your mobile phone via Bluetooth.

App Operation Instructions


1. Go to the app's movement page and swipe down on your phone's screen to refresh the smartwatch data.

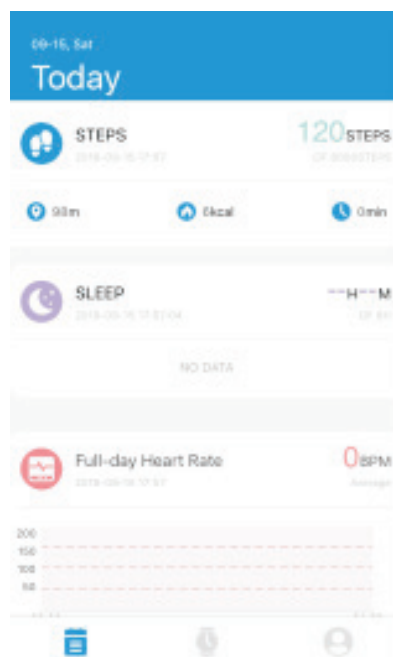

2. Tap on the steps, sleep, or other blocks to view the analysis of your daily or recent exercise and sleep data.

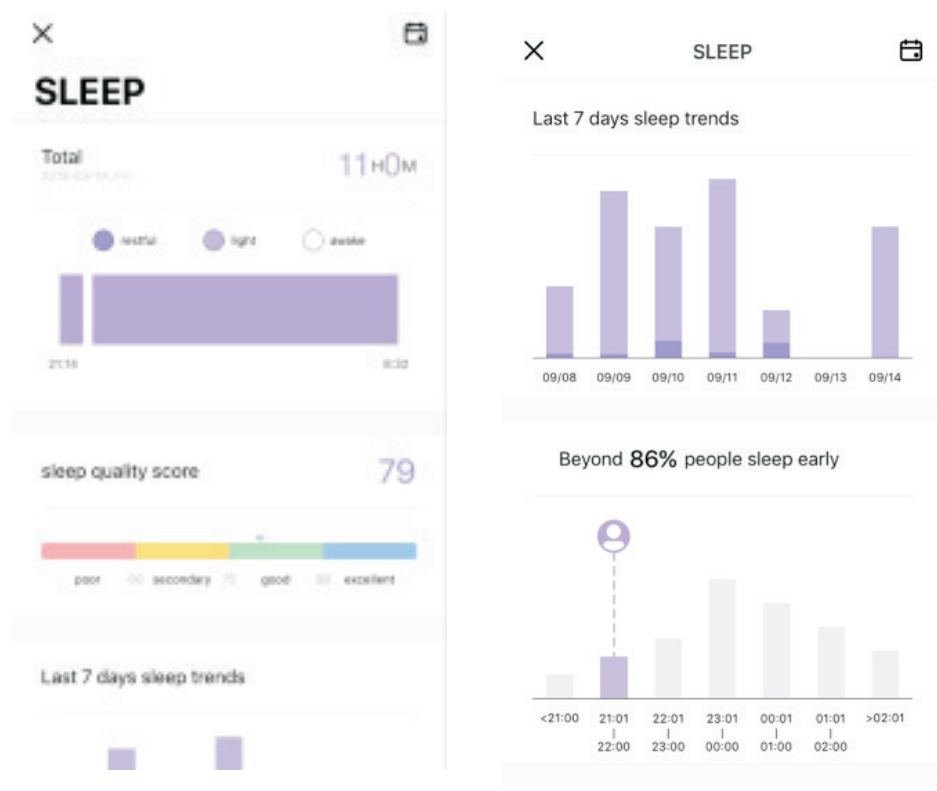

3. Tap on the exercise heart rate or blood pressure blocks to view the data for the day or recent activity. Alternatively, tap the app to measure your heart rate and blood pressure. The test data will be automatically saved to the phone.

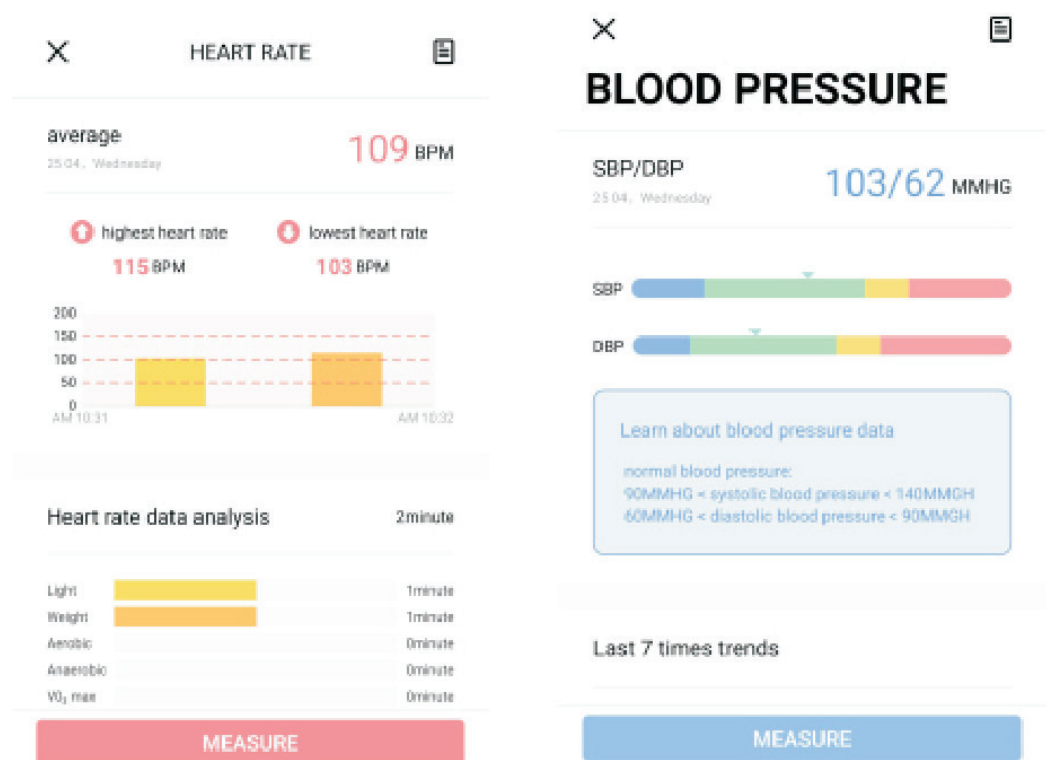

Attention

1. Do not charge the device when there are water stains present.
2. This product is an electronic monitoring device and is not intended for medical use. The data is for reference only.
3. Avoid wearing this device while bathing or swimming for extended periods.
4. Always use the included charging cable for charging.

FAQ

1. Smartwatch Cannot Receive Notifications

1.1 Android Phone Settings:

A: Ensure that the notification switch is enabled in the app settings.

B: Verify that messages are displayed correctly in the notification bar. The smartwatch can only receive notifications that appear in the phone's notification bar. If there are no notifications in the bar, the smartwatch will not receive them. (Check both the notification and status bar settings in your phone's settings and the app.)

1.2 Apple Device Settings:

A: Ensure "Allow Pairing" is selected when connecting the smartwatch. You can check this in Settings > Bluetooth. If the connected device () appears in the list, it means the pairing is successful. If not and this icon appears (), unpair and reconnect the device.

B: Go to Settings > Notifications, select SMS, Phone, and enable notification permissions. Notifications will then appear in the "Notification Center."

2. Android Phones Not Connecting to the Smartwatch:

Do not attempt to connect the smartwatch directly via Bluetooth. First, download the app, then search for and connect the device through the app. If needed, restart both your phone's Bluetooth and the smartwatch.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**