

# PORODO



**Porodo**  
**TRACKFIT PRO**  
**Smart Bracelet Fitness Tracker**

SKU: PDS18

# Table of Contents

Product Overview	2
Specifications	2
Setting Up the APP	3
Product Functions	4
Frequently Asked Questions	4
Safety Precautions	5
Disposal	5
Warranty	6
Contact Us	6

## Product Overview

Porodo TrackFit Pro Smart Bracelet Fitness Tracker is designed to keep up with your daily routine while staying effortlessly lightweight and comfortable on your wrist. Built with a clear digital screen and seamless app integration, it helps you monitor your activity and stay connected through Bluetooth 5.2 for stable, efficient syncing. With an impressive working time of up to 10 days, it minimizes charging interruptions and fits easily into an active lifestyle. The bracelet supports activity tracking for everyday movement, features IP68 water resistance for confidence during workouts and daily wear, and delivers essential fitness insights in a simple, wearable form that focuses on consistency, comfort, and reliability.

## Specifications

Material	Zinc Alloy + IBS + Plastic
Battery Capacity	145mAh
Flash Memory	512kb (ROM), 32 Kb (RAM)
G-Sensor	SC7A20
Heart Rate Sensor	Tianyi 3918
Bluetooth Version	V5.2
Chip Model	PAR2860
Working Time	10 Days
Standby Time	15-20 Days

Charging Time	2 Hours
Charging Type	Magnetic Charging
Water Resistance Level	IP68
Operating Temperature	0°C to 50°C
Compatibility	Android 5.0 +, iOS 10.0 +, BR fit
Product Weight	27.2g
Case Thickness	9.5mm
Case Width	24.5mm
Model Number	PDS18

## **Setting Up the APP**

- 1.** Turn on the device using the charging cable. Open the device and use your phone to scan the QR code to download and install the app, or search for BRFIT in the Apple App Store or the Android Google Play Store to download and install it. Compatible systems include Android 8.0 and above, iOS 12.0 and above, and devices supporting Bluetooth 4.0 and above.
- 2.** Enable Bluetooth on your phone.
- 3.** Open the BRFIT app on your phone. On the “Devices” interface, tap Select Device, then tap Add Device, search for the device, and select “PDS18” from the device list to bind.



## Product Functions

- 1. Step counting:** Accurately records daily steps, distance, calories, and other activity data.
- 2. Sleep monitoring:** Records and displays total sleep duration and allows viewing of up to 7 days of sleep data. The wristband must be worn during sleep for data detection.
- 3. Heart rate monitoring:** Measures current heart rate, records and displays 24-hour heart rate data, and automatically monitors heart rate every 30 minutes. This function requires enabling automatic heart rate testing in the device interface to set the monitoring interval.
- 4. Multiple sports modes:** Supports outdoor running, cycling, hiking, brisk walking, golf, and other sports modes.

## Frequently Asked Questions

- 1. Why does the bracelet show abnormal heart loop measurements?**
  - a.** Abnormal readings are usually caused by poor contact between the measuring ring sensor and the skin during measurement.
  - b.** During measurement, ensure that the sensor is in full contact with the finger surface.
- 2. What are the reasons for Abnormal Sleep Data?**
  - a.** Sleep monitoring is designed to simulate a user's perceived sleep state, including falling asleep and wake-up times, and requires proper wearing of the device.
  - b.** Going to sleep too late may result in inaccurate sleep data.
  - c.** Sleep data is not recorded during the daytime. By default, sleep monitoring is conducted from 9:00 PM to 11:00 PM the following day.


## Safety Precautions

- 1. Do not charge the device in damp or humid environments.**

2. Regularly clean the magnetic charging port on the back of the device with a clean flannel cloth to ensure proper alignment with the magnetic charger and normal charging.
3. This product does not include a power adapter. For safety during charging, use a computer USB port or a power adapter with an output of no more than 5V/1A.
4. Please purchase power adapters through legitimate channels and avoid using low-quality or counterfeit adapters to prevent overheating, bursting, or fire hazards.
5. The measurement results provided by this product are for reference only and should not be used as a basis for medical diagnosis or professional medical advice.

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

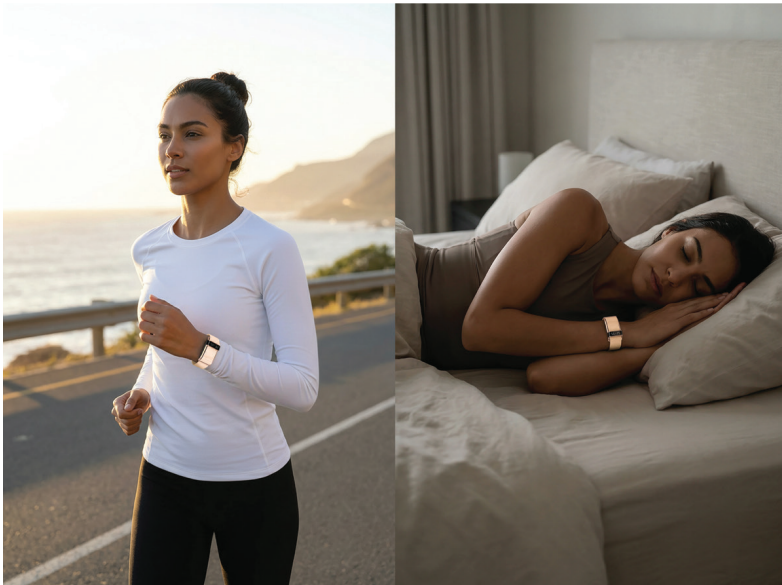

## **Warranty**

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://www.porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
**<https://www.porodo.net/warranty>**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:

**[info@porodo.net](mailto:info@porodo.net)**

Website: **<https://www.porodo.net/>**

Service Support: **[support@porodo.net](mailto:support@porodo.net)**

Instagram: **porodo**