

PORODO



Porodo

**Dual Mic Lavalier Microphone
Lightning | Type-C | Aux**

SKU: PD-2MLAV-BK

Introduction

Thank you for choosing our product.


This product is a smart wireless microphone, which can provide professional-level recording output. Plug-and-play, no APP.

Multiple uses: Can be used for live streaming, Video Recording, Interviewing < Online Teaching and others.

The wireless microphone is consist of two parts, one is the Microphone Transmitter and the other one is 3-in-1 multi-function receiver. (as below picture)



(Microphone Transmitter)

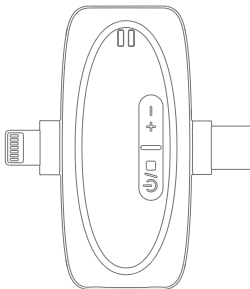


(3-in-1 Multi function Receiver)

Product Structure Diagram


Microphone transmitter schematic diagram

- ① Windproof Sponge
- ② Indicator light of microphone
- ③ Type C charging port of microphone
- ④ Microphone Clip
- ⑤ Power button
- ⑥ Reset key of microphone

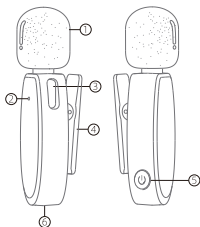


3-in-1 receiver schematic diagram

- ① Power button
- ② Volume button
- ③ Indicator light
- ④ Type C receiver
- ⑤ Lightning receiver
- ⑥ 3.5mm TRS interface
- ⑦ 3.5mm monitor interface
- ⑧ Type C charging port of receiver

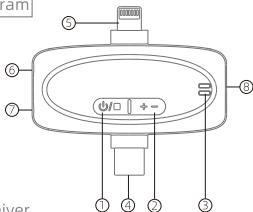


How to use Lightning/Type-C receiver


First: Plug the lightning or type-c receiver into the lightning or type-c port of cell phone, the green light of receiver flashes Slowly.

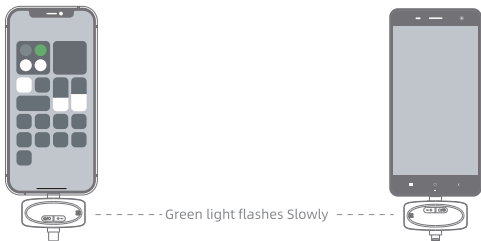

Second: Single press the power button of mic, it is turned on successfully when green light is on.

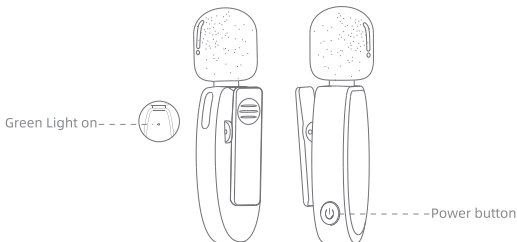


Last: Green light of receiver keeps always on, then the microphone works when opening phone camera to make video recording or opening live streaming Apps to make a live show.

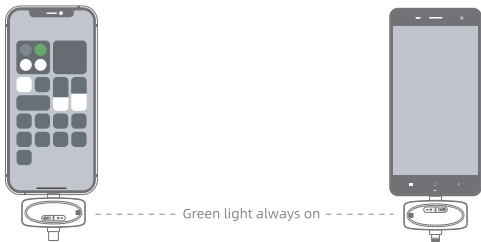


Special Note:

The using method of Number 8, If the mobile phone is in low battery during live streaming, The external power supply directly charges the phone through the Type-C port of the receiver.

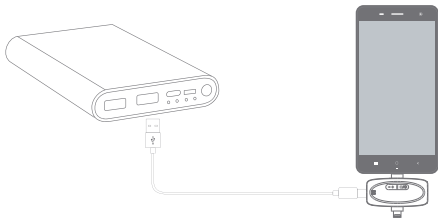


How to use 3.5 mm receiver

Step 1: Plug the receiver in the camera with the 3.5mmTRS adapter.

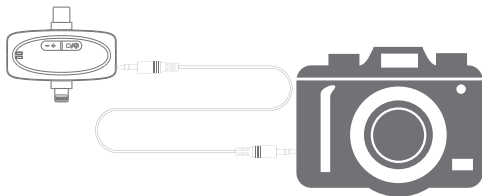

Step 2: Press the power button of mic and receiver, green light indicator flashes and then go solid when connected successfully.

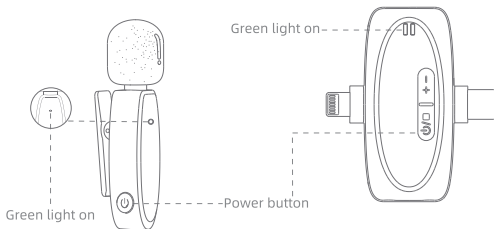

Step 3: Turn on the device, the microphone will work directly.

About UI

Microphone Transmitter

Function	Operations	Light effect
Power on	Single press the power button	Green light on
Power off	Press the power button for 3-4s /Auto power off with no connection for more than 10min	Green light off
Charging	Type-C cable charging	Red light on when charging, Red light off
Search for pairing	/	Green light flashed slowly
Paired	/	Green light always on
Low battery alarm	Battery<20%	Blue light flashes slowly
Mute	Single press	Blue light always on
Clear pairing	Press reset key quickly twice	Green light flashes quickly

Lightning/Type-C Receiver

Function	Operations	Light effect
Power on	Plug into the device	Green light flashes
Power off	Plug off the device	Light off
Searching for pairing	/	Green light flashes slowly
Paired	/	Green light on
Clear pairing	Triple press the power button quickly within 10s after power on	Green light flashes quickly
Monitor volume up and down, loop control	Single press volume "+" "-" key	Level 1: red light flashes once Level 2: red light flashes twice Level 3: Red light flashes three times

Noise reduction level, loop control	Double press volume "+ " " - " key	Level 1: Green light flashes once Level 2: Green light flashes twice Level 3: Green light flashes three times
<p>The volume level has a memory function, and the volume level of the last shutdown is defaulted when the power is turned on</p> <p>The noise reduction level has a memory function, and the default noise reduction level of the last shutdown</p>		

3.5mm Receiver

Function	Operations	Light effect
Power on	Single touch power button	Green Light Flashes
Power off	Press power button for 3s	Light off
Searching for pairing	/	Green light flashes slowly
Paired	/	Green light on
Low Power State	Battery in low power state	Red light flashes
Clear pairing	Triple press the power button quickly within 10s after power on	Green light flashes quickly
Monitor volume up and down, loop control	Single press volume "+ " " - " key	Level 1: red light flashes once Level 2: red light flashes twice Level 3: Red light flashes three times
Noise reduction level, loop control	Double press volume "+ " " - " key	Level 1: Green light flashes once Level 2: Green light flashes twice Level 3: Green light flashes three times
<p>The volume level has a memory function, and the volume level of the last shutdown is defaulted when the power is turned on</p> <p>The noise reduction level has a memory function, and the default noise reduction level of the last shutdown</p>		

NOTE: You can listen the video or recording only after the receiver is unplugged from the device.

Packing list

- (1) Microphone transmitter (Dual-Channel Version with 2 mics)
- (2) 3 -in-1 multi function receiver
- (3) Type-C charging cable
- (4) User Manual
- (5) 3.5mm adapter cable

Safety Warning

In order to avoid electric shock, high temperature, fire, radiation, explosion, mechanical hazards and improper use of the product may cause personal injury or property damage, please read carefully and comply with the following matters before using this product:

1. When using the product, please confirm that the connected equipment and the product power match and reasonable adjustment of the volume of the equipment do not exceed the product power and loud volume for a long time, so as not to cause abnormalities in the product
2. If abnormalities are found in use (such as smoke, odor, etc.), please immediately turn off the power switch and turn off the power plug and then send the product to the dealer for repair
3. This product and accessories should be placed in a dry and ventilated place indoors, do not store for a long time in a humid, dusty environment avoid near fire, rain, water, excessive collision, throwing, vibration of the machine and cover the ventilation hole to avoid damage to its function
4. The use of the product must comply with the relevant safety regulations, laws and regulations clearly prohibit the use of the occasion please do not use the product, so as not to cause accidents
5. Please do not disassemble and modify or repair the machine by yourself to prevent personal injury, if you have questions or service needs, please contact your local dealer to follow up.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at: **info@porodo.net**

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](#)**