

**PORODO**



**Porodo**

**Vacuseal MagSafe  
Magnetic Mount**

SKU: PD-HSM05

# Table of Contents

|                      |   |
|----------------------|---|
| Instructions for Use | 2 |
| Specifications       | 2 |
| Schematic View       | 2 |
| Important Note       | 3 |
| Disposal             | 3 |
| Warranty             | 4 |
| Contact Us           | 4 |


## Instructions for Use

- 1. Long-press the switch button for 1.5 seconds. The buzzer will emit one sound to indicate the device has started. To turn it off, long-press the switch button for 1.5 seconds again, and the buzzer will emit two sounds to signal shutdown.
- 2. Align the electronic device parallel to the vacuum suction cup head. Push the suction cup and let it rest for 1 second until the device is securely attached. You can then release your hand for operation. When the battery is low, the buzzer will continuously ring. Please charge the device promptly. During charging, the red light will flash slowly, and the green light will illuminate when fully charged.
- 3. As the product uses a strong N52 double magnet, the magnetic sheet must be adhered to the back of the phone case. This prevents the magnetic sheet from attaching to the outer surface of the phone case due to the strong magnet on the product.

## Specifications

|                      |                        |
|----------------------|------------------------|
| Battery Capacity     | 100mAh                 |
| Working Time         | Up to 15 days          |
| Charging Port        | Type-C                 |
| Absorption Capacity  | 3.5kg Max              |
| Magnet Type          | N52                    |
| Device Compatibility | 4.7" and above devices |

## Schematic View

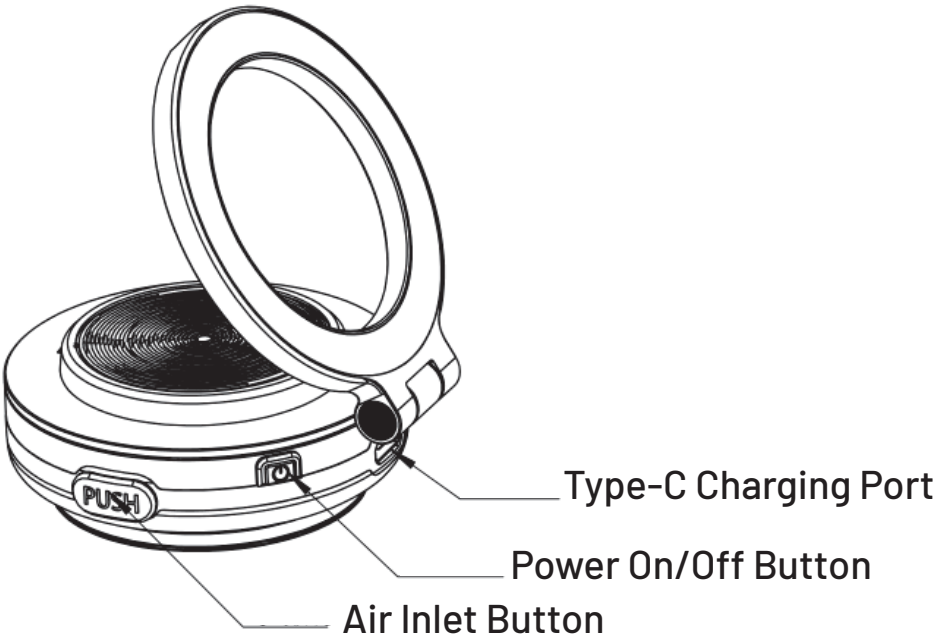

## Important Note

1. To maintain the cleanliness of the silicone product do not use the product in dusty areas to avoid exposure to dust particles.
2. Ensure that the power level is sufficient. Please charge it promptly to prevent weak adsorption, which can cause the product to detach and result in service failure.
3. If the product's suction is ineffective for more than a minute, ensure the suction cup is clean, free of foreign objects, and that the surface is smooth and clean.

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



## **Warranty**

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **[porodo.net/warranty](https://porodo.net/warranty)** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
**[porodo.net/warranty](https://porodo.net/warranty)**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:  
**[info@porodo.net](mailto:info@porodo.net)**

Website: **[porodo.net](https://porodo.net)**

Service Support: **[support@porodo.net](mailto:support@porodo.net)**

Instagram: **[porodo](https://www.instagram.com/porodo)**