

PORODO



Porodo

TIVORA AUDIO SMART SUNGLASSES

SKU: PDSGUVP120BK



Table of Contents

Product Overview	2
Preface	2
Specifications	2
Package Contents	3
Schematic View	3
Instructions for Use	4
Important Notes	5
Precautions	5
Safety Instructions	6
Warnings	6
Disposal	7
Warranty	8
Contact Us	8

Product Overview

The Tivora Audio Smart Sunglasses combine advanced audio technology with stylish design, offering an immersive listening experience with music playback and hands-free calling. Featuring UV400 lens protection, they ensure your eyes are shielded from harmful rays while providing stereo sound quality. The lightweight build and open-ear audio make them ideal for extended wear, and the 24-hour battery life allows for continuous use. With the ability to answer or reject calls with ease, these smart sunglasses are a perfect blend of convenience and functionality.

Preface

Thank you for choosing our products! We highly recommend reading this user manual carefully to ensure proper usage of the product.


Specifications

Input	5V/500mA
Battery Capacity	2 × 90mAh
Charging Method	Magnetic Charging
Recharge Time	1.5H
Working Time	4H
Bluetooth Version	5.2
Lens Type	UV400
Bluetooth Frequency Range	2.402GHz - 2.480GHz
Transmission Distance	10m
Speaker Size	15.3mm
Model Number	PDSGUVPI20BK

Package Contents

1. Glasses
2. Glasses Bag
3. Wiping Cloth
4. Charging Cable

Schematic View

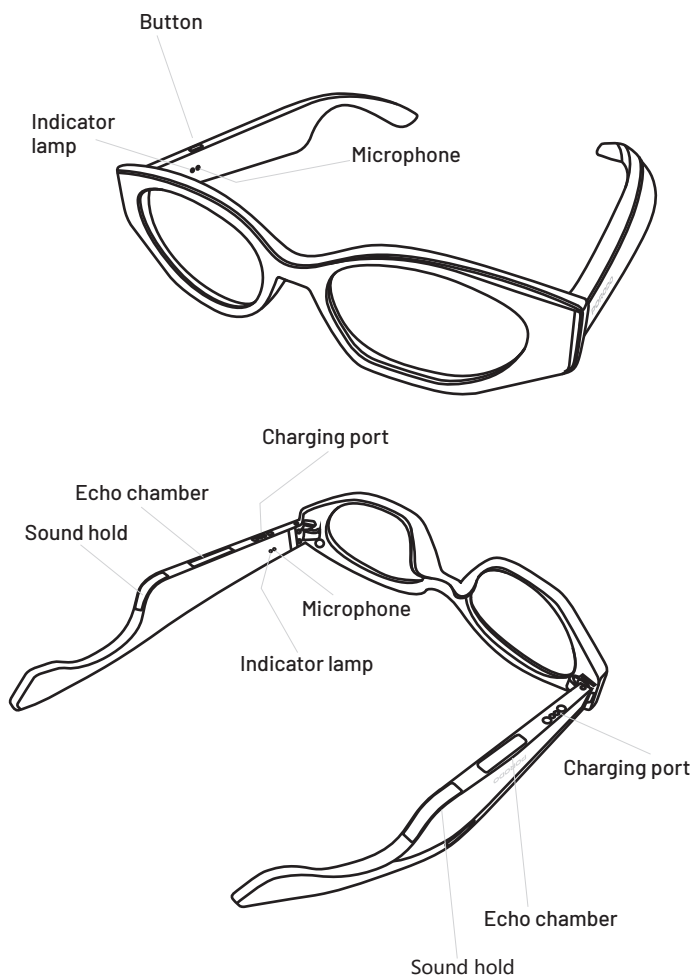

Instructions for Use

1. Power On/Off

a. Unplug the charger to automatically power on, then you will hear "Power on" and "Pairing".

b. Plug in the charger, Bluetooth glasses automatically power off. Alternatively, press the right handle of the glasses for 3 seconds when powered on, and you will hear "Power off".

2. Activate the Hall Effect Switch

2.1 Unfold the handles of the glasses and the earphones will power on automatically. You will hear "Power on".

2.2 The red LEDs on the left and right handle will flash. After connecting, only one side will flash red and you will hear "Pairing".

2.3 Close the handles of the glasses and the headphones will automatically power off.

3. Pairing and Connection Guide

a. When powered on, the left and right legs of the glasses will automatically pair, the red light flashes, and you will hear the prompt tone "Pairing".

b. Open the Bluetooth device to be connected (mobile phone, MP3 player, computer, etc.).

c. You can find the name of the device (PD-TIVORA) and click "Connect" to pair. Once connected, you will hear the tone "Connected".

Note: If this is the first pairing attempt, pairing mode will be automatically entered. If a previous connection exists, the last paired device will be automatically reconnected.

4. Play Music: Press the button located on the right handle of the glasses to play or pause the music.

5. Voice Assistant: Double-press the button on the right handle of the glasses to activate the voice assistant.

6. Making a Phone Call

a. Answer an incoming call by pressing the button once.

b. To end the call, press the button once.

c. To reject the call, press and hold the button for 1.5 seconds.

7. Charging

- a.** Low Battery Alert: The "Battery Low" tone will sound every five minutes.
- b.** If powered off due to low battery, you will hear "Power off".
- c.** When charging, the indicator light is red; after charging is complete, the red light will turn off.

Important Notes

- 1.** Kindly read the instructions thoroughly before using the product and retain them for future reference.
- 2.** For optimal performance, ensure the product is fully charged before its first use.
- 3.** If the product has not been charged for an extended period (over two weeks), please charge it prior to use.
- 4.** Do not wipe the lens directly if it is dirty. Instead, moisten the lens first, then gently dry it with a microfiber cloth. It is recommended to use a soft, highly absorbent microfiber cloth for cleaning, taking care not to apply excessive pressure. When cleaning, wipe in a consistent direction rather than using circular or back-and-forth motions.
- 5.** The product will cease functioning if the battery temperature exceeds the range of -10°C to 50°C.

Precautions

- 1.** Do not remove or repair the product for any reason, as it may cause fire, electronic breakdown, or even complete damage to the product.
- 2.** Do not expose the device to environments with temperatures that are too low (below -10°C) or too high (above 50°C).
- 3.** Do not wet or soak the product in liquid.
- 4.** Avoid placing the glasses in direct sunlight for prolonged periods, as this can lead to deformation, aging, or breakage.
- 5.** Keep the magnetic end of the charging cable away from metal objects to prevent short circuits caused by magnetic attraction.

Safety Instructions

- a.** Use of power supplies, chargers, or batteries not approved by the manufacturer may cause fire, explosion, or other hazards.
- b.** Please use accessories approved by the manufacturer and compatible with this type of device.
- c.** The device uses a built-in battery that cannot be removed. Do not replace the battery to avoid damage to the battery or the device.
- d.** If charging is complete, disconnect the charger from the device and unplug it from the power socket. The continuous charging time should not exceed 12 hours.
- e.** Do not remove, bump, squeeze, or throw the battery into the fire. If the battery is severely expanded, do not use it.
- f.** To avoid hearing damage, do not use a high volume for a long time.

Warnings

Please comply with relevant laws and regulations, and do not use the product in the following environments:

- 1.** Do not use the product in places where flammable and explosive gasoline or chemicals are stored, such as gas stations, oil depots, and chemical warehouses.
- 2.** Do not use the device in hospital operating rooms, emergency rooms, intensive treatment departments, or other places. To avoid interfering with the operation of medical devices, keep the device away from medical devices such as pacemakers, hearing aids, and cochlear implants. Keep a distance of more than 15 cm between the device and the pacemaker.
- 3.** To use this product near personal medical devices, consult your physician and device manufacturer.
- 4.** Please follow all safety warnings and regulations regarding the use of this product while driving.
- 5.** To avoid lightning strikes, do not use it outdoors during thunderstorms.
- 6.** Do not use the charger in the bathroom or other places with high humidity.

Otherwise, electric shock, personal injury, fire, and charger damage may occur.

7. Please comply with the relevant laws and regulations that explicitly prohibit use in any environment.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://www.porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **<https://www.porodo.net/>**

Service Support: **support@porodo.net**

Instagram: **porodo**