

LèPRESSO



LePresso

**Brewfinity Tea and Coffee Brewer
with Digital Display**

SKU: LPCFFTCB0040

Table of Contents

Safety Precautions	2
Product Overview	3
Specifications	4
Control Panel Display	4
Function Description	5
Instructions for Use	7
Cleaning and Maintenance	9
Troubleshooting	10
Error Guide	11
Environmental Protection Statement	12
Disposal	13
Warranty	14
Contact Us	14


Safety Instructions

- 1.** Before using the product, please read this manual thoroughly.
- 2.** Ensure the power supply matches the product's specifications. The power socket should be properly grounded and not shared with other high-power appliances.
- 3.** Only use the provided base for operation.
- 4.** This product is intended for indoor use only.
- 5.** Place the product on a flat, stable surface during operation. Avoid placing it near high-temperature items to prevent damage.
- 6.** Avoid overfilling with water. If the product is too full, boiling water may spill.
- 7.** Ensure the water level is above the minimum mark to prevent dry burning and extend the product's life.
- 8.** Always keep the lid properly closed while the product is operating to prevent burns.
- 9.** Be mindful of the surface temperature of the pot. Avoid direct contact with any part of your body to prevent burns.
- 10.** Keep the product out of reach of children or individuals with intellectual disabilities to prevent accidents.
- 11.** Never leave the product unattended while in operation. Unplug it when not in use for long periods. Do not approach steam escaping from the spout to avoid burns.
- 12.** Never operate the product without water to prevent dry burning, which may shorten the heating element's life or cause damage.
- 13.** If you notice any cracks, abnormalities, or malfunctions in the glass pot or handle, stop using the product immediately and unplug it.
- 14.** If the power cord is damaged, it must be replaced by a professional

to avoid electrical hazards.

15. Any repairs or part replacements should be carried out by professionals from the manufacturer, or by authorized service departments.


Product Overview

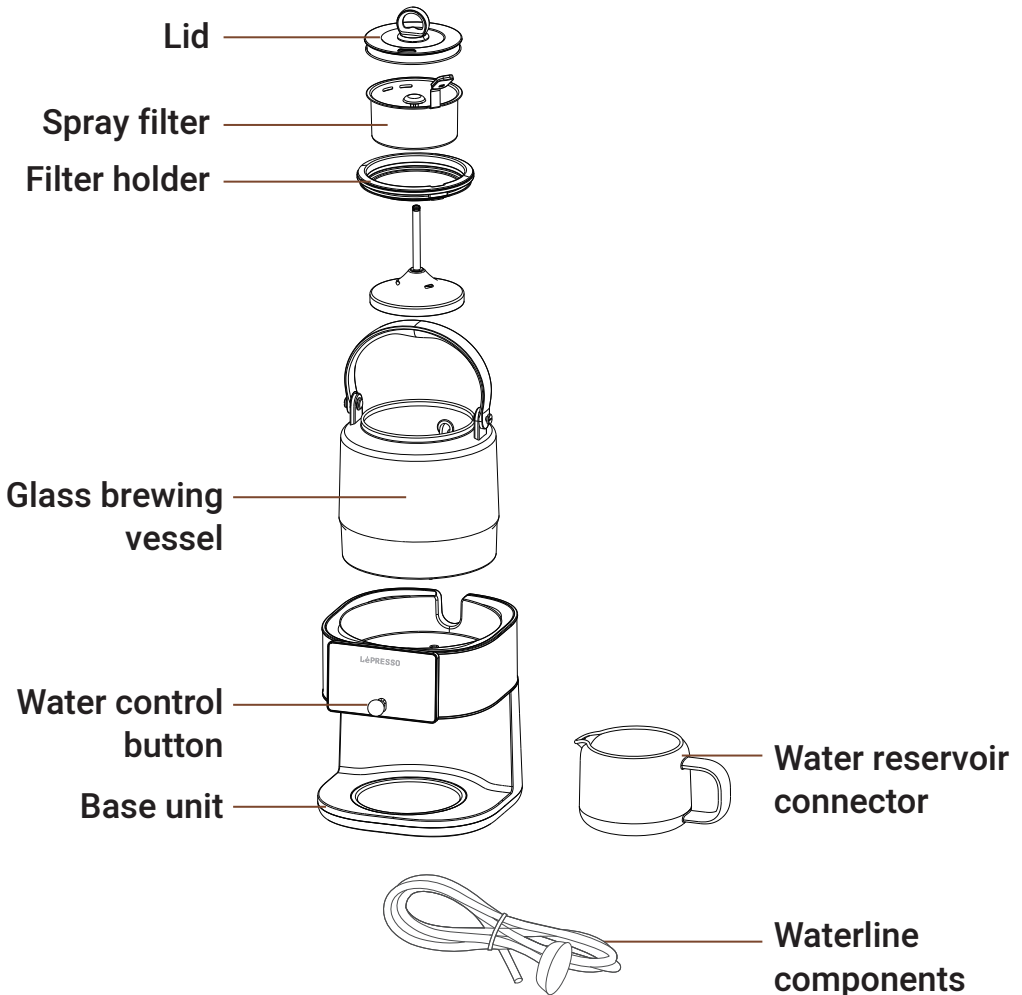

Specifications

Rated Voltage	220V~
Rated Power	1000W
Frequency	50Hz
Kettle Capacity	1000ml
Keep Warm Time	Approx. 30 Minutes
Plug Type	3-Pin UK
Weight	3.22KG
Dimension	244x301x402mm
Standard	GB4706.1-2005, GB4706.19-2008

Control Panel Display

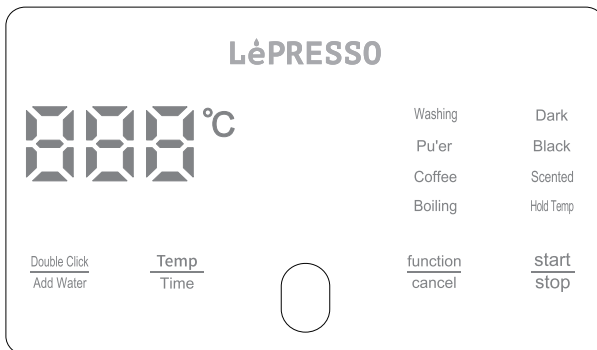

Function Description

Power On/Off Button: To power on the product, simply press the power button. In standby mode or while the product is working, press the button again to turn it on or off as needed.

Function/Cancel Button: In standby mode, press the "Function/Cancel" button to enter the function selection mode. After selecting a function, the product will start the corresponding program, and the display will show the water temperature.

Temperature/Time Button: In standby mode, press the "Temperature/Time" button repeatedly to cycle through insulation temperature options. Once you select a function, press the "Time/Temperature" button to adjust the working time. If the insulation function is selected, this button will let you adjust the insulation temperature.

Double-Click to Add Water: In standby mode, double-click the "Double Click to Add Water" button, then click it again to start adding water. Water is added in cycles of 20 to 40 seconds. If you want to stop adding water, simply click the button again.

Tea Washing: In standby mode, press the "Cancel Function" button and select the "Tea Washing" option. The machine will automatically start the washing cycle and finish the task.

Black Tea: In standby mode, press the "Function/Cancel" button, then select the "Black Tea" option. The machine will heat the water to boiling, then switch to low heat for 3 minutes (adjustable with the

time/temperature button for 2-10 minutes). Once finished, it will automatically switch to a warming mode for 6 hours.

Pu Erh Tea: In standby mode, press the "Function/Cancel" button, then select the "Pu Erh" option. The machine will heat the water to boiling, then switch to low heat for 2 minutes (adjustable with the time/temperature button for 2-5 minutes). After the cycle ends, it will automatically switch to warming mode for 6 hours.

Alternative Black Tea: In standby mode, press the "Function/Cancel" button and select the "Black Tea" option. The machine will heat the water to boiling, then switch to low heat for 2 minutes (adjustable with the time/temperature button for 1-5 minutes). After the cycle finishes, it will automatically switch to warming mode for 6 hours.

Coffee: In standby mode, press the "Function/Cancel" button, then select the "Coffee" option. The machine will heat the water to boiling, then switch to low heat for 5 minutes (adjustable with the time/temperature button for 1-10 minutes). Afterward, it will automatically switch to warming mode for 6 hours.

Flower Tea: In standby mode, press the "Function/Cancel" button, then select the "Flower Tea" option. The machine will heat the water to boiling, then switch to low heat for 5 minutes (adjustable with the time/temperature button for 10-3 minutes). Once finished, it will automatically switch to warming mode for 6 hours.


Boiling Water: In standby mode, press the "Function/Cancel" button and select the "Boiling Water" function. The product will heat the water to boiling, then automatically switch to insulation for 6 hours.

Insulation: In standby mode, press the "Function/Cancel" button, select the "Insulation" function, and then press the "Temperature/Time" button. You can choose different insulation temperatures ranging from 40°C to 90°C (with 5°C intervals). The default insulation temperature is 60°C, and the insulation time is set to 6 hours.

Note: In working mode, if the product detects water in the pot, it will automatically add water and continue the process. If there is no water detected in the pot, it will stop.

High Altitude Recognition: When powered on, press and hold the "Power On/Off" button for 10 seconds. The buzzer will sound once, and the product will adjust to high altitude conditions, memorizing the boiling point at full power. After the adjustment, the device will automatically turn off.

Instructions for Use

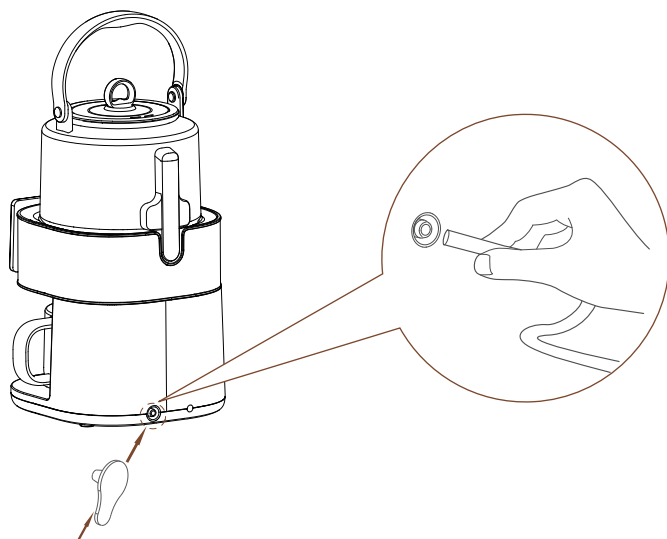

1. Please remove the silicone plug from the water inlet before use, and do not discard it.
2. Before the first use, fill the product with water up to the maximum level and boil it. Repeat this 2-1 times to disinfect the product. Do not drink the water after boiling.
3. Following the instructions in the diagram, attach the water pipe to the inlet of the kettle. Connect the other end to the water supply. Ensure the water pipe is securely in place to avoid any leakage at the connection.
4. The liquid level of the connected water supply should be lower than that of the product. Please use purified or filtered water to avoid damage to the product.
5. Place the kettle on the base and connect the base to the power supply.
6. Press the "Power On/Off" button, then press the "Function/Cancel" button. Select the desired function and enter the corresponding mode to begin operation.

Note: Do not lift the kettle during the water filling process. If the water level is too low, the display will show "-0-", indicating a lack of water in the pot. Please stop the process and add more water.

Reminder:

1. Before use, confirm that all accessories are properly installed. This ensures normal operation.
2. When filling water, always hold the lid with your hand or securely grip it to prevent it from slipping. Avoid directly touching the lid when pouring water, especially when the machine tilts.

Cleaning and Maintenance

- 1.** Before cleaning or performing maintenance, unplug the power cord from the power base and wait for the machine to cool down completely.
- 2.** Use a soft, damp cloth with a small amount of cleaning solution to wipe oil stains from both the inside and outside of the appliance. Finish by wiping the surface with a dry cloth. The tea filter components can be cleaned with a soft brush.
- 3.** Do not immerse the equipment in water during cleaning. Due to the quality of the water, the machine naturally produces calcium carbonate (scale) during the heating process, which accumulates on the surface of the pot cavity. Therefore, regular descaling is recommended.
- 4. Descaling Process:**
 - 4.1** To descale, follow these steps:
 - 4.2** Pour water and edible acetic acid (preferably white vinegar) in a ratio of 2:1 into the pot.
 - 4.3** Heat the solution in the pot. After boiling, turn off the power and let it sit overnight.
 - 4.4** The next day, pour out the solution and rinse the pot thoroughly with clean water.
 - 4.5** For better results, you can also use a specialized tea stain remover (please follow the product instructions for use).
- 5.** Always handle the machine carefully to avoid damage from impacts.
- 6.** If the machine is not going to be used for a long period, it should be cleaned and stored in a well-ventilated, dry environment.

Troubleshooting

If you believe the product is malfunctioning, please refer to the following troubleshooting guide for confirmation before sending it to a service center for repair.

Problem	Possible Cause	Solution
The indicator light is not on.	The power plug is not properly inserted.	Ensure the power plug is properly inserted.
	The light wire is faulty.	Contact Amazon customer service for assistance if the light wire is faulty.
The product is not heating.	The thermostat is faulty.	If the thermostat is faulty, contact Amazon customer service for assistance.
	The heating element is faulty.	If the heating element is faulty, contact Amazon customer service for assistance.
	The machine is malfunctioning.	If the machine is malfunctioning, contact Amazon customer service for assistance.
The product is not refilling water.	The temperature sensor inside the kettle is dirty.	Install the water pipe according to the instructions.
	The water pipe is not installed properly.	Add water to the storage container.
	The water storage container is empty.	Clean the temperature sensor inside the kettle.
The water is heating slowly.	There is severe scale buildup at the bottom of the kettle.	Clean the scale buildup at the bottom of the kettle using the descaling steps provided.
	The machine is malfunctioning.	If the issue persists, contact Amazon customer service for further assistance.

Error Guide

Screen Error	Possible Cause	Solutions
E8	There is no water in the bucket, the water pipe is not inserted, or the water pipe is bent, preventing the ability to draw water; this triggers water pump refill protection.	Disconnect the power supply, wait for a few moments, and then reconnect it. This should resolve the issue. If the problem persists, contact customer service for assistance.
E1	The kettle is lifted, improperly placed, or the temperature sensor is disconnected.	Ensure the kettle is placed properly and that the temperature sensor is securely connected.
E2	The sensor has triggered short-circuit protection.	If the sensor has triggered short-circuit protection, contact customer service for assistance.
E3	The sensor has triggered over-temperature protection.	If the sensor has triggered over-temperature protection, contact customer service for assistance.
E4	No water has been detected.	Ensure that there is enough water in the pot. If the issue persists, contact customer service for further assistance.

Environmental Protection Statement

The names and contents of toxic and harmful substances or elements in the product.

Component	Toxic Material					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Plastic	○	○	○	○	○	○
Power Line	×	○	○	○	○	○
Heating Plate Component	×	○	×	○	○	○
Metal Work	○	○	○	○	○	○
Glass Components	○	○	○	○	○	○
Sealing	○	○	○	○	○	○

This table is prepared in accordance with the provisions of SJ/T 11364.

O: The content of the toxic and harmful substance in all homogeneous materials of the component is below the limit requirements specified in GB/T 26572.

X: Indicates that the content of the toxic and harmful substance in at least one homogeneous material of the component exceeds the limit requirements specified in GB/T 26572.

Depending on the product model, the product you purchased may

not contain all of the above components.

Note: The presence of toxic and harmful substances in some of the components marked with "X" above is due to the limitations of current industry technology, and substitution or reduction cannot be achieved temporarily.



The "environmental protection use period" of this product is 10 years, and the pollution control label is shown in the pattern on the left. The "environmental protection use period" is only valid when the product is used under normal conditions as described in the instructions.

This product meets the requirements of the Management Measures for the Restriction of Hazardous Substances in Electrical and Electronic Products. During the environmentally friendly usage period, consumers can use it with confidence as there will be no harmful substance leakage, precipitation, or other health issues that may affect their health during normal use.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website <https://www.lepresso.com/warranty> and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

<https://www.lepresso.com/warranty>

Contact Us

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: info@lepresso.com

Website: <https://www.lepresso.com/>

Instagram: [lepresso_official](#)